

Ardwick Ottoman Tv Bed Frame- 4FT6, 5FT, 6FT



Assembly Instructions

Important before assembly:

Read these instructions carefully before assembling or using the product.

Please check the contents of the boxes before attempting to assemble this product. The instructions will have a checklist of parts and fittings.

Assemble the product as close to its intended final location/room as possible.

Health & Safety:

This product or some parts of this product will be heavy. Please use an assistant when lifting.

Please keep small parts out of reach of children.

Always use on a level, even surface.




DO NOT jump on the product or any of its parts.

DO NOT use this product if any parts are missing, damaged or worn.



DO NOT use this product unless all fixings are secured.

Further instructions are on the following pages.


Please keep these instructions for future reference.

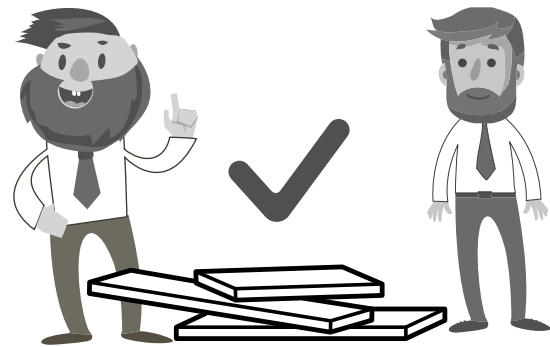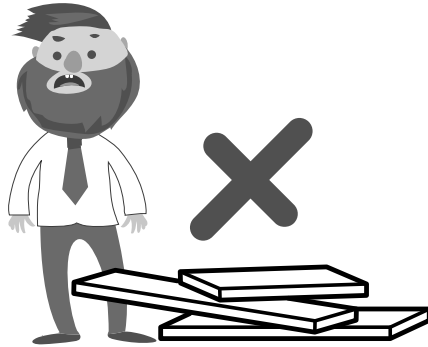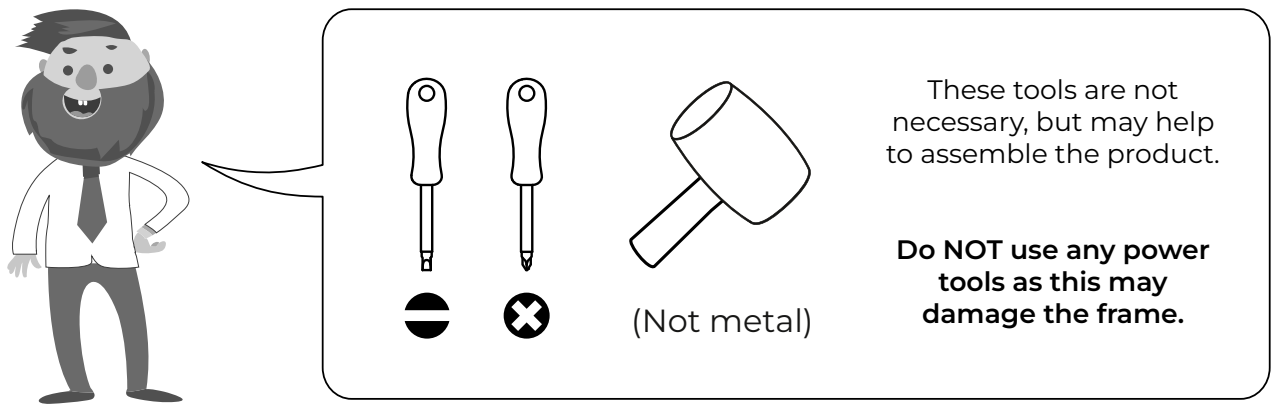

This product or some parts of this product will be heavy. Please use an assistant when lifting.

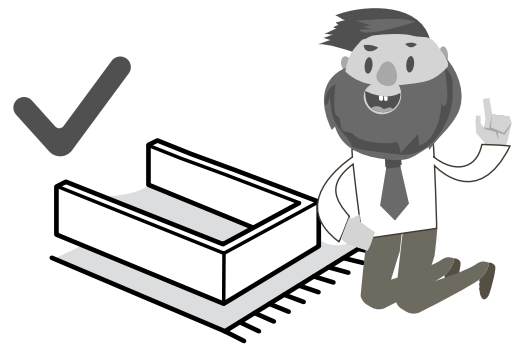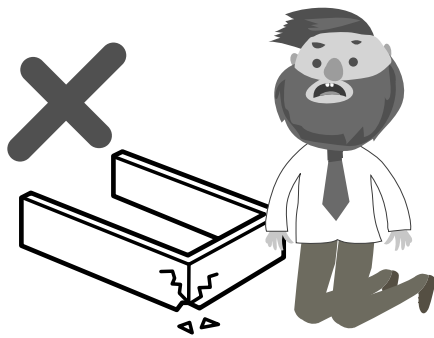

Never drag or push the pieces across a hard or stone floor as this will cause damage to the joints. Use a carpet or a rug for extra care.

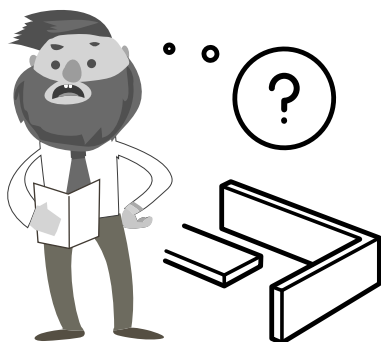


If you have problems assembling or have damaged or missing pieces, please contact our customer services (details at the back of these instructions)

ARDWICK OTTOMAN TV BED

ASSEMBLY INSTRUCTIONS


please keep these instructions for future reference.

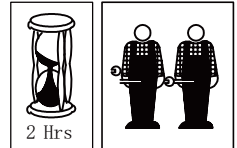


If Media Tray is wanted
on left side, fit side rail (3)
to left and (4) to right.

If Media Tray is wanted on
right side, fit side rail (3) to
right and (4) to left.

Double & King

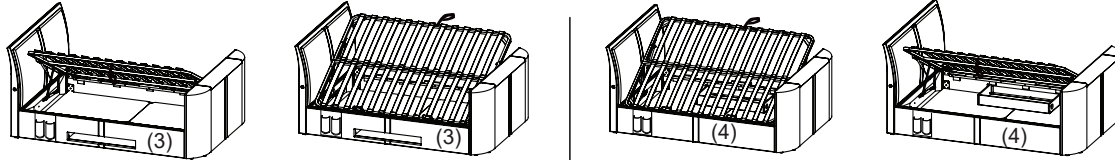

Super-King

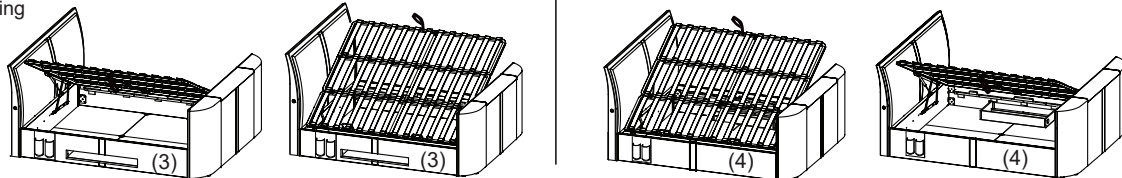

Important Information

- We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
- Carefully check that you have all the parts before beginning assembly.
- Keep fittings out of children's reach and keep children well away from construction area.


SOUND SYSTEM CONTROL



An instructional video of the Operation of the Ottoman Lift Up system is available via YouTube using the following address: https://youtu.be/hyq4zm7h_yU


To turn system on, press this On/Off button for 3 seconds.

At end of watching TV, lower the TV to it's resting position and TV will switch off automatically. Music can still be heard so to switch system off, press On/Off again for 3 seconds.

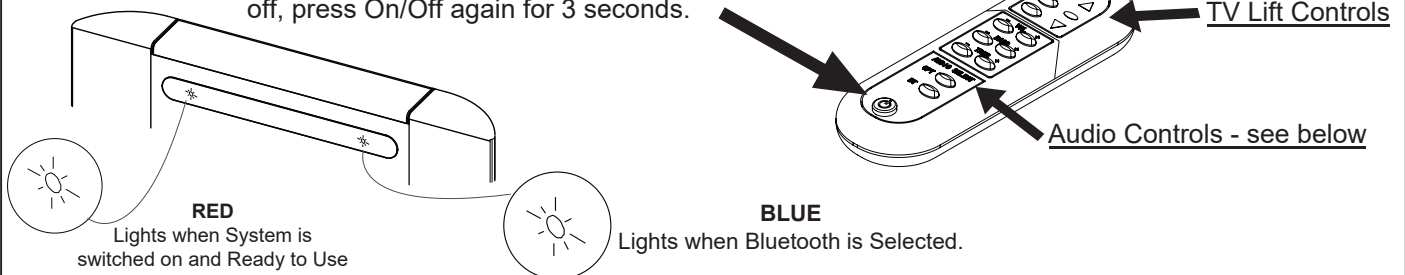


MODULE EACH SIDE OF HEADBOARD

HEADPHONE SOCKET
PLUG A 3.5mm HEAD-PHONE
JACK PLUG INTO THIS SOCKET
AND SOUND FROM MAIN
SPEAKERS IS CUT OFF

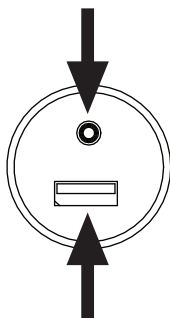

USB CHARGING SOCKET
PLUG A STANDARD USB INTO THIS
SOCKET TO CHARGE ANY DEVICE
5V 2.1A
NOTE THIS USB IS FOR CHARGING
ONLY, CANNOT PLAY MUSIC OR
VIDEOS THROUGH THE SYSTEM.

ADJUST VOLUME

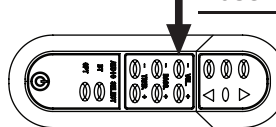


PRESS BUTTON ON REMOTE CONTROL (RC) IN EITHER MODE.

- SELECT BT; PLEASE RAISE VOLUME ON DEVICE TO HIGH LEVEL THEN ADJUST RC.
- SELECT OPTICAL; PLEASE MUTE TV SPEAKERS FOR BEST RESULTS.


ONE MAY OCCASIONALLY NEED TO ADJUST TV SETTINGS FOR EXTERNAL SPEAKERS, THIS DEPENDS ON THE MAKE OF TV, PLEASE CHECK THE TV USER GUIDE.

 ADJUST BASS - THIS BUTTON LIMITS LOWER FREQUENCIES OF THE SOUND




ADJUST BASS ATTENUATION TO SUIT THE SOUND EFFECT YOU LIKE

 ADJUST TREBLE - THIS BUTTON LIMITS HIGH FREQUENCIES OF THE SOUND




ADJUST TREBLE ATTENUATION TO SUIT THE SOUND EFFECT YOU LIKE.
NOTE IF YOU REDUCE LEVEL OF THE HIGHER FREQUENCIES, SOUND
VOLUME IS REDUCED - THIS IS NORMAL.

 SELECT BT (BLUETOOTH) - DEVICE INPUT - TO PAIR LOOK FOR "BT SPEAKER"



NOTE THAT IF TV IS IN THE UP POSITION AND SWITCHED ON, TV PICTURE IS STILL
SHOWING, IT IS NOT SWITCHED OFF WHEN BLUETOOTH IS SELECTED TO REMOVE,
TURN OFF TV OR PRESS THE RC DOWN BUTTON TO LOWER TV TO REST POSITION
WHERE TV POWER IS DISCONNECTED AUTOMATICALLY - MUSIC CAN STILL PLAY.

 SELECT OPT (OPTICAL) SOUND OUTPUT TO TV




WHEN FINISHED WATCHING TV, PRESS RC DOWN BUTTON TO SEND TV
BACK DOWN TO REST POSITION, TV SWITCHES OFF AUTOMATICALLY.

PRESS ON/OFF FOR THREE SECONDS TO SWITCH WHOLE SYSTEM OFF.

CARTON 1 - HEADBOARD


(1) Headboard

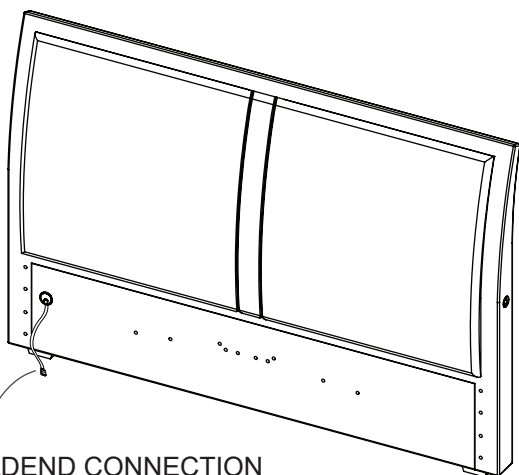

HEADEND CONNECTION
FOR USB - CABLE (P)

CARTON 2 - FOOTBOARD

(2) Footboard

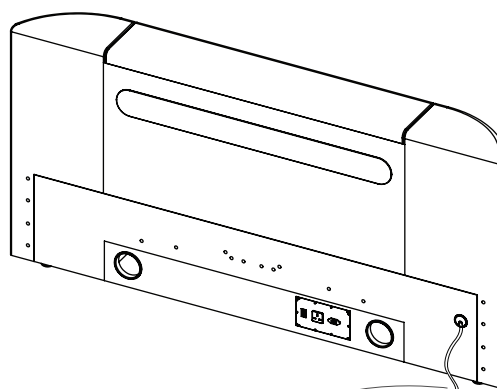


FOOTEND CONNECTION
FOR USB - CABLE (P)

The following items are in an accessory box, inside the TV Compartment within the Footboard

Hardware Pack for Bed Assembly

 A x16



Bolts (M8x30mm) for
fitting side rails (3&4) to
headboard & footboard (1&2)

B x16



 
Spring Washers (for M8 bolts)

C x16



Flat Washers (for M8 bolts)


D x1



Allen Key (5mm for M8 bolt)

Hardware Pack for Media Tray Assembly

 A x4




Bolts (M8x30mm) for fitting
Media Tray to side rail (3)

C x4



Flat Washers (for M8 bolts)

 E x11



Screws (5x50mm) for
assembling Media Tray panels

F x11



 
Plastic Barrel Nuts for
assembling Media Tray panels

Hardware Pack for TV Installation


a x2

Screw-Washer sets
(M8x25mm).


Use 5mm Allen Key (D)




Counter-Sunk Screws
(M6x12mm)

 

Counter-Sunk Screws
(M4x12mm)

 

b x1

 


Allen Key (4mm)



Allen Key (2.5mm)


Cables & Accessories for TV Installation

 G x1




Power Lead - 3 metre

 H x2




HDMI Leads - 2.8 metre

 J x1



Aerial Lead - 4 metre

 K x3




Cable Clips

L x3




Cable Ties

 M x1




HDMI 90° adaptor

N x1

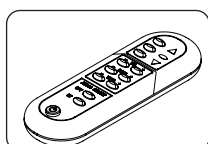










Remote Control
TV Lift_Audio

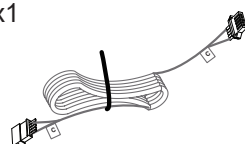P x1




Connection Cable
USB/Headphone Module

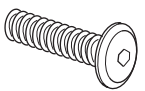HARDWARE PACK FOR ASSEMBLY OF OTTOMAN SLAT FRAME - INSIDE PACK 4

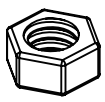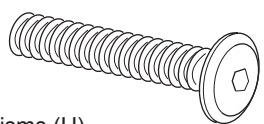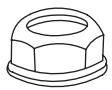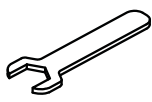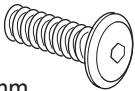
A x8  Fitting gas-lift mechanisms U(a) & U(b) to Headboard & Footboard (1&2)	B x22  Spring Washers (for M8 bolts)	C DOUBLE & KING x32 SUPER KING x34  Flat Washers (for M8 bolts)	Q x6  Nuts (for M8 slat frame bolts)
R x14  Bolts (M8x45mm) for fitting metal slat frame (9 or 10) to gas-lift mechanisms (U). Fitting metal slat frame support bar (15 & 16) to side rail (3&4)	S x2  Flange Lock-Nuts (M8) for gas-lift pistons	T x1  Spanner (for M8 nuts)	
V DOUBLE & KING x4 SUPER KING x6  Bolts M8x20mm	W x2  Metal Connection Plates		

CARTON 3 - SIDE RAILS


(3) Side Rail - With Media Tray x 1

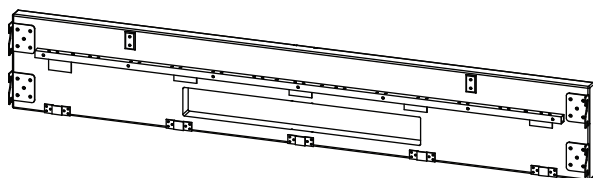

(4) Side Rail - Without Media Tray x 1

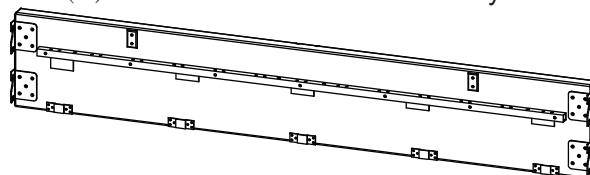

X x1

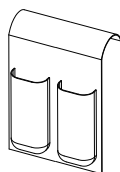

Holster for remote controls


Y x1




Hand Strap

CARTON 4 - OTTOMAN SLAT FRAME & MEDIA TRAY

 
(5) Media Tray Base Panel x 1




 
(6) Media Tray Back Panel x 1



 
(7) Media Tray Side Panel - L x 1



 (8) Media Tray Side Panel - R x 1

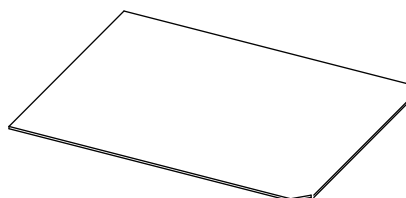


(11) Storage Base Boards x4

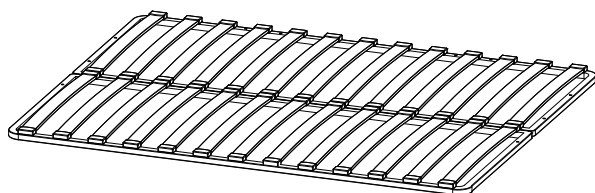

(9) Double Metal Slat Frame for Double or King Size x1

OR

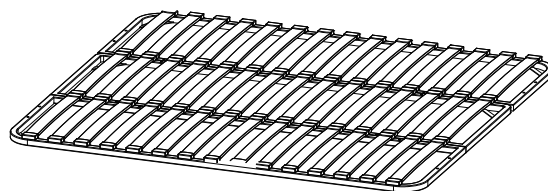

(10) Triple Metal Slat Frame for Super-King Size x1


(13) Mattress Stoppers x2




(15) Metal Slat Frame Support Bars - End x4



(12) Storage Base Board Wooden Support Rails x5

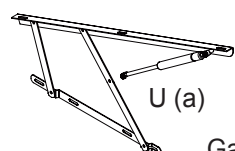

U x1

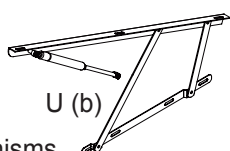

Gas-Lift Mechanisms

(14) Cross Bar for Super-King Size only x1



(16) Metal Slat Frame Support Bars - Centre x2




Step 1a

CHOOSE WHICH SIDE YOU WANT TO LIFT UP

OPEN FROM LEFT

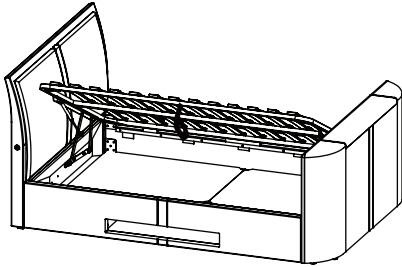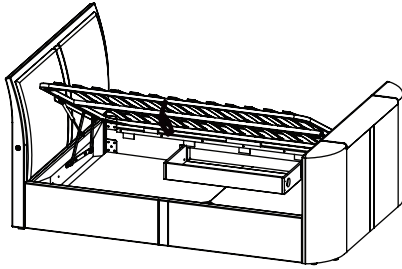


U(a)

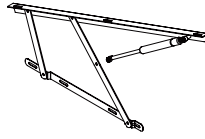

x1


U(b)

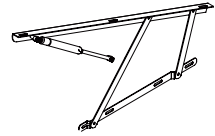


x1

CHECK THIS DIAGRAM AND IF ACCESS IS NEEDED FROM LEFT SIDE OF BED, FIT BOTH LIFT MECHANISMS TO RIGHT SIDE OF THE BED. BOLT INTO THE HOLES MARKED (R) WITH BLUE LABELS.

THE MECHANISMS ARE LABELED U(a) & U(b) PLEASE CAREFULLY FOLLOW THE DIAGRAM BELOW.

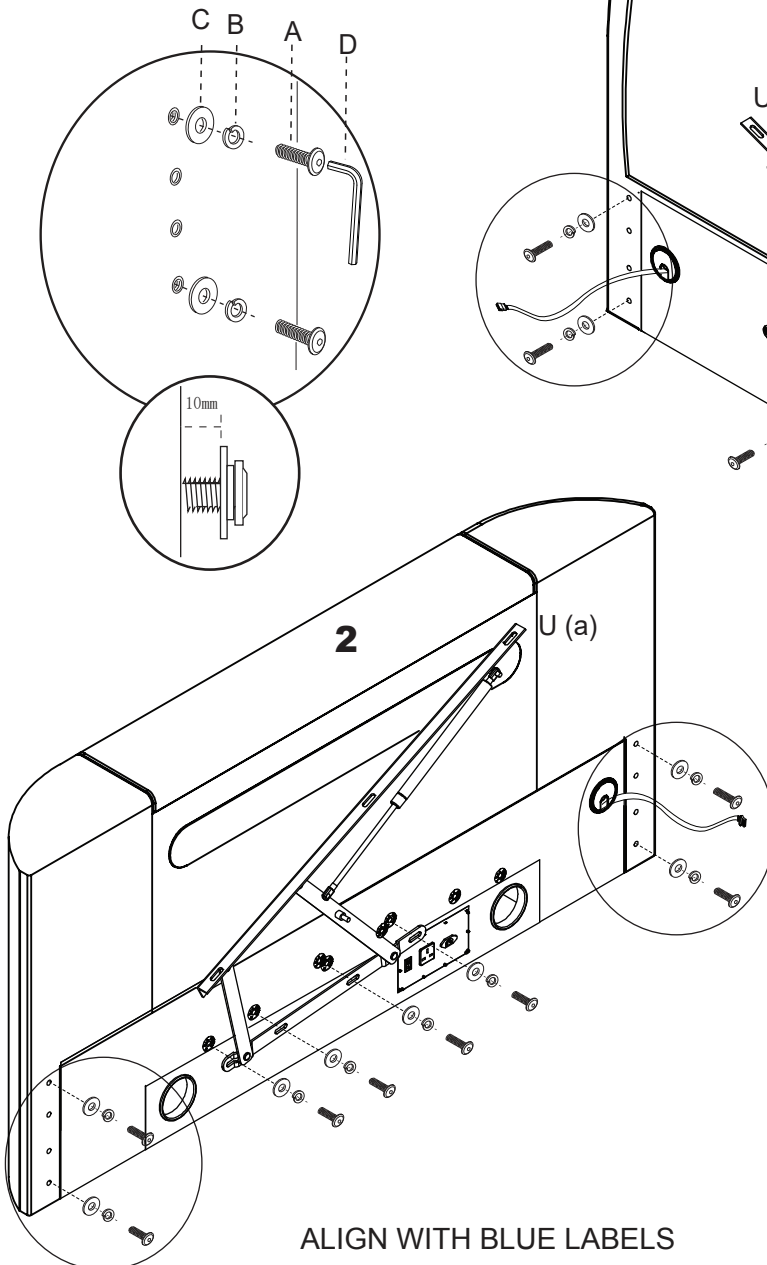


ALIGN WITH BLUE LABELS

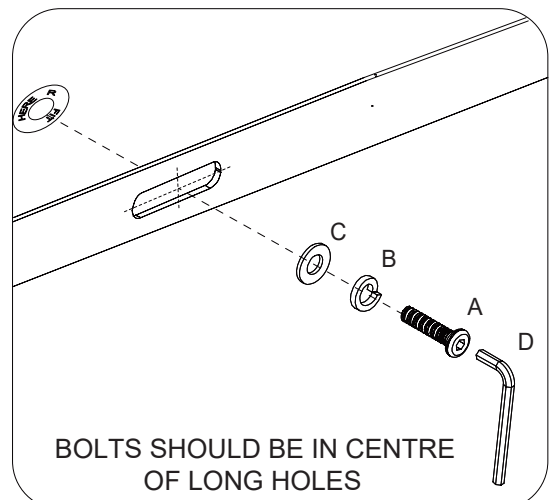


BOLTS SHOULD BE IN CENTRE OF LONG HOLES

 
Step 1b



OPEN FROM RIGHT

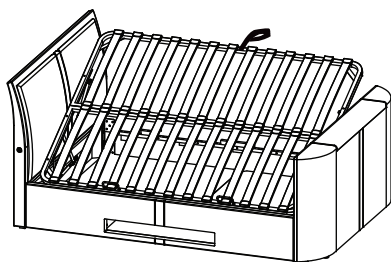

U (a)

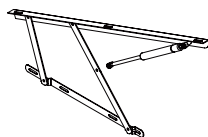


x1

U (b)






x1


CHECK THIS DIAGRAM AND IF ACCESS IS NEEDED FROM RIGHT SIDE OF BED, FIT BOTH LIFT MECHANISMS TO LEFT SIDE OF THE BED. BOLT INTO THE HOLES MARKED (L) WITH RED LABELS.

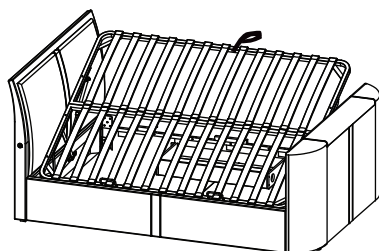

THE MECHANISMS ARE LABELED U(a) & U(b) PLEASE CAREFULLY FOLLOW THE DIAGRAM BELOW.

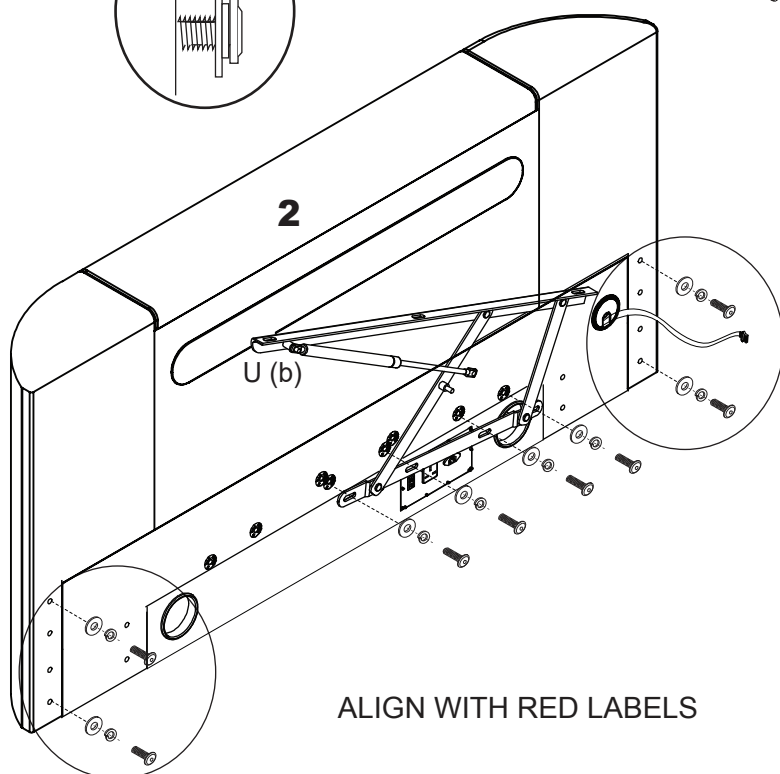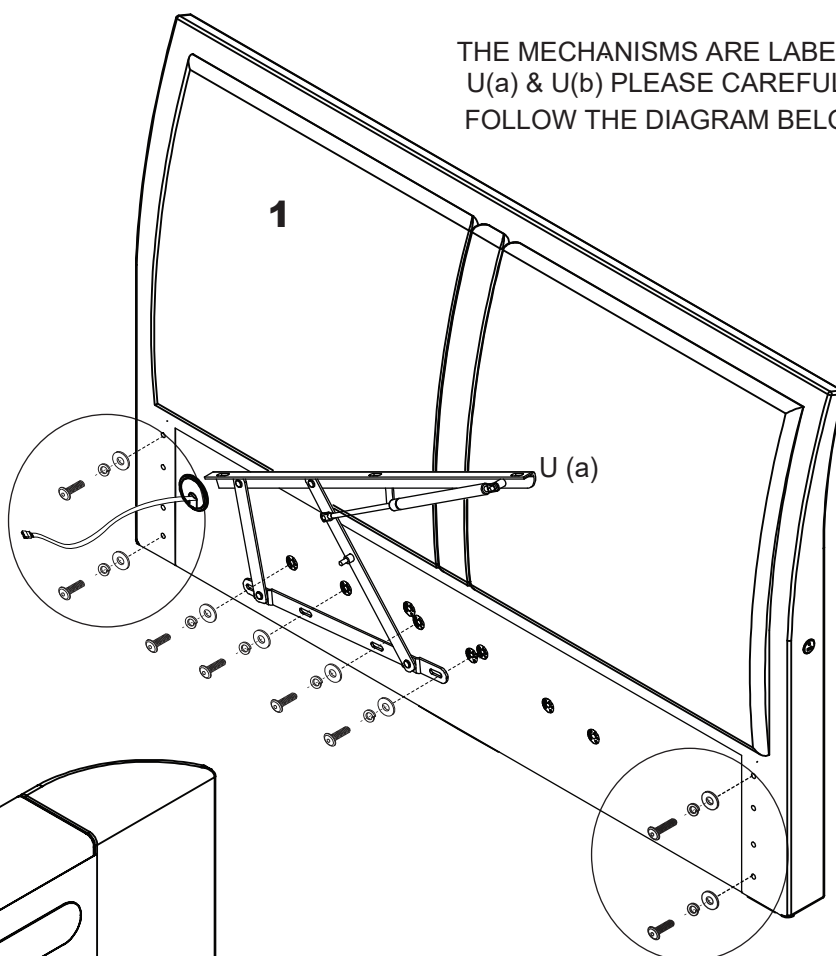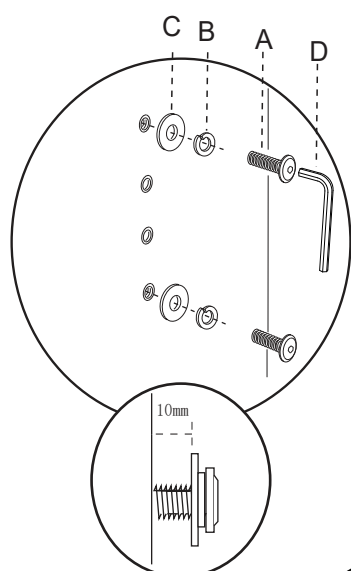


ALIGN WITH RED LABELS

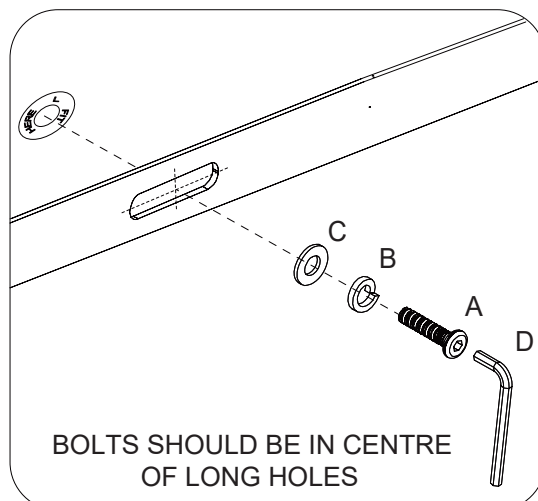


BOLTS SHOULD BE IN CENTRE OF LONG HOLES

Step 2

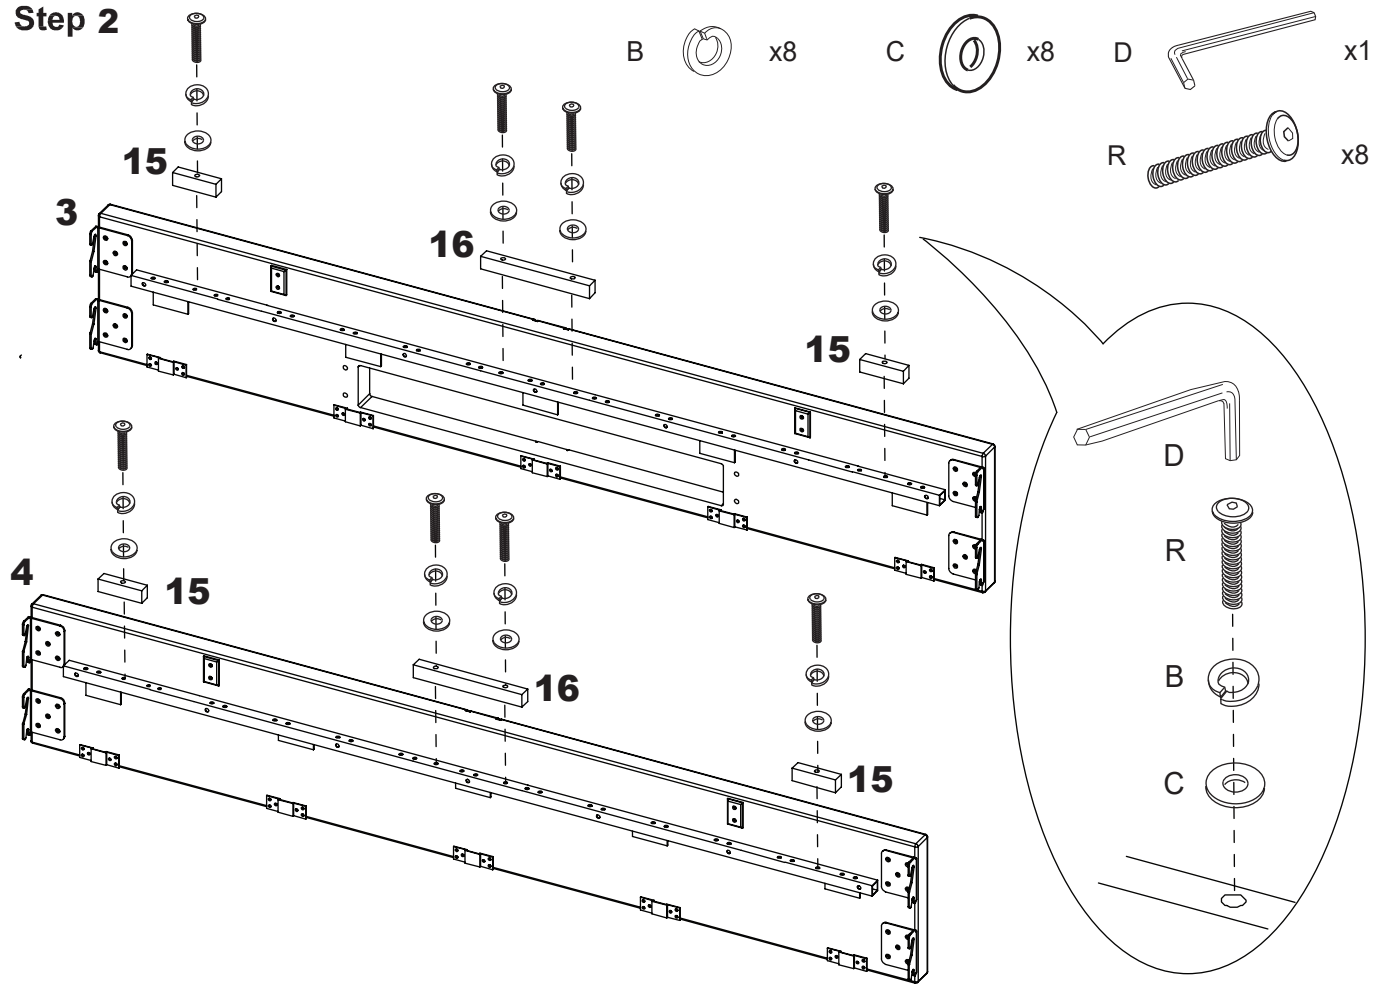

Step 3



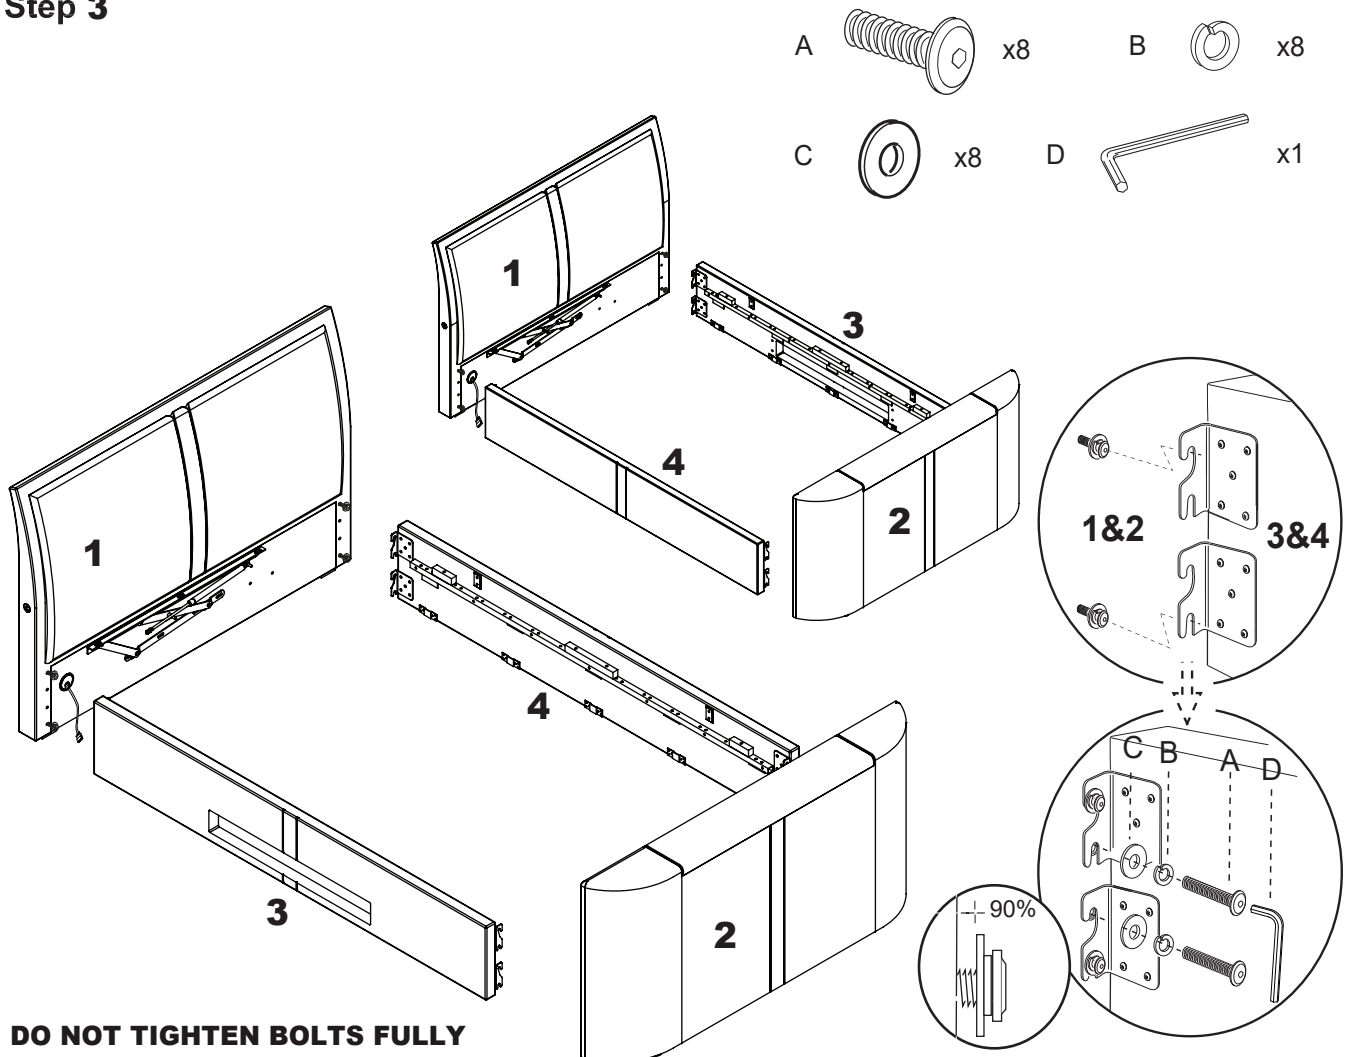


DO NOT TIGHTEN BOLTS FULLY


Step 4

Fit the base board support rails (12) to both side rails.
IMPORTANT: Be careful not to scratch the PU or fabric when slotting the wooden supports into the side rail brackets.

D  x1


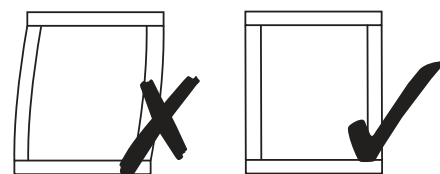
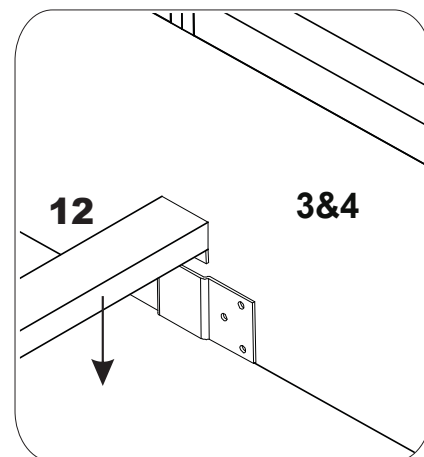
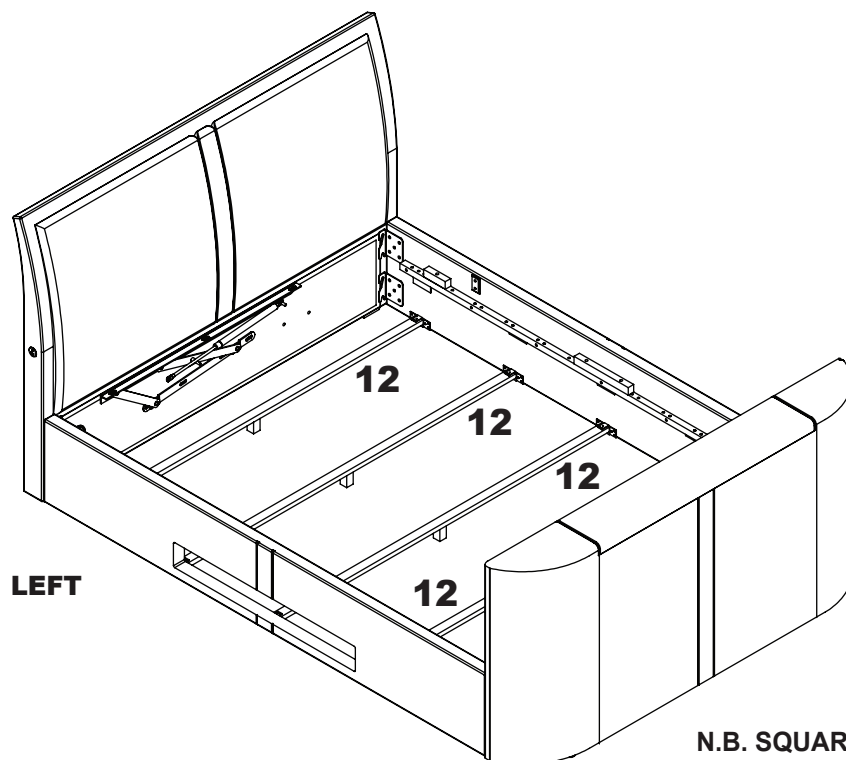


**N.B. SQUARE UP BED AND THEN
TIGHTEN ALL BOLTS 100%**

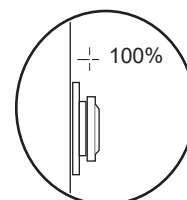

Step 5

Always to **LEFT** side rail 3 or 4, irrespective of which side is chosen to be plain or with media tray, fit USB/Headphone connection cable (P) tucking neatly under Velcro flaps.

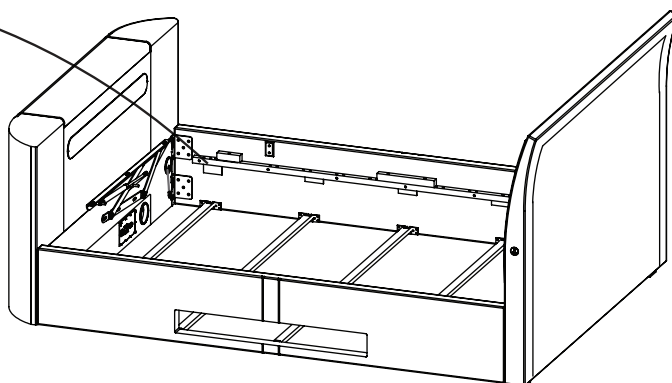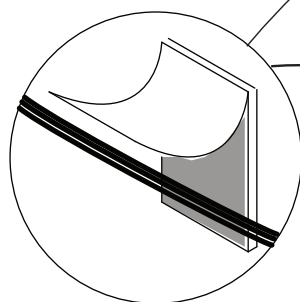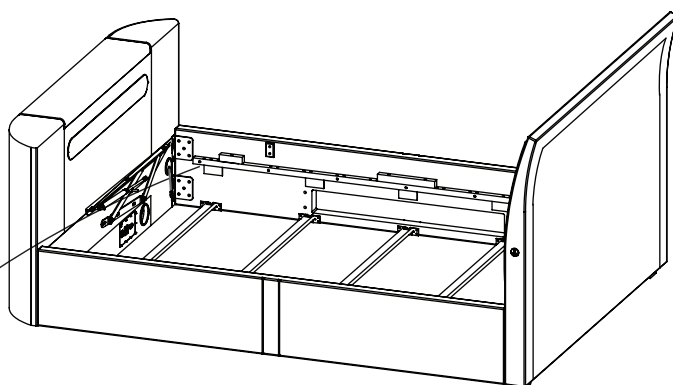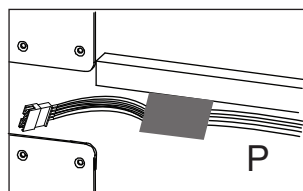


Step 6


Connect SOCKET in Footend to
PLUG on connection cable

Connect PLUG in Headend to
SOCKET on connection cable



FOOTEND **2**

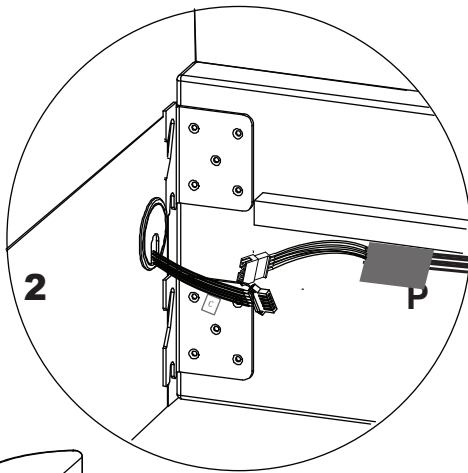


P

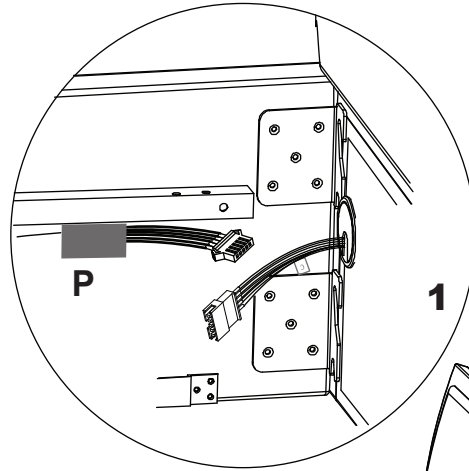

1 HEADEND

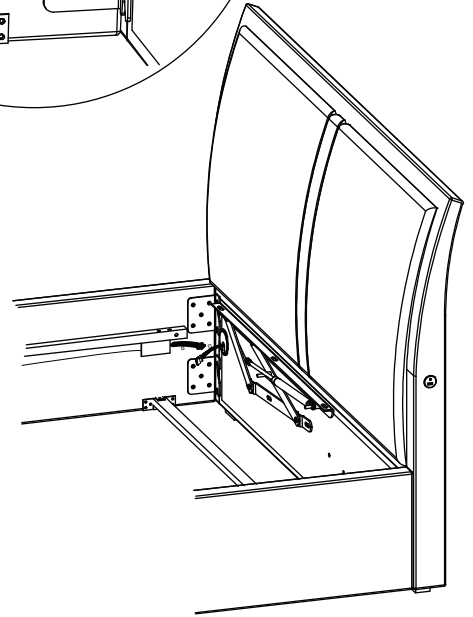
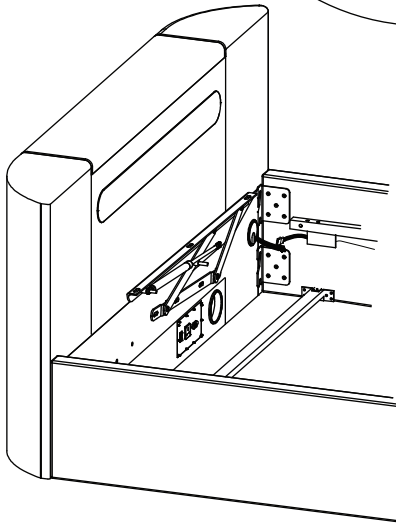


Step 7


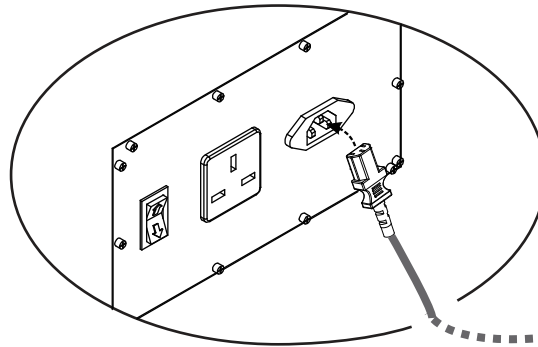


G


Connect Main Power Lead (G)
to your wall socket - for safety,
this must be an earthed supply.

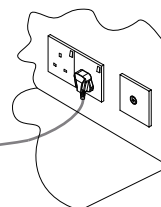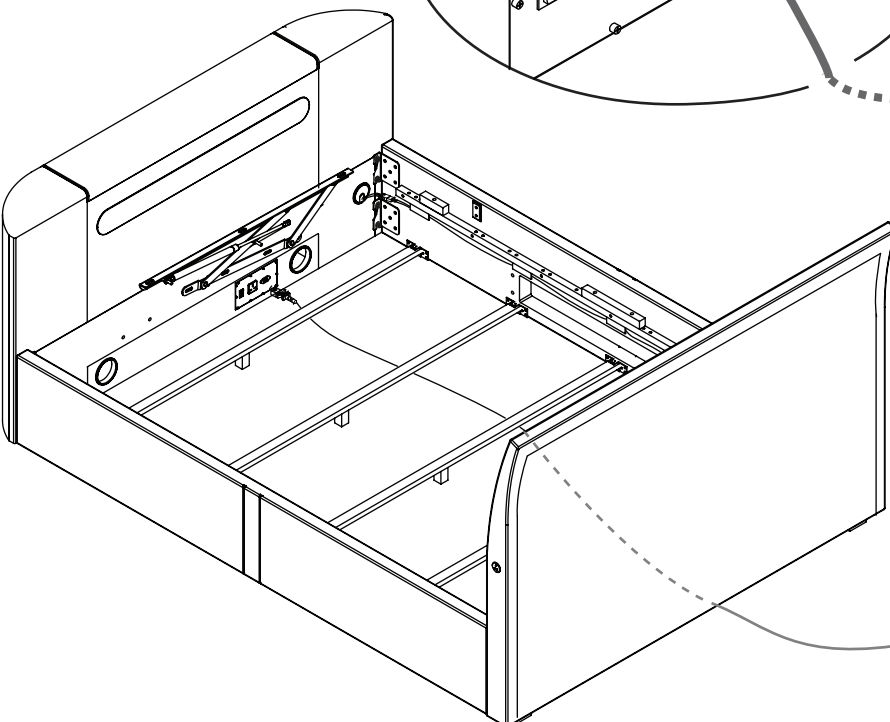

Step 8

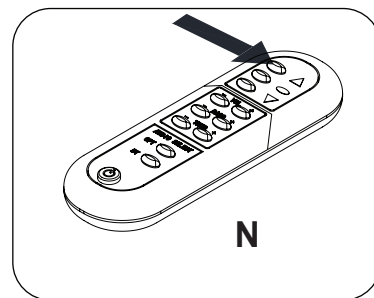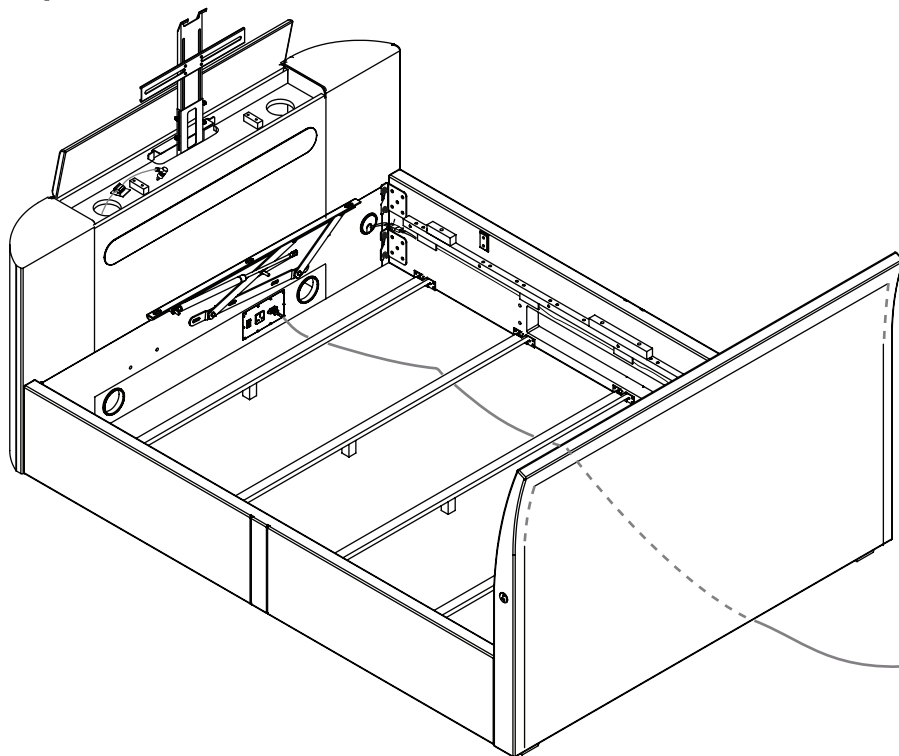

Press the "UP" button
to raise the TV lift.

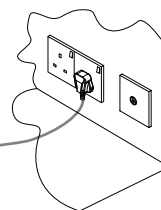


Step 9

TIP:

BEFORE FITTING THE TV,
PUSH CABLES THROUGH
EACH DUCT FROM THE TOP.
CHOOSE THE BEST SIDE TO
USE DEPENDING ON WHERE
THE CONNECTION PORTS
ARE, ON BACK OF YOUR TV.
NEVER CROSS CABLES FROM
ONE SIDE TO THE OTHER.

**Note: For illustration purposes
only, TV connections may vary.**

**TV Power Lead
supplied with your own TV.**

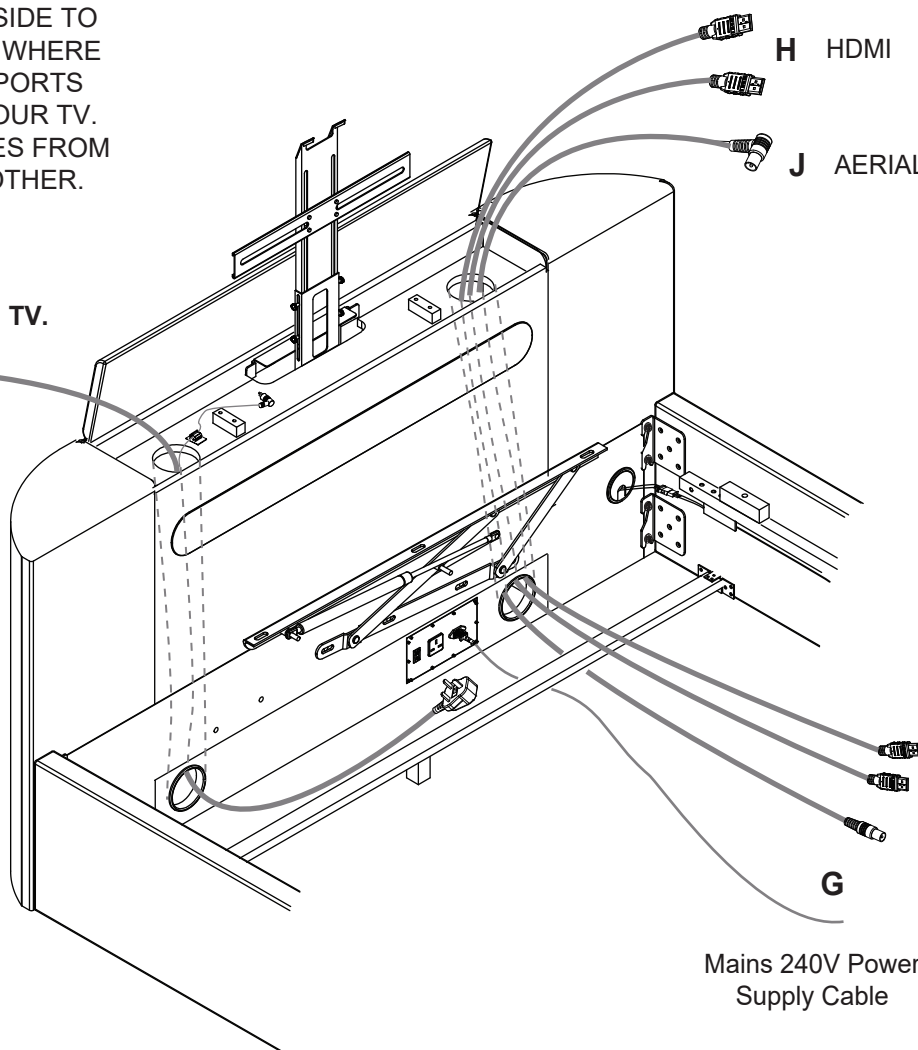

**Mains 240V Power
Supply Cable**

 
Step 10

TV Installation - Normal Vesa Fixing


IF SCREWS ARE SUPPLIED WITH TV, PLEASE USE THOSE IN PREFERENCE

 $a x^2$


Screw-Washer
sets (M8x25mm) -
Use 5mm Allen
Key (D)



Counter-Sunk Screws (M6x12mm)

 


Counter-Sunk
Screws (M4x12mm)









 


b x2

 Allen Key (4mm)




Allen Key (2.5mm)

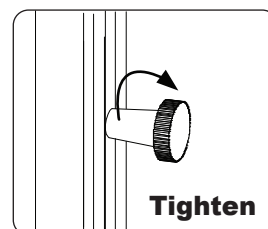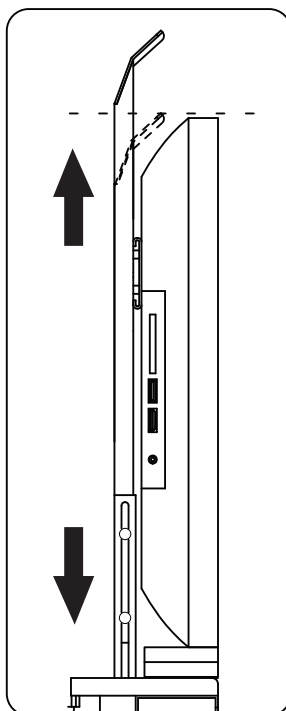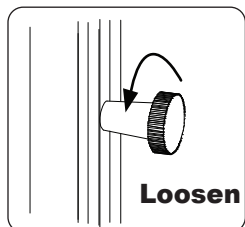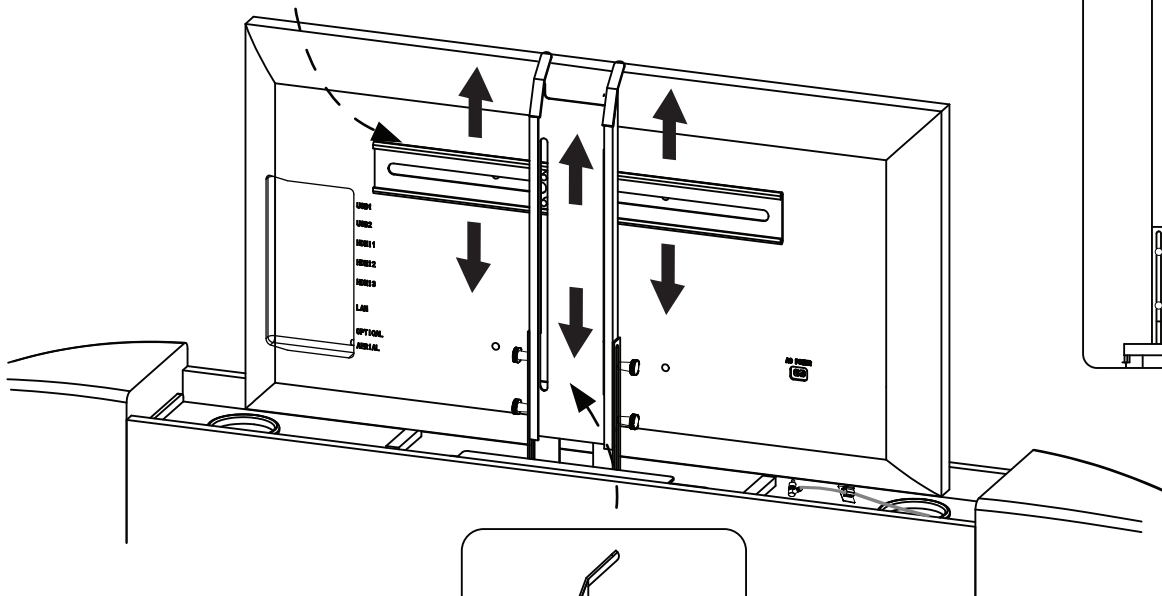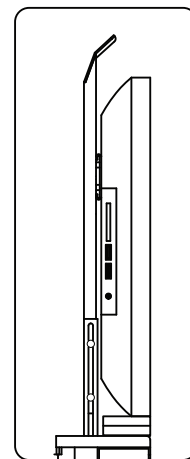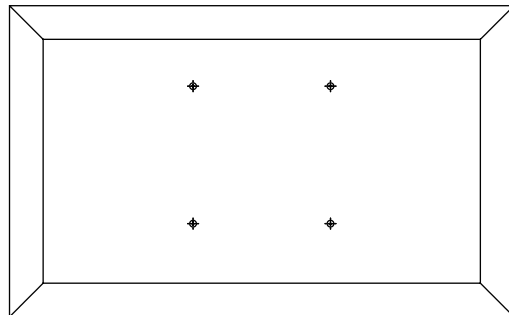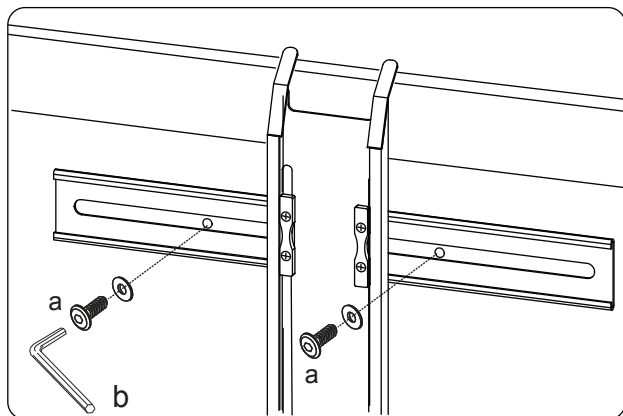  

Step 11a

TV Installation - 100x100 Vesa Fixing


REMOVE CROSS-BRACKET
AND FIX IT DIRECTLY TO BACK OF TV

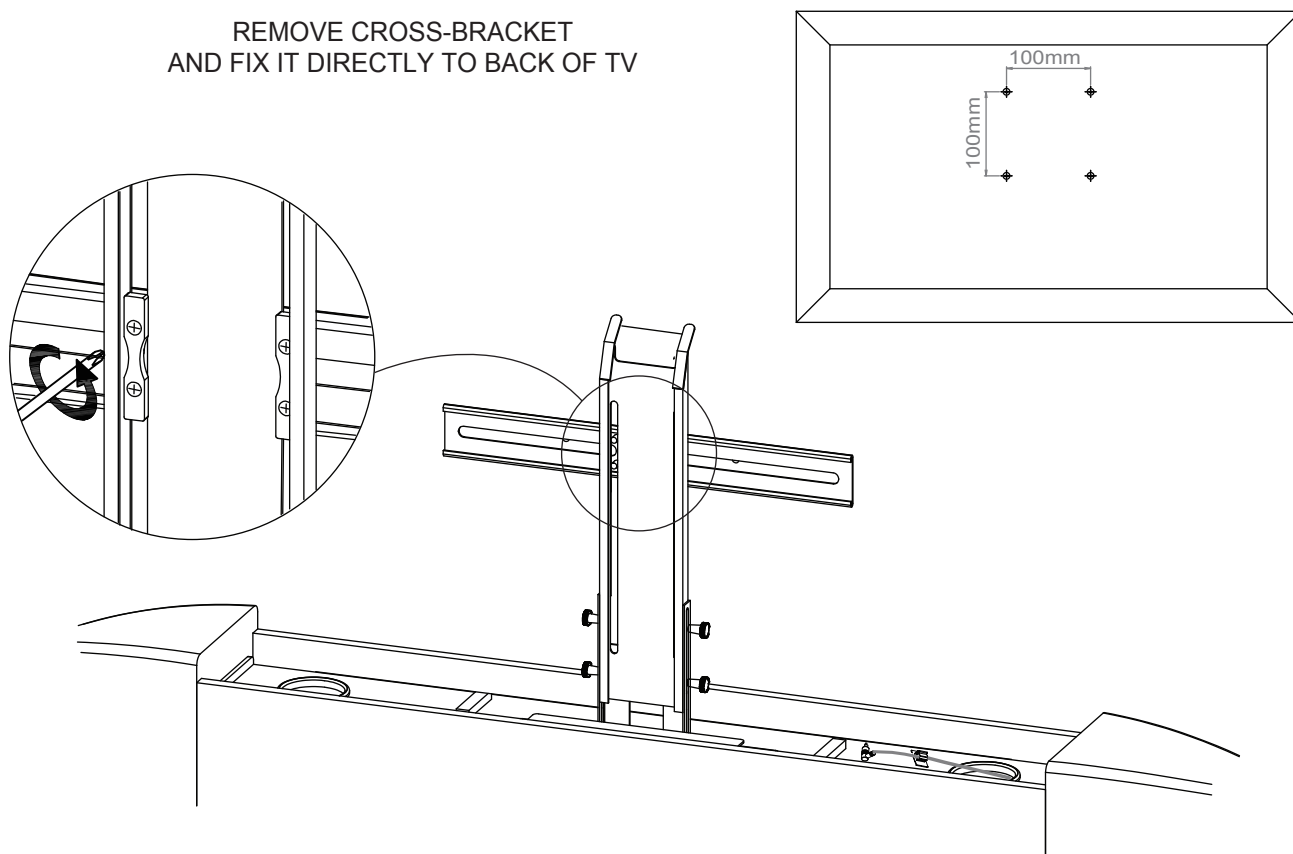


Step 11b

IF SCREWS ARE SUPPLIED WITH TV, PLEASE USE THOSE IN PREFERENCE

 
a x2 Screw-Washer sets
(M8x25mm).
Use 5mm Allen Key (D)



Counter-Sunk Screws
(M6x12mm)

 



Counter-Sunk
Screws (M4x12mm)

 


b x2 Allen Key (4mm)



 Allen Key (2.5mm)

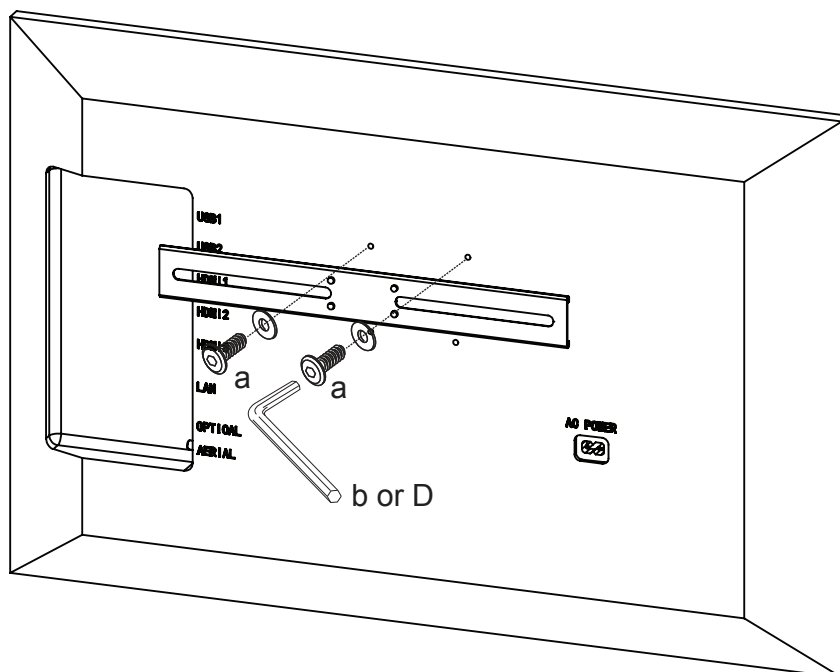


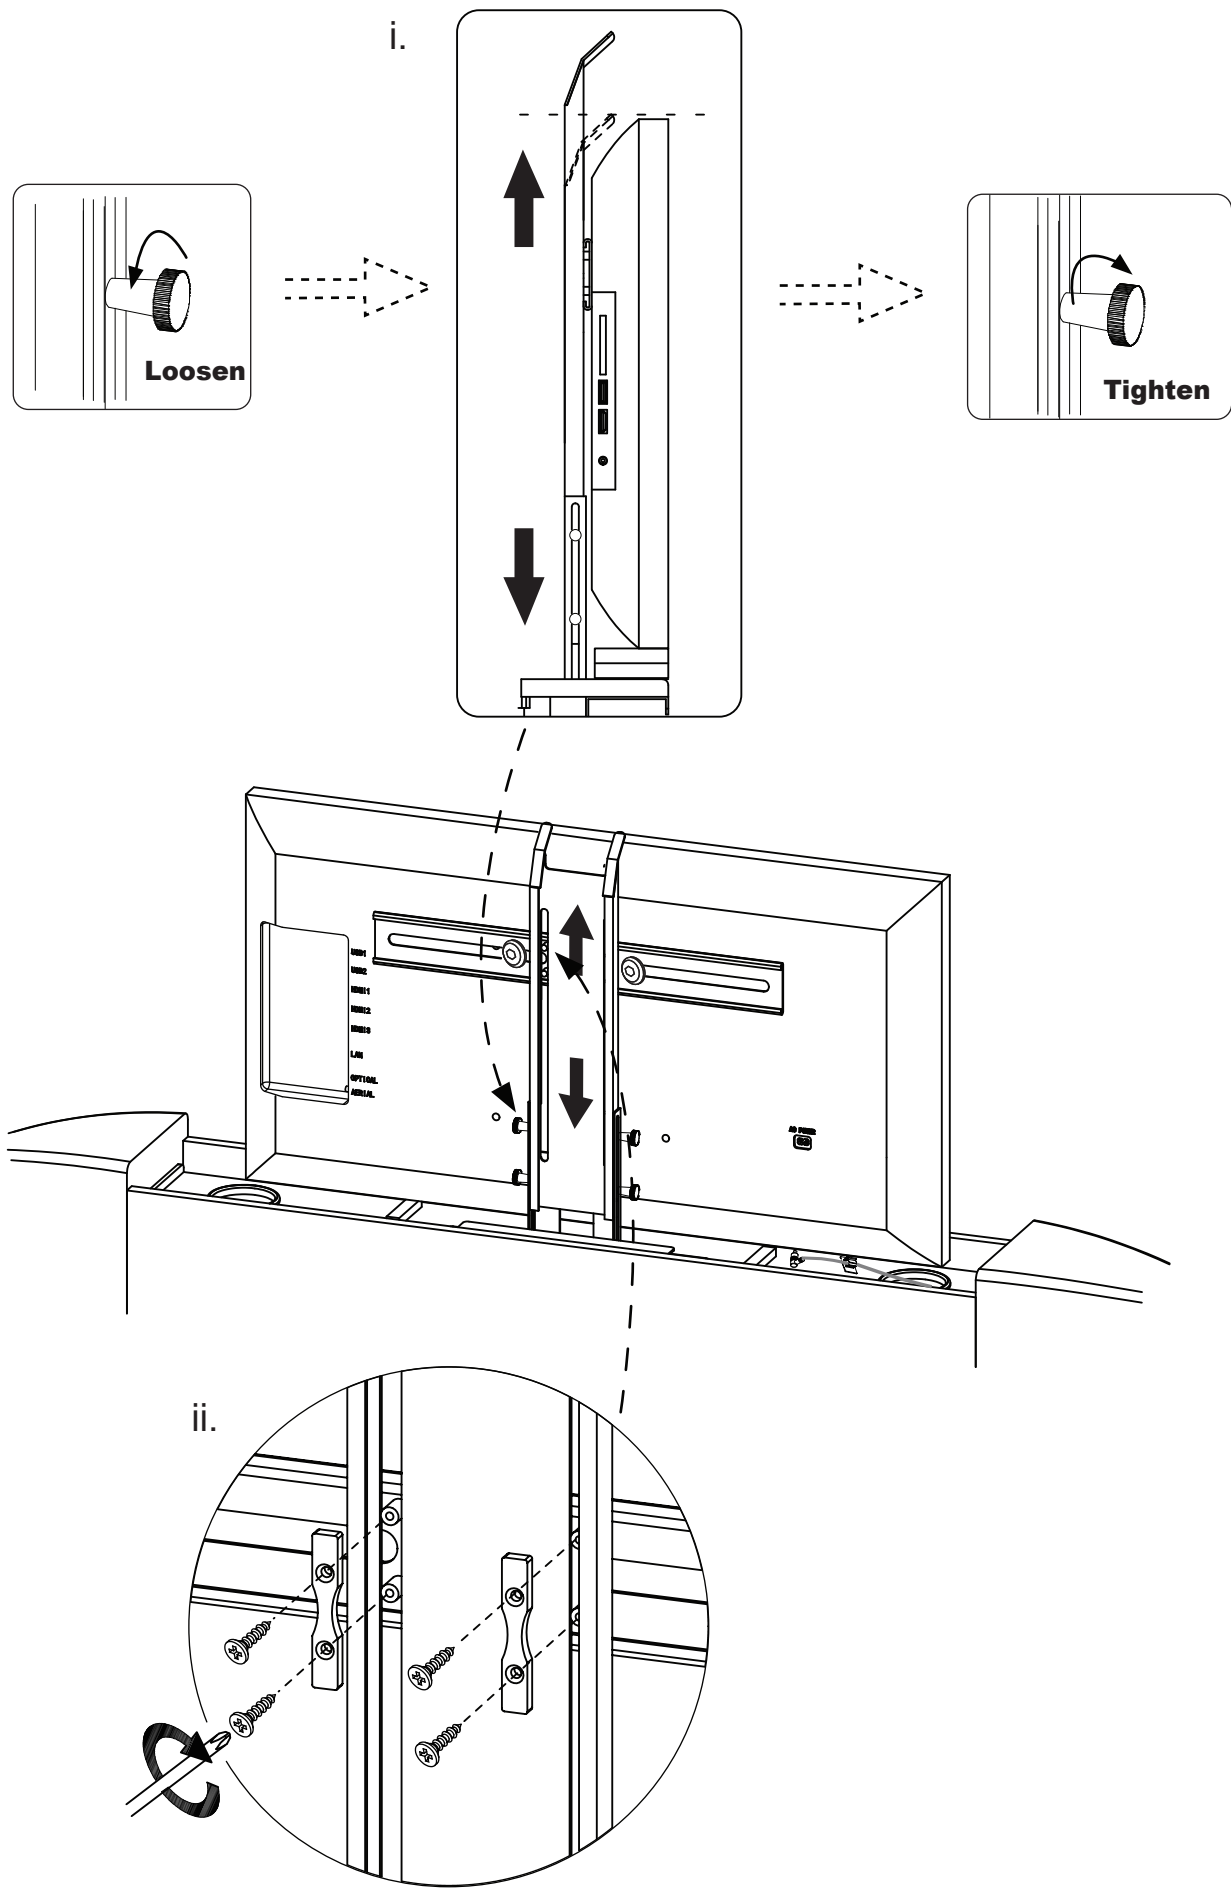



Step 12

Note: For illustration purposes only, TV connections may vary.



TV Power Lead supplied with your own TV

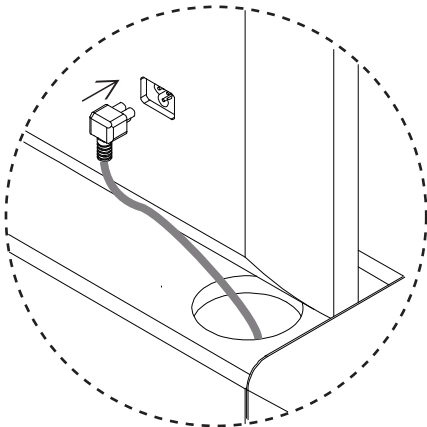


 **90° ADAPTOR**

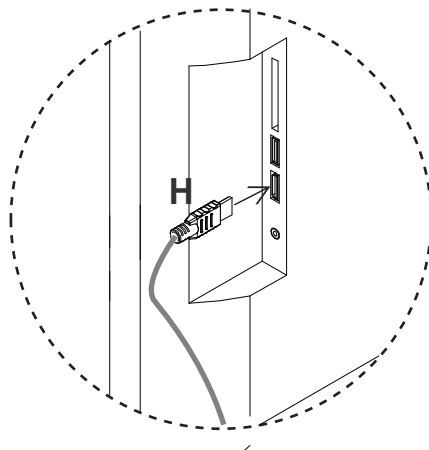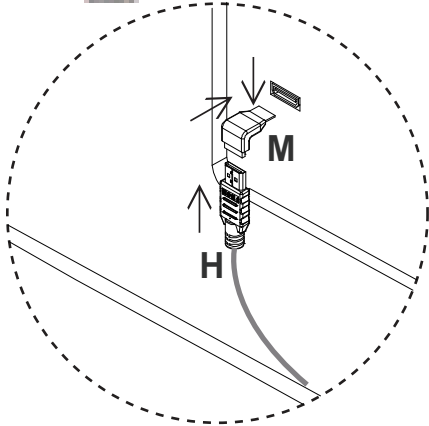


REMOVE DUST-CAP

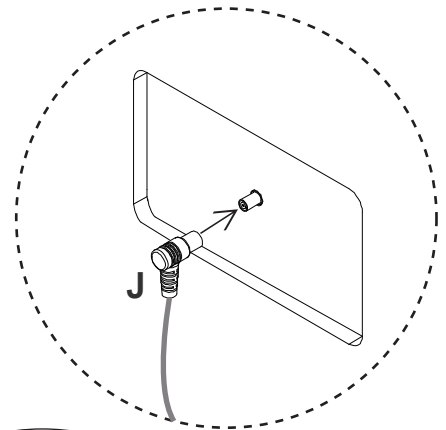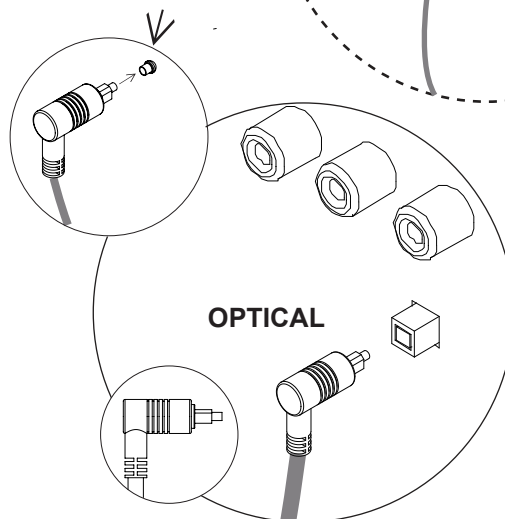


PLUG IN - KEEP ALL CABLES TIGHT - USE CLIPS & TIES PROVIDED.

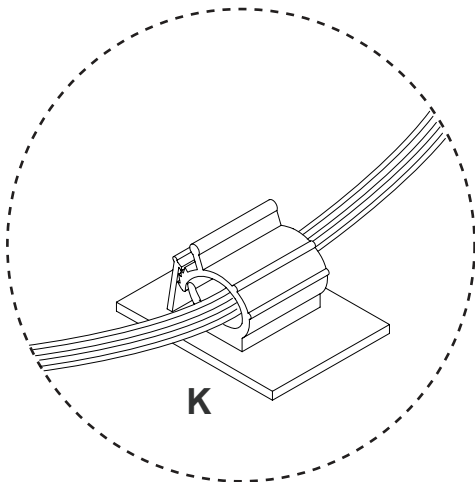


Keep wires tight - peel off cover from cable clips & adhere to back of TV.

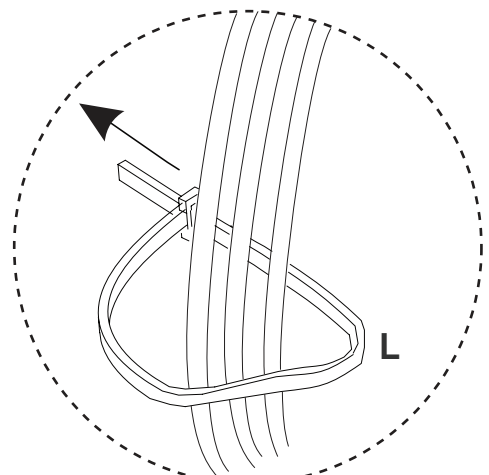

Step 13


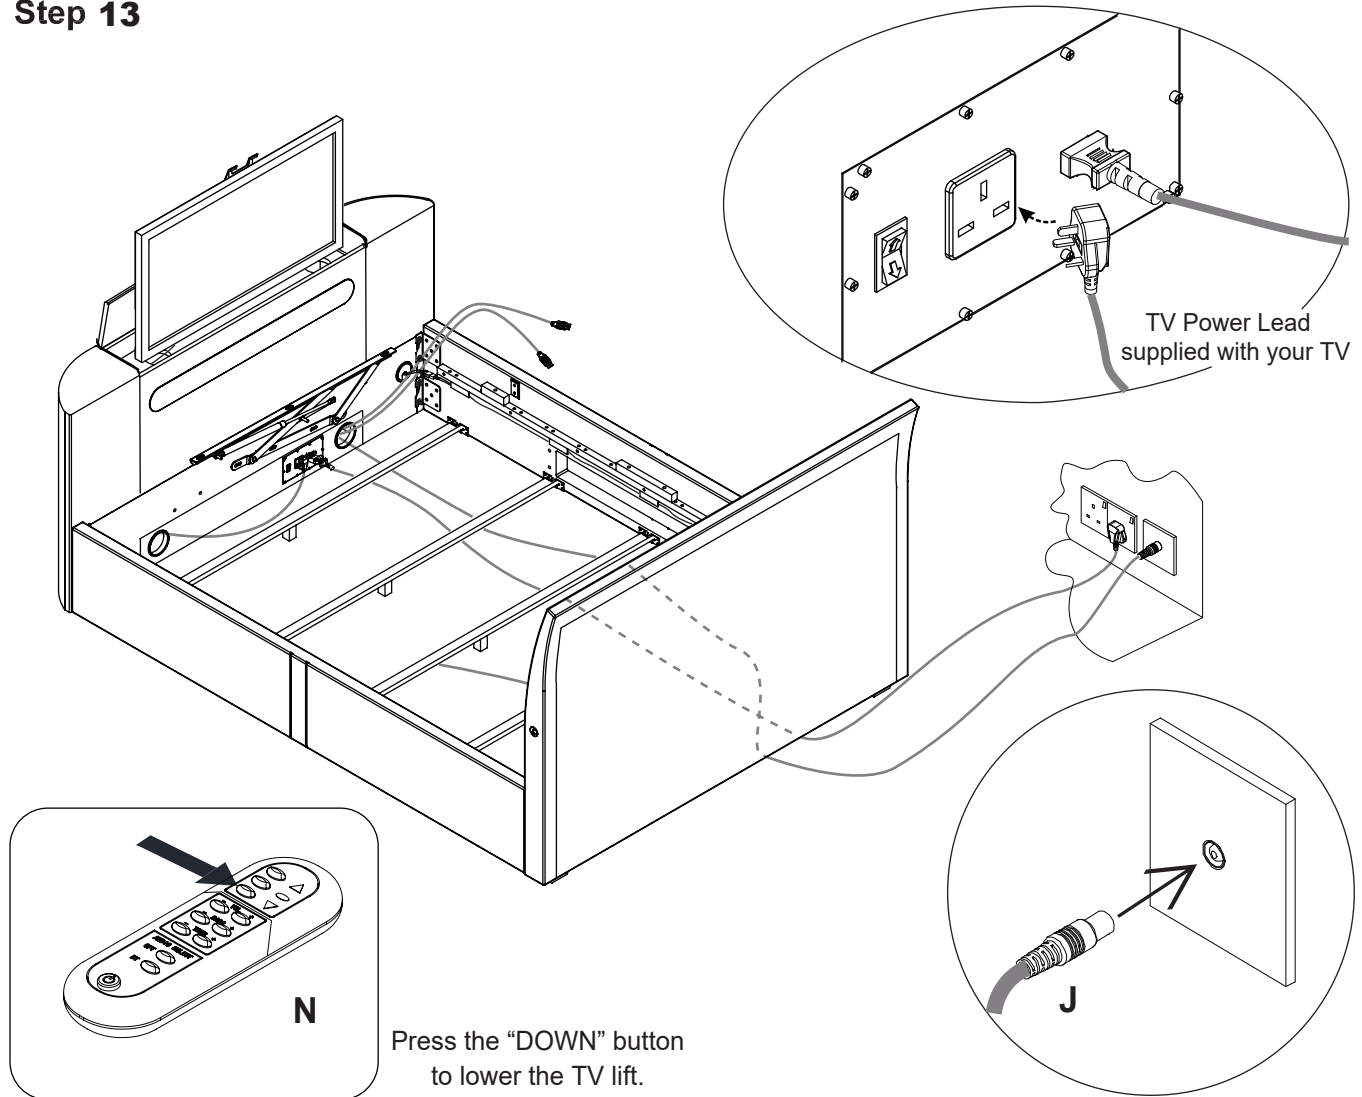


Step 14

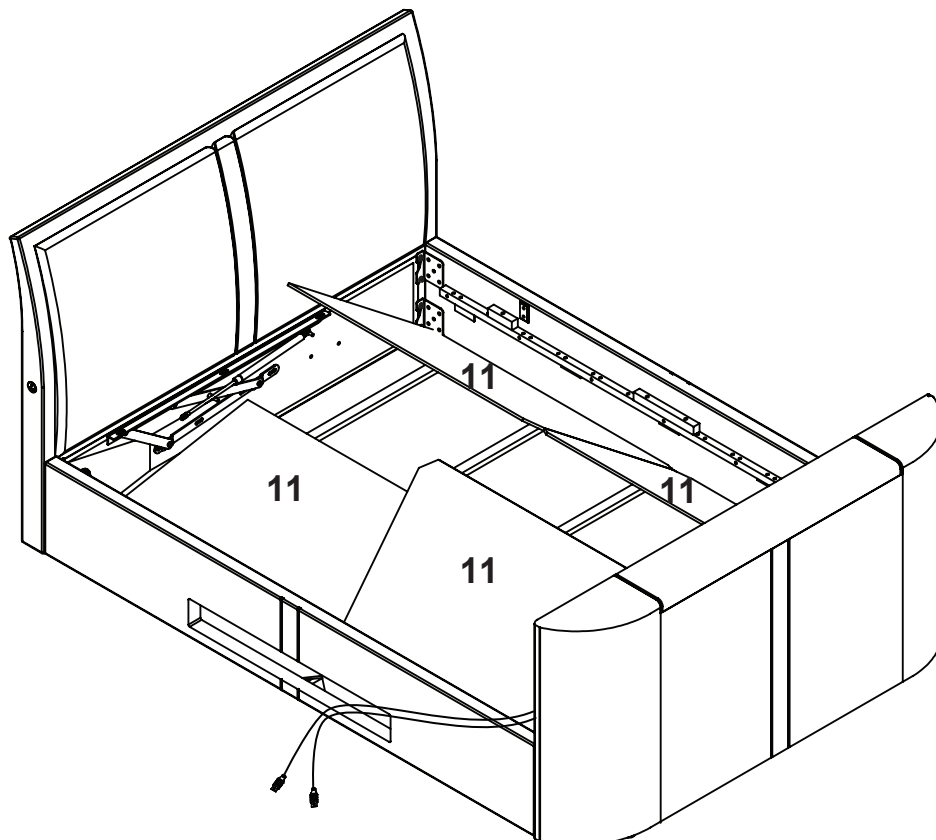



Step 15

F  x11

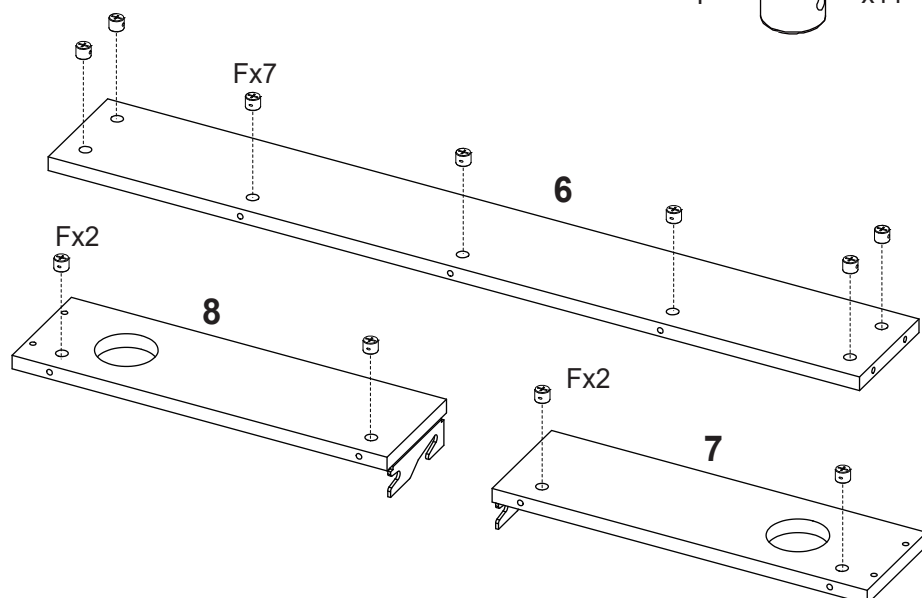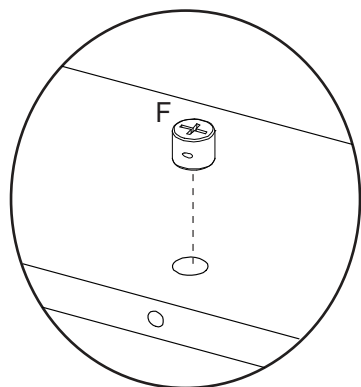


Step 16

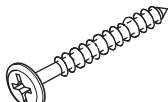
E  x11

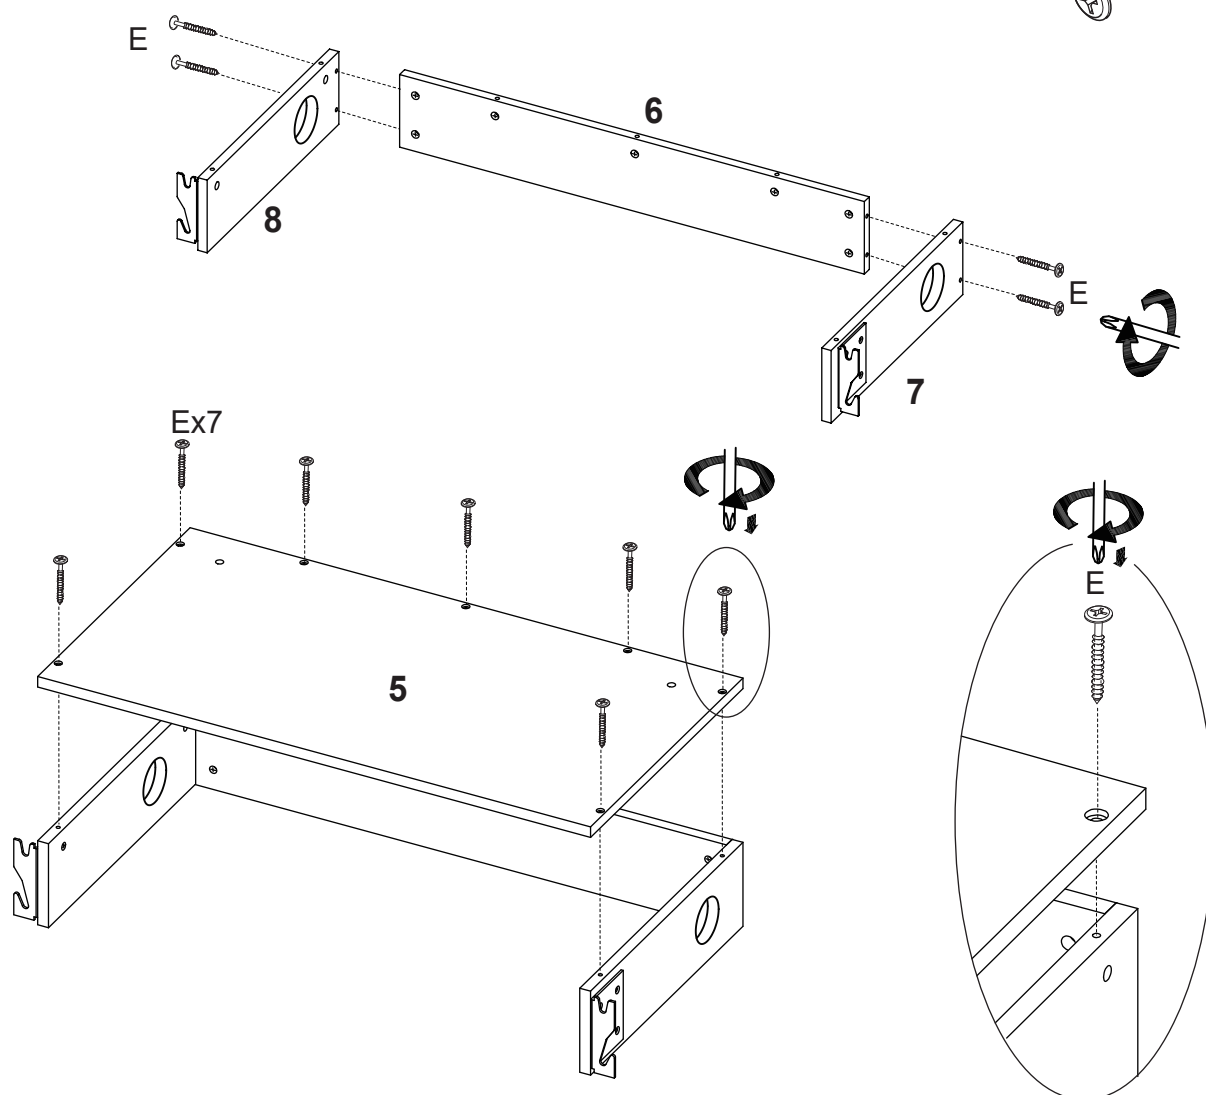


Step 17

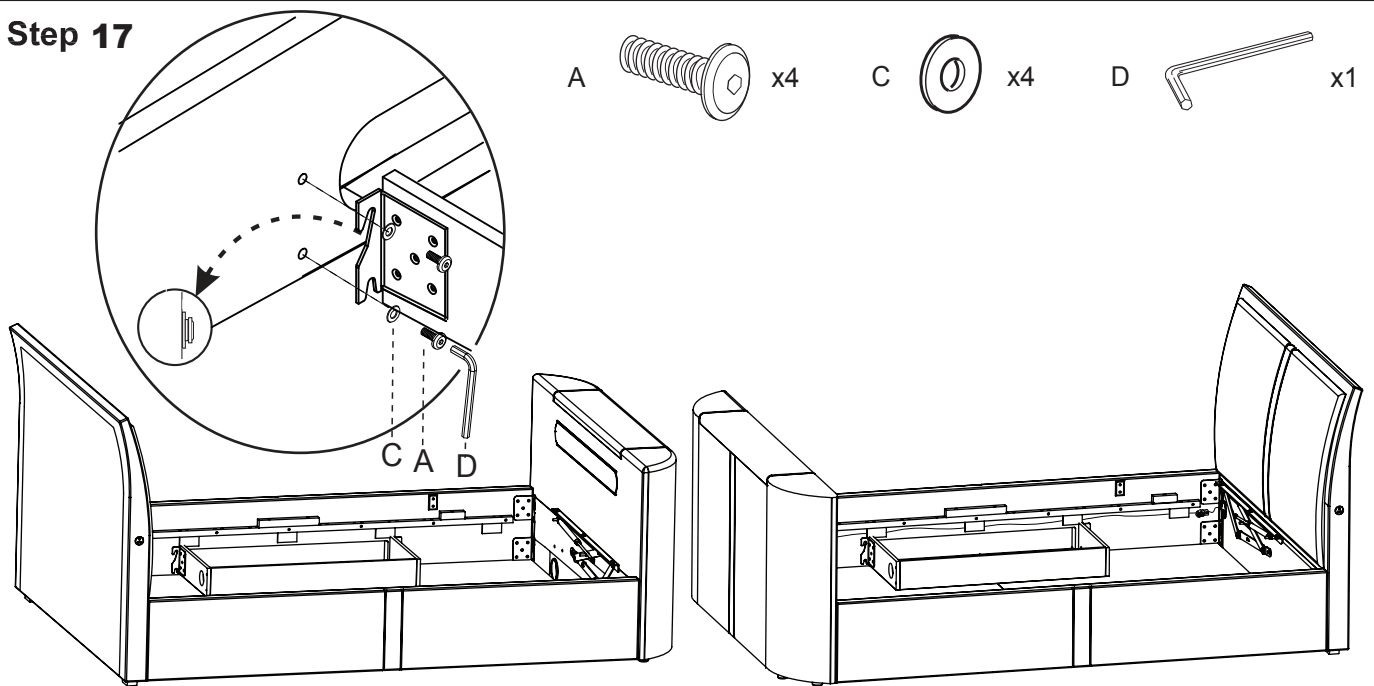

Step 18

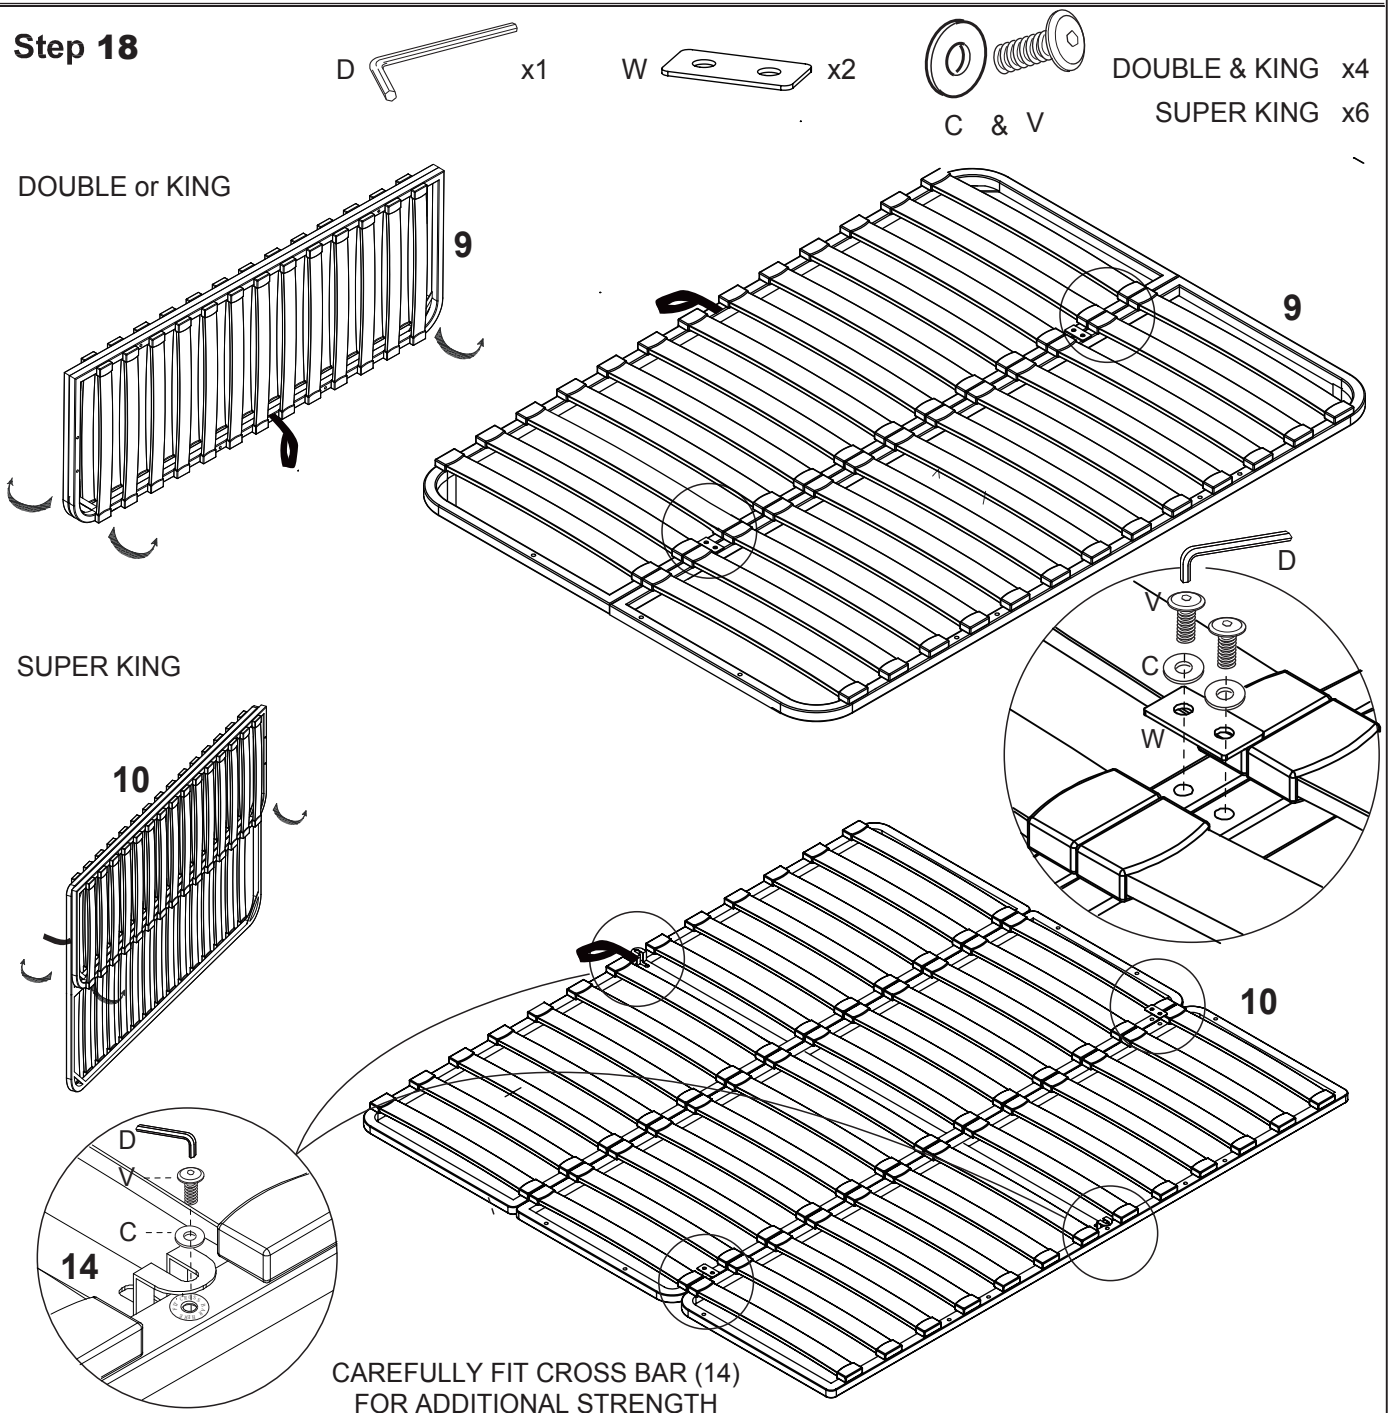

Step 19

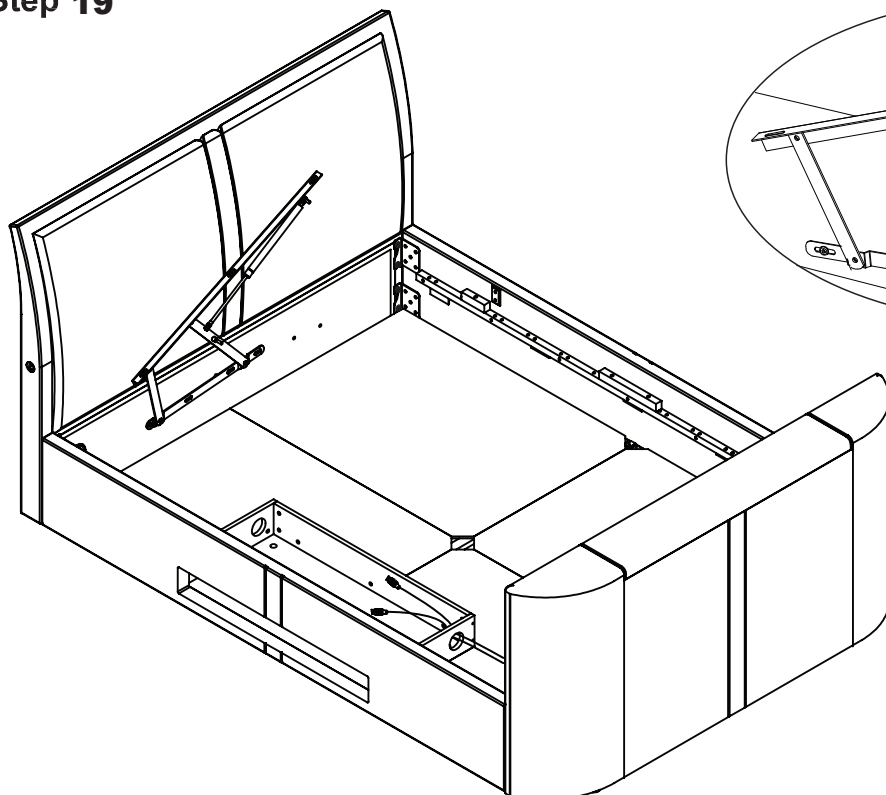


Slat Frame Support Bar

1&2

IMPORTANT: Be careful to keep the two HDMI Leads (H) on top of the Base Boards - Main power lead (G) and Aerial lead (J) should be kept under the base boards & fed out under the Headboard so you can connect to your wall sockets.

Make certain cables are not trapped under the Base Board Support Rails.

Step 20

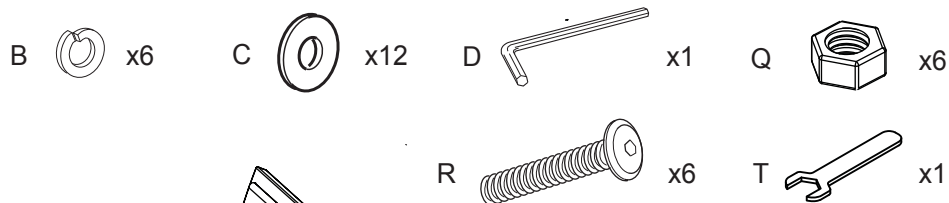


DOUBLE & KING


9

SUPER KING

10


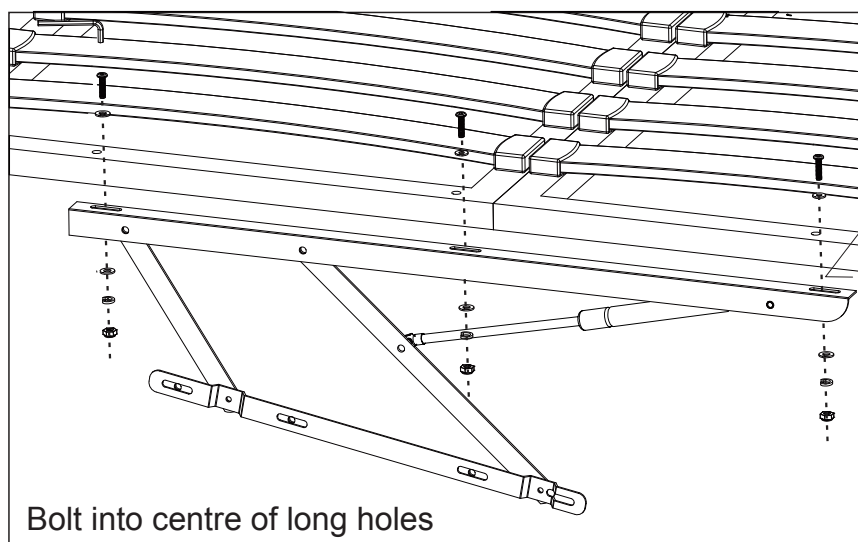


Bolt into centre of long holes

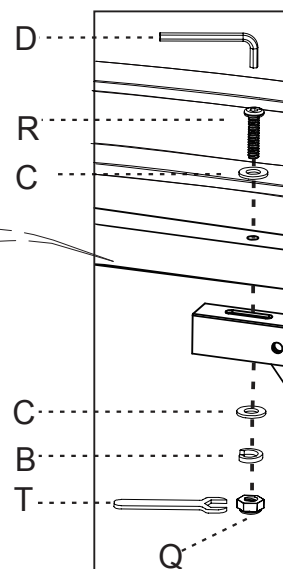


Step 21

Carefully lay frame down. Make sure there is an even gap each side of about 8 mm, as in the sketch.


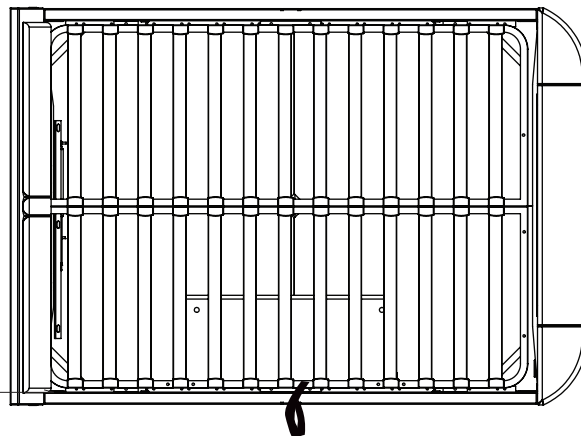
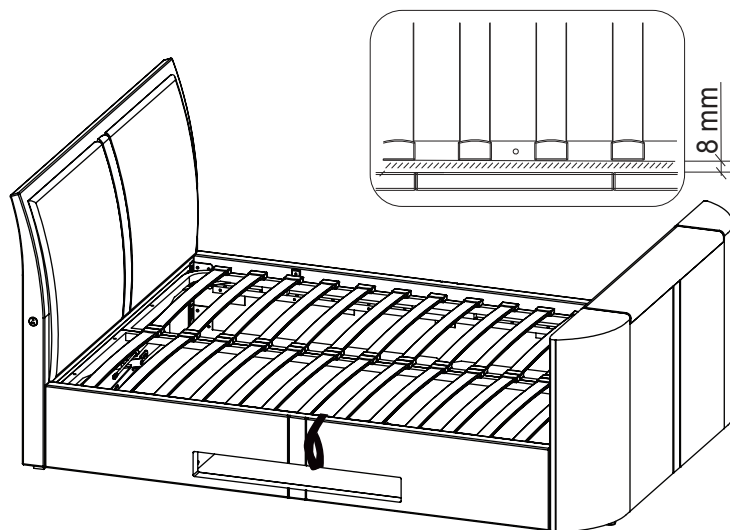


Hold frame securely then tighten all six bolt sets 100% using spanner (T) & Allen key (D).

Step 22

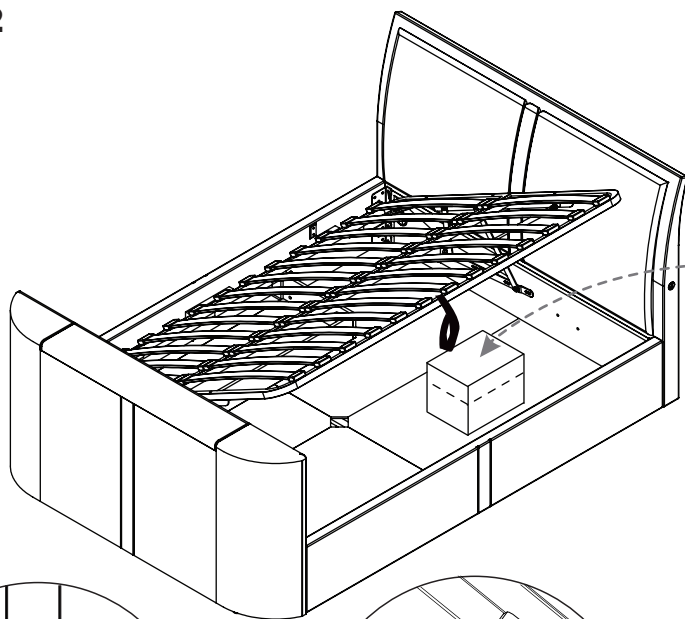



Note: Be very careful what you store under the bed - the top of an item, like a suitcase or a box must not touch the slats or they may be damaged. Maximum storage height is 240mm.

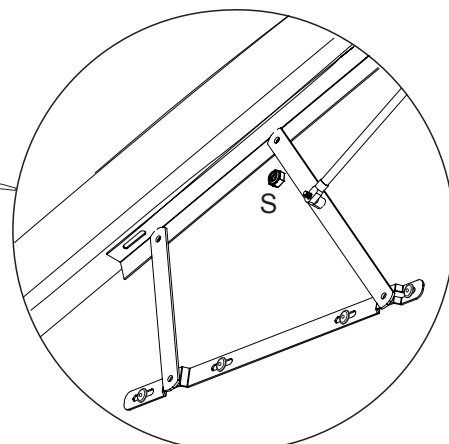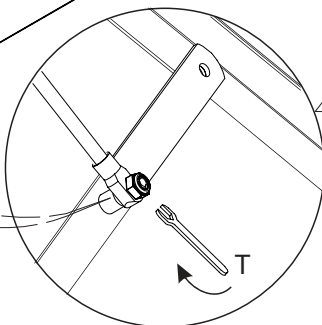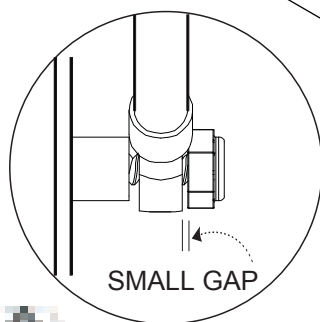



NOTE: Before moving the slat frame, mattress must be placed on the slats as the speed of upward movement is very high and may cause injury. Lift frame with the hand-strap then slowly push down ensuring the edges are aligned with the side panels. If not aligned, check bed is still square (see Step 4). Depending on the weight of the mattress, the speed of the lift will vary so be careful until you get used to the speed. Always use the strap to lift or lower the frame - keep fingers well away from the moving parts.

NOTE: With mattress in place, move the frame up & down five times to lubricate the pistons.

Step 23 FIT THE REMOTE CONTROL HOLSTER LEFT OR RIGHT

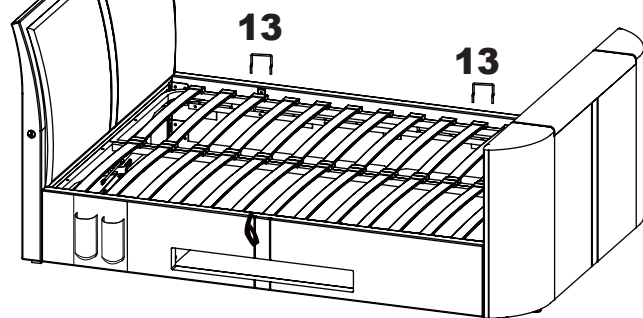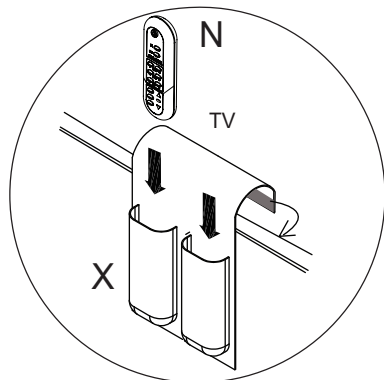

FIT THE MATTRESS STOPPERS

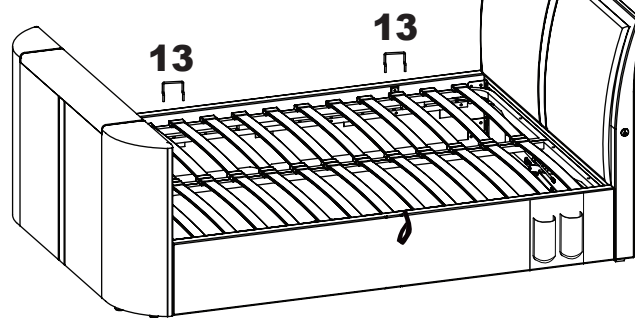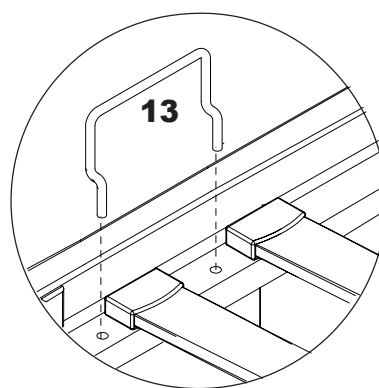

TV BED SAFETY INFORMATION



GENERAL INFORMATION

It is very important not to place any vessel containing liquids, e.g. drinks or vase of flowers, on top of the TV footboard which may accidentally spill and enter the TV compartment as this could cause damage to the TV and/or the TV lifting equipment.

If this happens, please contact your retailer.

Do not expose the bed to an undue level of heat - keep away from radiators.

Never allow anyone to sit on the foot end of the bed - keep children well away from moving parts.

To keep bed clean, we recommend that it be wiped over with a slightly dampened cloth or if fabric, use a light vacuum cleaner; disconnect power before cleaning.

Supplied with the bed is a remote control to operate the TV Lift and when you fit your own TV there is a remote control to operate it as well. Both these remotes use batteries - there are no batteries in the rest of the equipment.

There are strict controls for disposal of batteries - your local council can advise on how to safely dispose of them.

Never burn batteries on an open fire as they could explode.

IMPORTANT POWER INFORMATION

It is essential that the Mains Power Lead (G) is connected to an earthed socket be it a wall socket or extension lead - otherwise there is risk of damage or even electric-shock.

The socket providing the power must be accessible at all times in case you need to switch off the power quickly.

During an electrical or lightening storm - disconnect the power completely as a precaution.

Always un-plug the power when going on holiday or when the bed is not used for an extended period.

If you have young children in the home always disconnect the power at the wall socket for extra safety.

Power outlets, extension leads or adapters must not be overloaded beyond their limit - this can result in fire or electric shock.

Leads supplied with this bed, or other approved mains powered extension leads used to power the equipment, must not be placed where they can be walked on - this is dangerous and could lead to accidents.

 
Do not interfere with or modify any cables already fitted and do not add any extra media leads unless they are routed through the ducts as shown in Step 9. All leads must be tightly connected to back of TV, never hanging loose.

Never touch moving parts or any part of the equipment - if something needs to be checked, disconnect the power first.

Do not insert anything into the footboard as this could seriously damage the TV and/or the TV lifting equipment and could, if done carelessly, cause serious damage or injury.

If the equipment doesn't operate normally or if there is any unusual noises, disconnect the power.

TV BED SAFETY INFORMATION

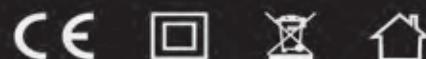

TELEVISION INSTALLATION

Before fixing the slats frame to the bed, please follow the television installation instructions below.

Raise the TV Lift by pressing the TOP button of the remote control.

Connect the TV using the TV Installation hardware packed in the accessory box in Carton 2.

Connect the TV to the mounting bracket plate as in Step 10 or 11.

If necessary, mounting plate can easily be adjusted to move TV up or down.

Connect the TV Power Lead (supplied with TV) by passing plug down one of the ducts, plugging it into the power adapter (if one is supplied with the TV) then into the TV power socket which is on the face of footboard - see Step 3.

This socket is only to be used for the TV as the supply is not constant.

Connect the Aerial & HDMI cable (H&J) by passing down the appropriate duct - see Step 9 & 12.

If required, connect your own media cables through either of the ducts - connect your media equipment when ready.

Please use the cable clips & cable ties (K&L) to make certain there are no loose wires to snag or get trapped.

The TV can now be operated following the TV Operation Guide supplied with your TV.

When finished viewing, lower the TV back into the footboard by pressing DOWN button of the remote control.

The TV will retract into the footboard automatically - power shall be turned off when TV reaches the bottom.


When the UP button is pressed - the TV Lifting Column rises and power to the TV turns back on automatically.

TROUBLE SHOOTING

IMPORTANT: Care should be taken when connecting electrical items. If in any doubt please consult an approved electrician to advise you on the electrical supply to achieve safe connections, to the electrical equipment of the TV Bed.

If your equipment does not operate please check all the power connections, to the wall and to the socket in the footboard. Make sure TV is switched on. (Note: TV will only work when it is in the up position).

Occasionally you may find the radio wave connection between remote control and TV Lift is lost, probably due to atmospheric conditions. In that case please follow these simple instructions:

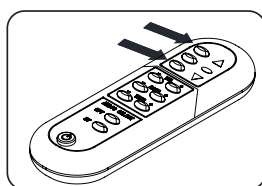

- ①. Disconnect all mains electric power to the bed, for at least 60 seconds.
- ②. Press UP or DOWN Button on Remote Control and keep holding button down, simultaneously re-connect mains electric power to bed keeping button down for at least a further 5 seconds. TV Lift unit receives signal from Remote Control and lift will begin to move UP or DOWN whichever direction is appropriate.
- ③. Re-connection is now completed.


If the television or TV Lift still fails to operate contact your retailer.

Overall Dimensions (Cm)

DOUBLE: W149cm X L232cm X H109.5 /H83

KING: W164cm X L241cm X H109.5 /H83

SUPER KING: W194cm X L241cm X H109.5 /H83

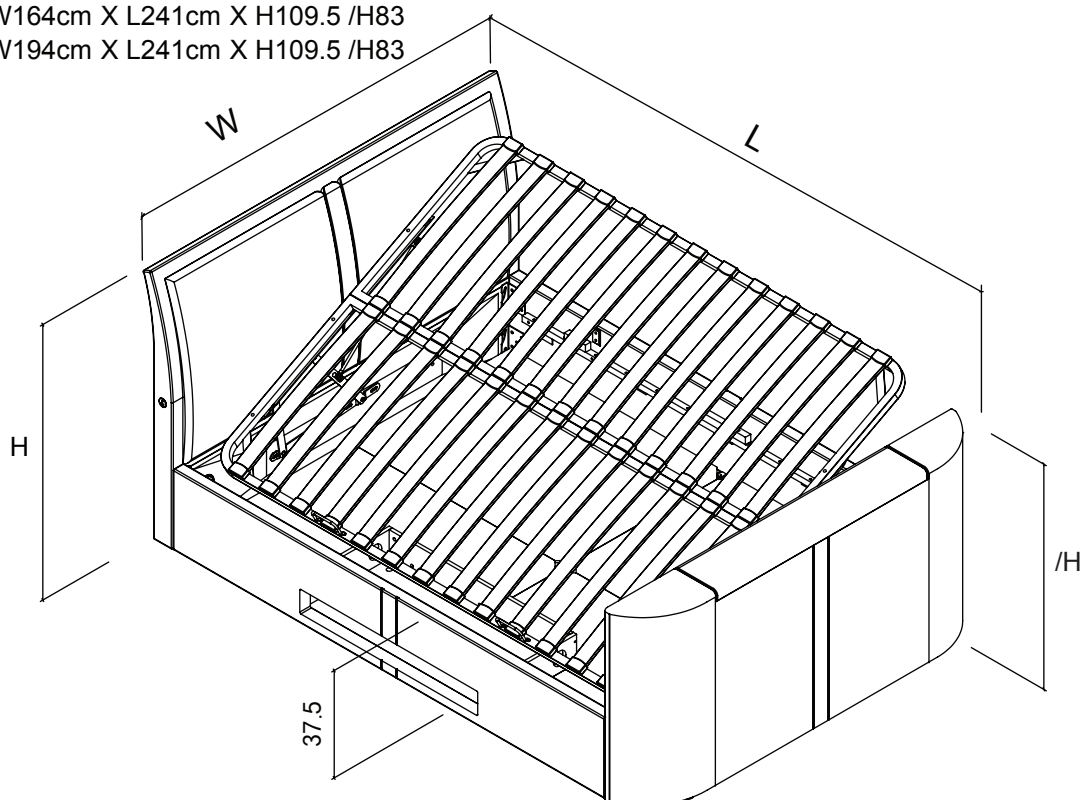

Product Information

- Upholstered Bed conforms to BS EN 1725 & BS 5852.
- TV Lift system has a maximum load capacity of 14 Kg
- Compatible with slimline LED television with a screen size of 42".
- Maximum TV dimensions: W97 x H55 x D8 cm

Care Instructions

- Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking and deterioration of the colour.
- Periodically check & re-tighten any fastener.
- Periodically remove dust by using a light vacuum cleaner or if your bed is PU, use a soft damp cloth.
- Do not use silicone based furniture polish.
- Any spills should be removed immediately with a soft damp cloth.
- TAKE CARE WHEN MOVING THE FURNITURE AND NEVER DRAG THE PIECES ACROSS THE FLOOR, AS THIS WILL CAUSE DAMAGE TO THE JOINTS.

We cannot be held responsible for any damage caused to the TV, TV cabling or the TV Bed itself due to incompatibility of any additional equipment installed by the end-user or due to loose and poorly installed cables (see Step 9). Please read this Assembly Instruction carefully and follow the recommendations.

CE TV LIFT REF: LA08 CONFORMS TO STANDARD FOR UK & LED CONFORMS TO STD FOR UK (EMC, LVD & ROHS)

TV LIFT: EN 60335-1:2012+A11: 2014

EN 60950-1:2006+A11:2009+A1:2010

+A12:2011+A2: 2013

EN 301 489-1 V2.2.0: 2017

EN 301 489-3 V2.1.1: 2017

EN 55014-1:2006+A1:2009+A2:2011

EN 61000-3-2: 2014 EN 61000-3-3: 2013

EN 62233: 2008 EN 55014-2: 2015

EN 300 440 V2.1.1: 2017 EN 301 489-3

V2.1.1: 2017 EN 62479: 2010

EMC CERT NO. HTT170911240E

LVD CERT NO. HTT170911240L

ROHS CERT NO. HTT170911240R

POWER SUPPLY: FDD-009

EMC CERT NO. BST14010531Y-1EC-1

LVD CERT NO. BST14010531Y-1SC-2

ROHS CERT NO. BST14010531Y-1RC-4

DIRECTIVE: 2014/30/EU

DIRECTIVE: 2014/35/EU

DIRECTIVE: 2011/65/EU

DIRECTIVE: 2004/108/EC

DIRECTIVE: 2006/95/EC

DIRECTIVE: 2011/65/EU



www.happybeds.co.uk

Important for Ottoman and other gas lift beds

Please follow these final steps to ensure the best experience with your new bed

- Please ensure the pistons are fitted to the bed frame.
- Please place the mattress on top of the bed frame.
- Standing at the foot of the frame (looking at the headboard) open the base and the press quite forcefully down on the mattress – please do not attempt to do this without the mattress being in place.
- Please do not pull on the strap handles.
- Please note as the pistons are full of gas – you will need to press heavily to release the compressed gas.
- Once done the pistons should start operating as normal.



Please dispose of all packaging safely.

General Care & Maintenance

Wipe clean with a slightly damp cloth.
Avoid the use of all household cleaners and abrasives.

Periodically check all screw & fixings to ensure they are secure.

When moving your product, carefully lift into place. Never drag or push the product across the floor as this will cause damage to the joints. If the product is used on hard flooring, such as wood or laminated floor, you must place some protection under the legs to stop the product from moving. If this is not adhered to, it could result in failure to the product that will invalidate the warranty.

For more information on cleaning and product care visit:
<https://www.happybeds.co.uk/help-and-advice>

Notes

In the unlikely event that you have problems putting this product together or have damaged or missing parts, please contact us by visiting:
<https://www.happybeds.co.uk/customer-service>