

Assembly Instructions

VALENCIA Fabric TV Bed





Important before assembly:

Read these instructions carefully before assembling or using the product.

Please check the contents of the boxes before attempting to assemble this product. The instructions will have a checklist of parts and fittings.

It would be sensible to lay a rug or a carpet on the floor where you intend to assemble the product, to avoid scratches and damaging the product or the floor.

Assemble the product as close to its intended final location/room as possible.

Do NOT use any power tools as this may damage the frame.

Health & Safety:

This product or some parts of this product will be heavy. Please use an assistant when lifting.

Please keep small parts out of reach of children.


Always use on a level, even surface.

DO NOT jump on the product or any of its parts.

DO NOT use this product if any parts are missing, damaged or worn.


DO NOT use this product unless all fixings are secured.


Please keep these instructions for future reference.

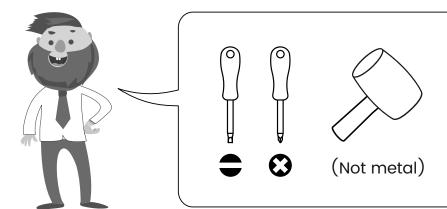


These tools are not necessary, but may help to assemble certain parts of the product.


Do NOT use any power tools as this may damage the frame.

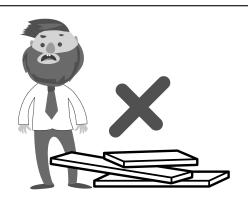

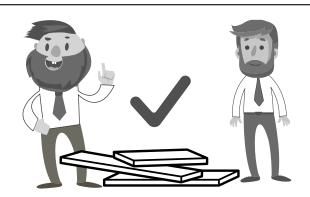



This product or some parts of this product will be heavy. Please use an assistant when lifting.

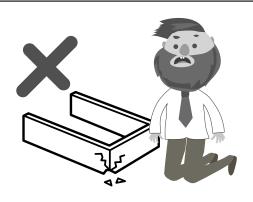

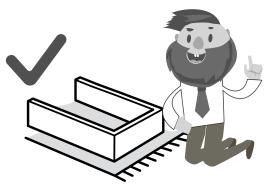


Never drag or push the pieces across a hard or stone floor as this will cause damage to the joints. Use a carpet or a rug for extra care.

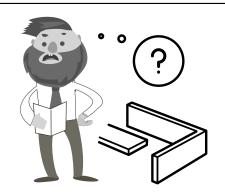


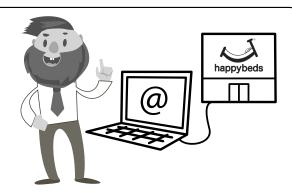

If you have problems assembling or have damaged or missing pieces, please contact us by visiting:

https://www.happybeds.co.uk/customer-service

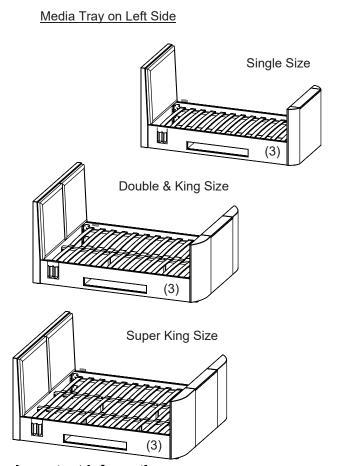

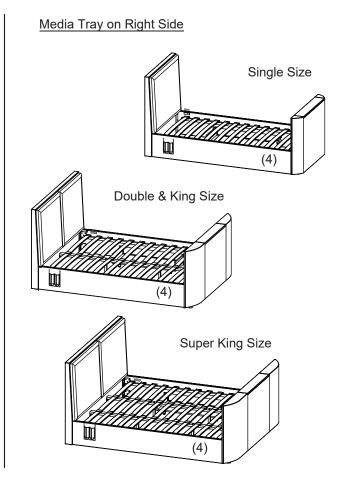

Important Information

- We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
- Carefully check that you have all the parts before beginning assembly.
- Keep fittings out of children's reach and keep children well away from construction area.

Product Intormation

- Upholstered Bed conforms to BS EN 1725 & BS 5852.
- TV Lift system has a maximum load capacity of 10 Kg
- Fitted with SMART slimline LED television with a screen size of 32"
- If you need to re-place this TV for any reason, the maximum size cannot be larger than 76 x 45 x 8 (WHD cm)


Care Instructions


- Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking and deterioration of the colour.
- Periodically check & re-tighten any fastener.
- Periodically remove dust by using a light vacuum cleaner or if your bed is PU, use a soft damp cloth.
- Do not use silicone based furniture polish.
- Any spills should be removed immediately with a soft damp cloth.
- TAKE CARE WHEN MOVING THE FURNITURE AND NEVER DRAG THE PIECES ACROSS THE FLOOR, AS THIS WILL CAUSE DAMAGE TO THE JOINTS.

We cannot be held responsible for any damage caused to the TV, TV cabling or the TV Bed itself due to incompatibility of any additional equipment installed by the end-user or due to loose and poorly installed cables (see Steps 9 & 10 for examples).

Please read this Assembly Instruction carefully and follow the recommendations.


200914 Page 1 of 14

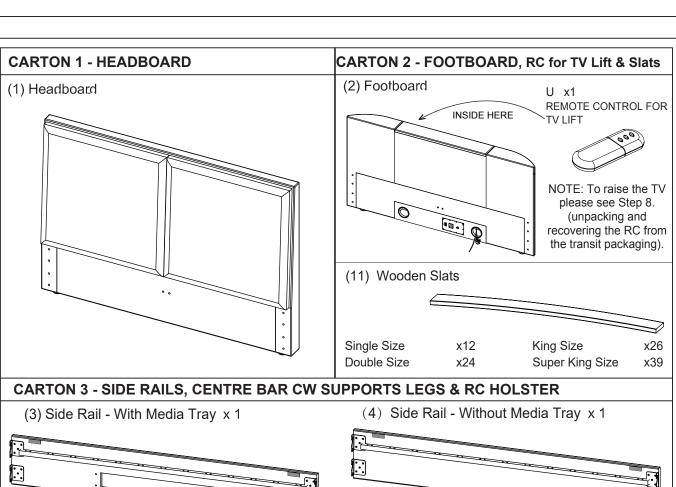

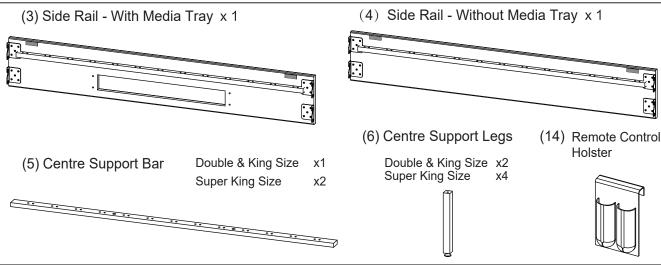


CARTON 4 - MEDIA TRAY PARTS & ACCESSORY BOX CW HARDWARE & TV CABLES

 (7) Media Tray Side Panel - Left x1



(9) Media Tray Base Panel x1

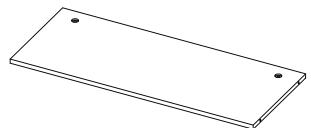


(12) Single Plastic Caps Single S



Single Size x24
Double Size x24
King Size x26
Super King Size x26

 (8) Media Tray Side Panel - Right x1



(10) Media Tray Support Legs x2




(13) Double Plastic Caps





Double Size x12 King Size x13 Super King Size x26

The following items are in the accessory box, inside Carton 4 **Hardware Pack for Bed Assembly** Single Size x16 С B x16 D x1 A x16 Double & King Size x22 Super King Size Bolts M8x30mm for fitting side rails (3&4) to headboard & footboard (1&2) Allen Key (5mm for M8 bolt) Spring M8 Washers Flat M8 Washers E Double & King Size x 6 F Double & King Size x2 G Double & King Size x2 H Double & King Size x2 Super King Size x12 Super King Size Super King Size Super King Size Bolts M6x40mm for Bolts M8x20mm for fitting fitting centre support leg Centre Bar (5) and L metal Spring M6 Washers Flat M6 Washers (6) to centre support bar (5) bracket (R) J x1 Double & King Size x2 Super King Size х4 Metal Bracket for fitting to centre bar (5) Allen Key (4mm for M6 bolt) **Hardware Pack for Media Tray Assembly** C x4 A x6 L x4 M x4 Screws (5x50mm) for Flat M8 Washers for fitting Plastic Barrel Nuts for Bolts M8x30mm for fitting to Media Tray M8 Bolts Media Tray to side rail (3) assembling Media Tray panels assembling Media Tray panels **TV Cables & Accessories** P x2 Q x1 R x3 S x3 N x1 Mains Power **HDMI** Leads Aerial Lead Lead 3mt Cable Clips 2.8mt 4 mt Cable Ties W x1 V x1 a x1 TV Remote Control User Guide for TV Spanner for TV VESA Bolts

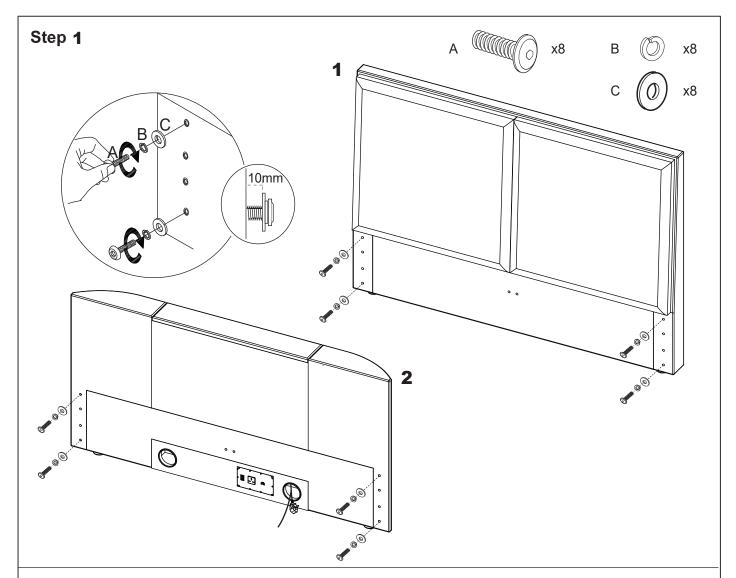



Step 2 If Single size was purchased choose which side to fit the media tray then go straight to Step 3A. If Double or King size was purchased please assemble centre support bar shown in this Step. If Super King size was purchased, please assemble centre support bar shown in this Step TWICE.

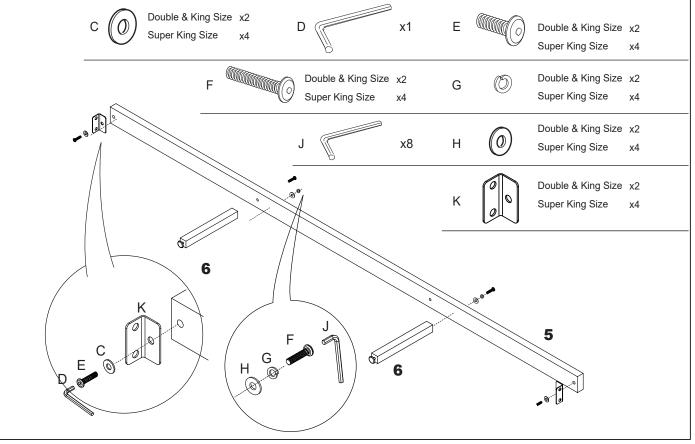

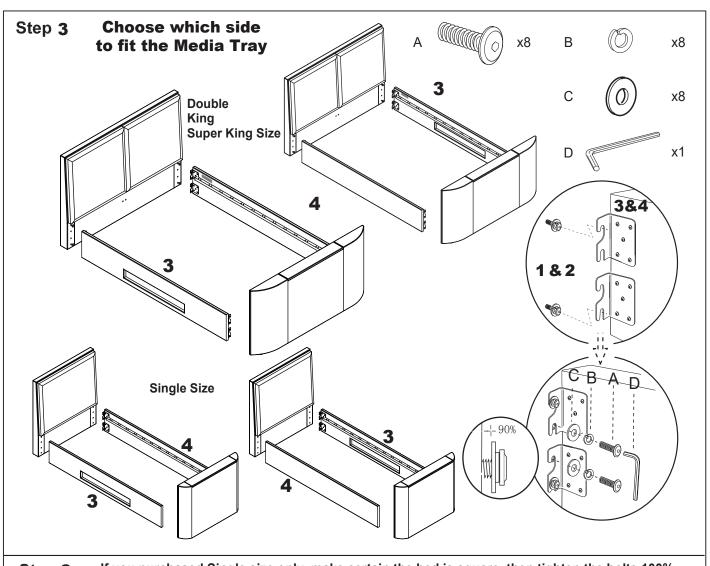


If you purchased Single size only, make certain the bed is square, then tighten the bolts 100%. Step 3a Step 4 Double & King Size x4 Double & King Size x4 Super King Size Super King Size Fit the Centre Bar(s) carefully, do not scratch the fabric **Super King Size Double & King Size** D 1 & 2 Make certain the bed is squared up as shown in the diagram then tighten all bed assembly bolts 100%.

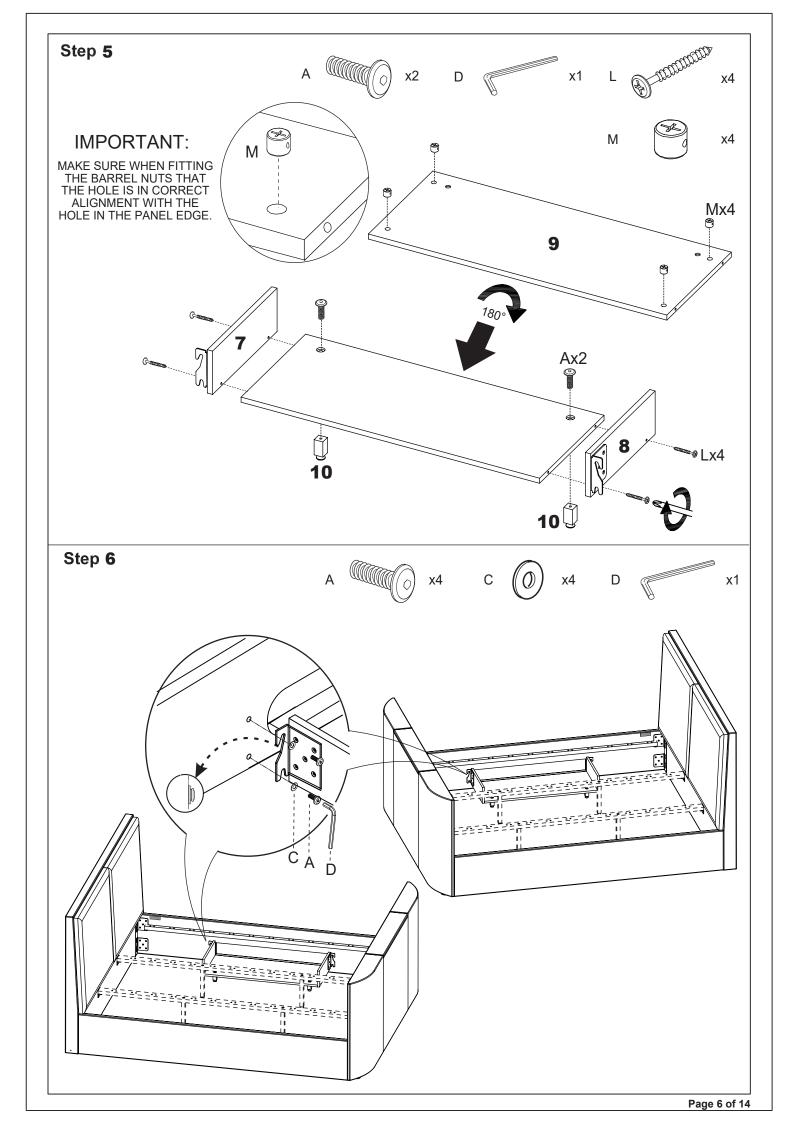

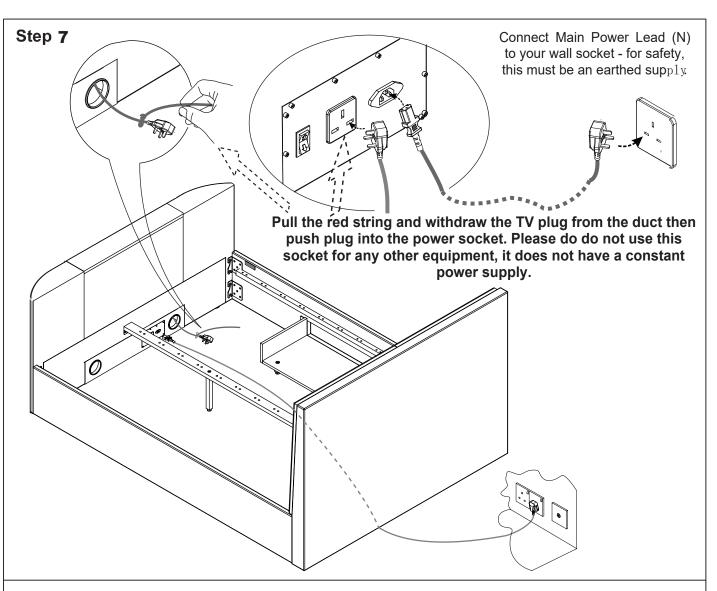


Step 8 Recover the TV Lift Remote Control from the transit packing

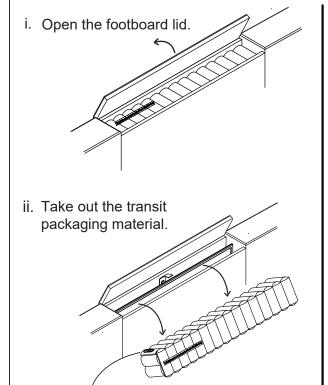

iii. Recover Remote Control (U)


from rear of the packaging.

iv. Press the "UP" button to raise the TV lift.

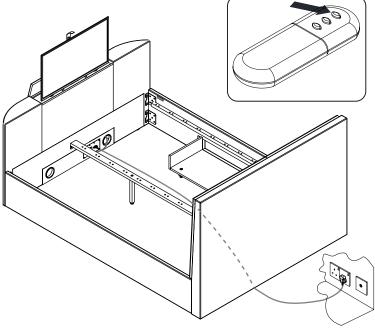


v. Carefully remove all transit packing and television screen protective cover and dispose of responsibly.

Step 9 FEED THE HDMI CABLES THOUGH THE DUCT & CONNECT TO TV

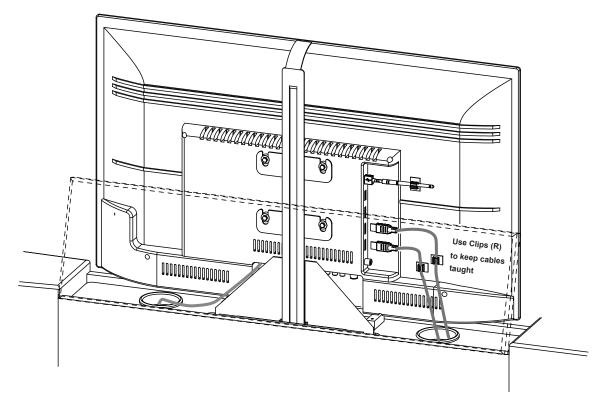


Only if WiFi reception needs to be improved, unclip antenna & raise as shown in the picture. Do not allow antenna to lean backwards or it shall get trapped & break off.

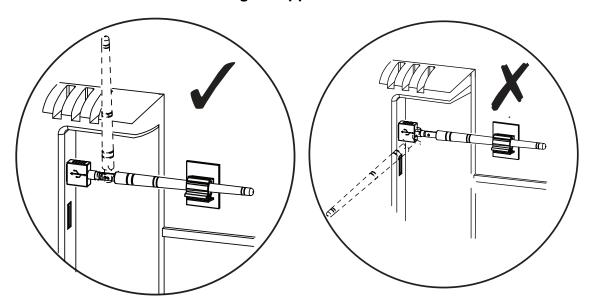





PLUG IN - KEEP ALL CABLES TIGHT USE CLIPS & TIES PROVIDED.

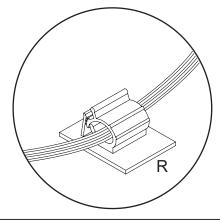


Keep wires tight - peel off cover from cable clips & adhere to back of TV.

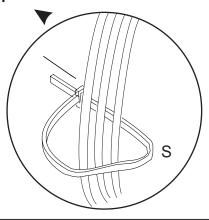

 Step 10 IF YOU NEED TO CONNECT THE AERIAL CABLE (Q), OR ANY OTHER MEDIA CABLES TO THE SOCKETS UNDERNEATH THE TV, PLEASE FOLLOW THESE INSTRUCTIONS.





- 1) Unplug TV from it's power socket.
- 2) Loosen the x4 VESA bolts using spanner (a), there is no need to remove these completely.
- 3) Lift TV off the brackets and hold it safely.

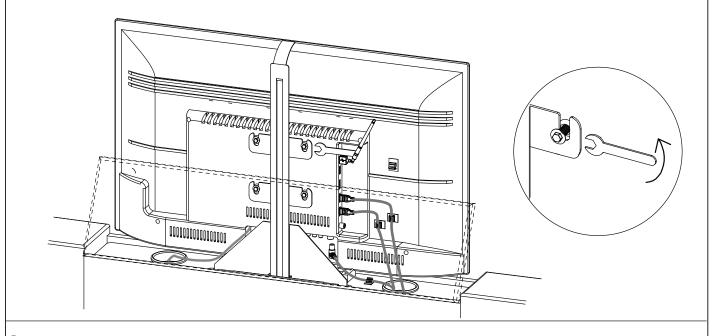



Step 11 Fit the CABLES TO THE SOCKETS.


- 1: Headphone jack
- 2: Network cable interface
- 3: AV1 channel interface (composite video/audio left/audio right)
- 4: AV2 channel interface (composite video/audio left/audio right)
- 5: AERIAL SOCKET (receives DVB-T signal/ATV signal)

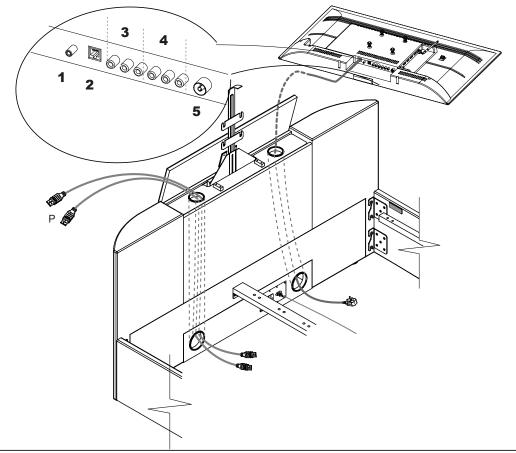

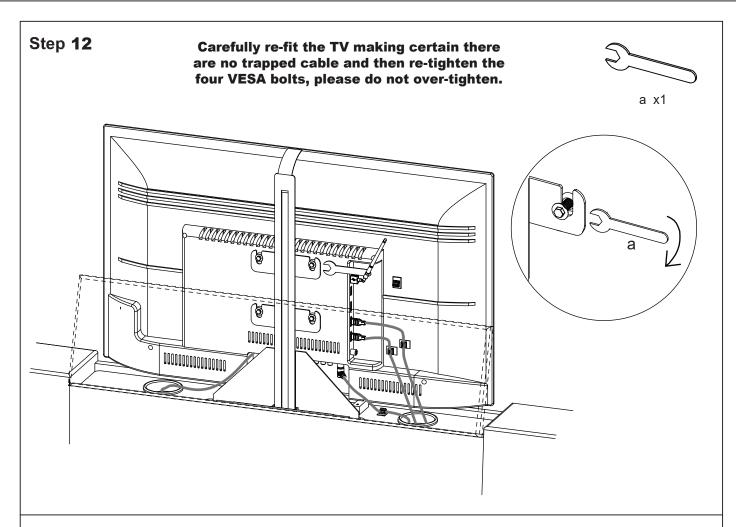

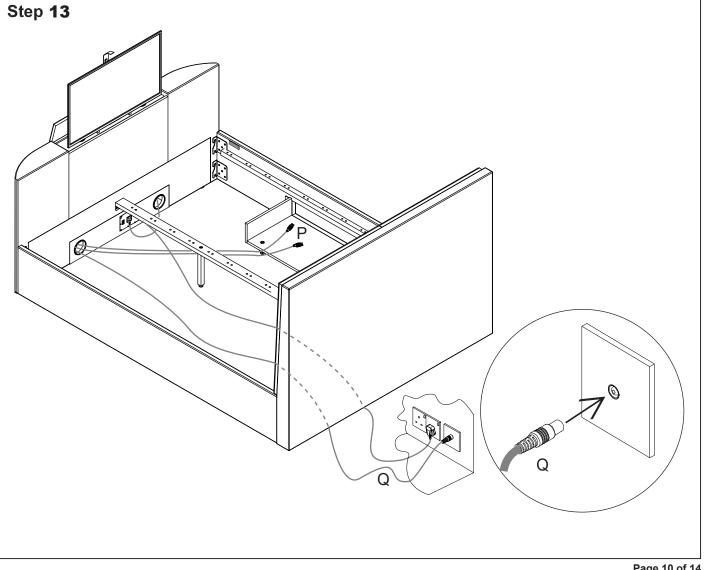


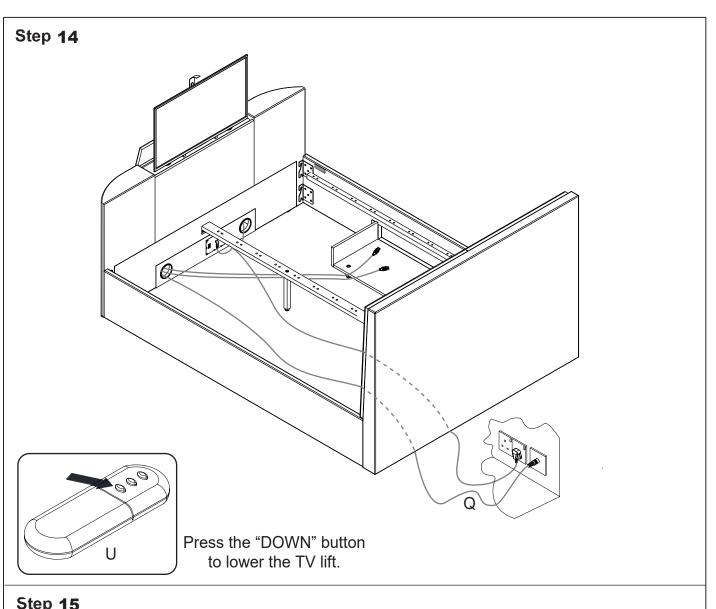


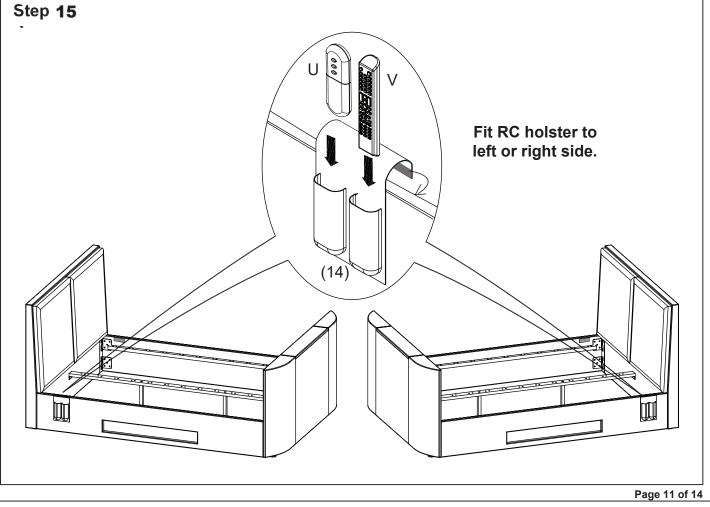



Step **16**

  Single Size

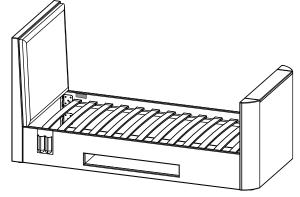






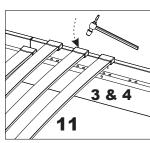


Fix single plastic caps to each end of each slat then place on the slat support rails on both of the side-rails. Align the lugs and tap gently with a light hammer.

Double or King Size

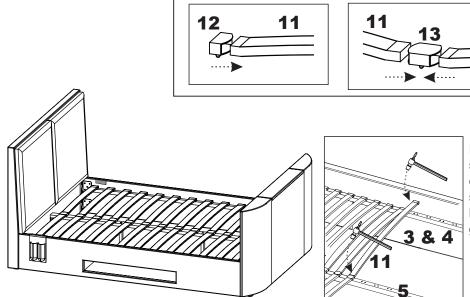

Fit double plastic caps to a pair of slats then fix single plastic caps to each end. Place the set onto centre support bar & slat support rails on both side-rails. Align the lugs & tap gently with a light hammer.


Super King Size

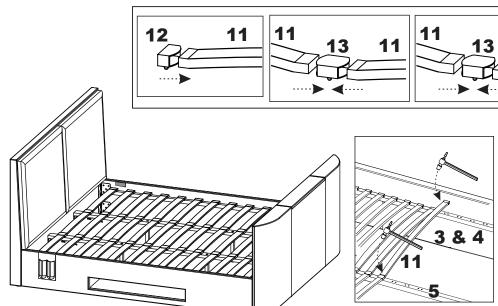

Fit double plastic caps to both ends of one slat. Fix one single cap to ends of two more slats then lay on the centre bars and slat support rails on both of the side-rails and assemble the set together. Align the lugs & tap gently with a light hammer.

11

 Occasionally you may find the radio wave connection between remote control and TV Lift is lost, probably due to atmospheric conditions. In that case please follow these simple instructions:



- ①. Disconnect all mains electric power to the bed, for at least 60 seconds.
- ②. Press UP or DOWN Button on Remote Control and keep holding button down, simultaneously re-connect mains electric power to bed keeping button down for at least a further 5 seconds. TV Lift unit receives signal from Remote Control and lift will begin to move UP or DOWN whichever direction is appropriate.
- ③. Re-connection is now completed.

Overall Dimensions (WxLxH cm)

Internal Dimensions (WxL cm)

 SINGLE:
 99.5 x 220.5 x 116.2/80.2
 92.5 x 193


 DOUBLE:
 144.5 x 220.5 x 116.2/80.2
 137.5 x 193

 KING:
 159.5 x 230.5 x 116.2/80.2
 152.5 x 203

 SUPER KING:
 190.5 x 230.5 x 116.2/80.2
 183.5 x 203

Media Tray Dimensions

All Bed Sizes: 88.5 x 34.7 x 12.8 (WDH cm)

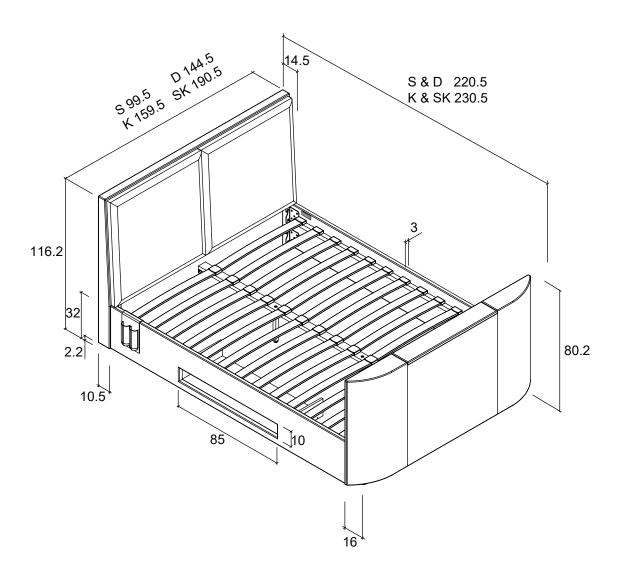

TV BED SAFETY INFORMATION



GENERAL INFORMATION

It is very important not to place any vessel containing liquids, e.g. drinks or vase of flowers on top of the TV footboard that may accidentally spill and enter the TV compartment as this could cause damage to the TV and/or the TV lifting equipment. If this happens turn off the power and contact your retailer.

Do not expose the bed to an undue level of heat - keep away from radiators.

Never allow anyone to sit on the foot end of the bed - keep children well away from moving parts.

To keep your bed clean, we recommend that it be wiped over with a slightly dampened cloth or if fabric, use a light vacuum cleaner; disconnect power before cleaning.

Supplied with the bed is a remote control to operate the TV Lift and one to operate the TV itself. Both these remotes are supplied with batteries that last a reasonable amount of time - there are no batteries in the rest of the equipment.

When it is time to change the batteries there are strict controls for disposal of the old ones - your local council can advise on how to safely dispose of them. Never burn batteries on an open fire as they could explode.

IMPORTANT POWER INFORMATION

It is essential that the Mains Power Lead (N) is connected to an <u>earthed</u> socket be it a wall socket or extension lead - otherwise there is risk of damage or even electric-shock.

The socket providing the power must be accessible at all times in case you need to switch off the power quickly.

During an electrical or lightening storm - disconnect the power completely as a precaution.

Always un-plug the power when going on holiday or when the bed is not used for an extended period.

If you have young children in the home always disconnect the power at the wall socket for extra safety.

Power outlets, extension leads or adapters must not be overloaded beyond their limit - this can result in fire or electric shock. Cables supplied with this bed, or other approved mains powered extension leads used to power your equipment, must not be placed where they can be walked on - this is dangerous and could lead to accidents.

Do not interfere with or modify any cables already fitted and do not add any extra media leads unless they are routed through the ducts as shown in Step 11. All leads must be tightly connected to back of TV, never hanging loose.

Never touch moving parts or any part of the equipment - if something needs to be checked, disconnect the power first. Do not insert anything into the footboard as this could seriously damage the TV and/or the TV lifting equipment and could, if done carelessly, cause serious damage or injury.

If the equipment doesn't operate normally or if there is any unusual noises, disconnect the power.

TELEVISION INSTALLATION

Before fixing the slats to the bed, please follow the instructions below.

Carefully remove any transit protection material from inside the footboard of the bed (2).

Raise the TV Lift by pressing the TOP button of the remote control. The bed comes with a 32" SMART TV already fitted, read the User Guide carefully (W).



Connect the TV Power Lead by feeding plug down the duct as shown in Step 8 plugging it into the TV power socket which is on the face of the footboard - see Step 13.

This socket is only to be used for the TV, this does not have a constant power supply.

Connect the HDMI cables (P) to TV, as in Step 9.

If required you can connect the aerial or your own Phono cables to the connection board underneath the TV see Step 10. Please use the cable clips & cable ties to make certain there are no loose wires to snag or get trapped.

The television can now be operated following the TV User Guide (W). When finished viewing, lower the TV back into the footboard by pressing DOWN button of the remote control.

The TV will retract into the footboard automatically - for safety, power shall be turned off to the TV when it reaches the bottom rest position.

When the UP button is pressed - the TV Lifting Column rises and power to the TV turns back on automatically.

TROUBLE SHOOTING

If your equipment does not operate please check all the power connections, to the wall socket and that power is reaching the mains current socket in the footboard.

Make sure TV is switched on. (Note: TV will only work when it is in the up position).

If the television or TV Lift still fails to operate please contact your retailer.

IMPORTANT: Care should be taken when connecting electrical items. If you are in any doubt about the connections please consult an approved electrician. If you still have a problem please contact your retailer for advice.

Please dispose of all packaging safely.

General Care & Maintenance

Wipe clean with a slightly damp cloth. Avoid the use of all household cleaners and abrasives.

Periodically check all screw & fixings to ensure they are secure.

When moving your product, carefully lift into place. Never drag or push the pieces across the floor as this will cause damage to the joints and could result in failure to the product that will invalidate the warranty.

For more information on cleaning and product care visit: https://www.happybeds.co.uk/help-and-advice

Notes

We've tried to make this product as easy to assemble as possible. In the unlikely event that you have problems putting it together or have damaged or missing pieces, please contact us by visiting:

https://www.happybeds.co.uk/customer-service



