

# Aurora Ottoman Bed - 5ft & 6ft



# **Assembly Instructions**

## Important before assembly:

Read these instructions carefully before assembling or using the product.

Please check the contents of the boxes before attempting to assemble this product. The instructions will have a checklist of parts and fittings.

Assemble the product as close to its intended final location/room as possible.

## **Health & Safety:**

This product or some parts of this product will be heavy. Please use an assistant when lifting.

Please keep small parts out of reach of children.

Always use on a level, even surface.

DO NOT jump on the product or any of its parts.

DO NOT use this product if any parts are missing, damaged or worn.


DO NOT use this product unless all fixings are secured.

#### Further instructions are on the following pages.

Please keep these instructions for future reference.



Do NOT use any power tools as this may damage the frame.

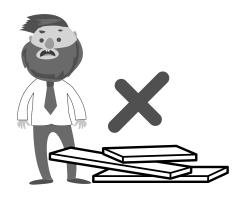




This product or some parts of this product will be heavy. Please use an assistant when lifting.





Never drag or push the pieces across a hard or stone floor as this will cause damage to the joints. Use a carpet or a rug for extra care.




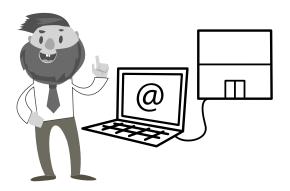

If you have problems assembling or have damaged or missing pieces, please contact our customer services (details at the back of these instructions)


No	Part List	Qty	Box
Α	Headboard	1 pc	1
В	Footboard	1 pc	2
С	Side Rail	2 pcs	3
D	Metal Bed Base Frame	1 set	
Е	U-bracket	2 pcs	
F	Base Handle	2 pcs	4
G	Hydraulic Base Support	2 pcs	4
Н	Hydraulic Pump	2 pcs	
ı	Support Bed Base Leg	1 pc	
J	Bottom Bed Base	4 pcs	5
K	Cross Bar I	1 pc	
L	Cross Bar II	2 pcs	4
М	Support Cross Bar Leg	3 pcs	
N	Bed Base Support Rail	2 pcs	3
0	Headboard Wing	2 pcs	4
Р	Leg	4 pcs	4

No	Hardware List		Qty	Box
1	JCBB M6 x 20mm		8 pcs	
2	JCBB M6 x 35mm		8 pcs	
3	JCBC M6 x 45mm		12 pcs	
4	JCBC M6 x 80mm		2 pcs	
5	JCBB M8 x 20mm		20 pcs	
6	JCBB M8 x 40mm		14 pcs	
7	JCBB M8 x 45mm		6 pcs	
8	M8 Spring Washer	0	6 pcs	
9	M6 Flat Washer	0	8 pcs	3
10	M8 Flat Washer	0	14 pcs	
11	M6 Hex Nuts		18 pcs	
12	M8 Hex Nuts		6 pcs	
13	Allen Key M4		1 pc	
14	Allen Key M5		1 pc	
15	M6 Spanner	25	1 pc	
16	M8 Spanner	2	1 pc	
17	Plastic Washer		4 pcs	
18	L-Shape Metal Corner Bracket		2 pcs	4

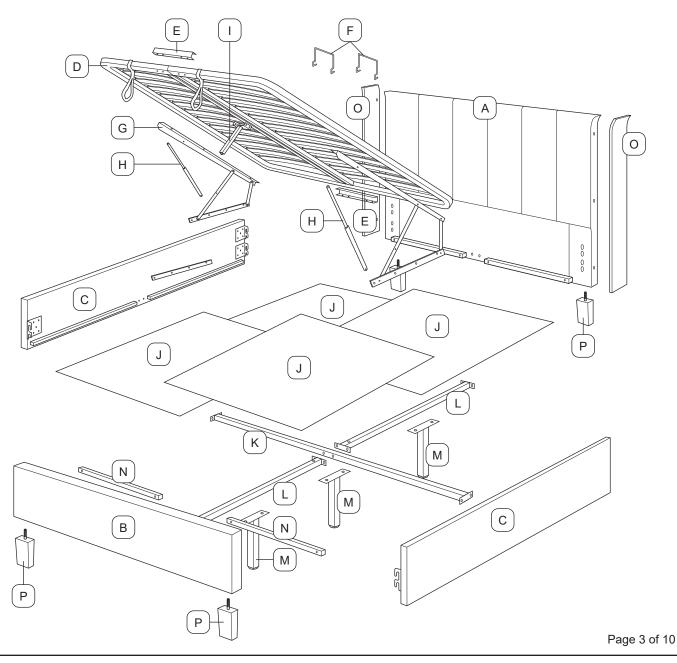


#### Step 1:

To fix the support bed base (N) to the footboard (B) you will need to use hardware parts 3 with the M4 allen key (13).

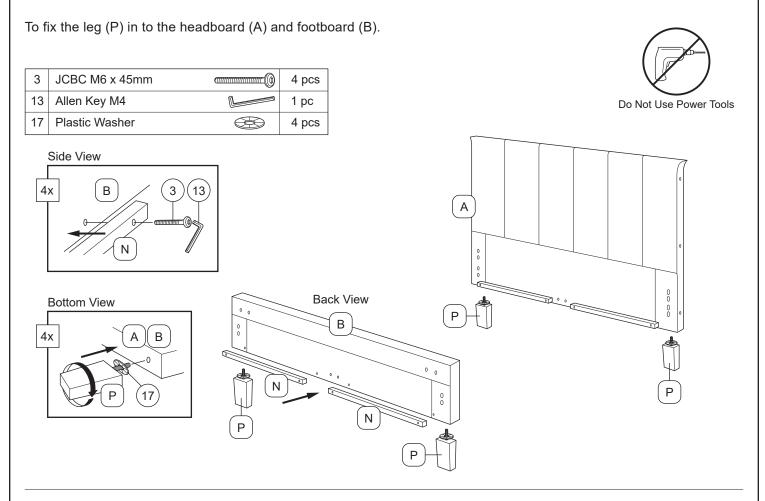

#### Step 2:

To fix the left side rail (C) and right side rail (C) to the headboard (A) and footboard (B) you will need to use hardware parts 5 with the M5 allen key (14).

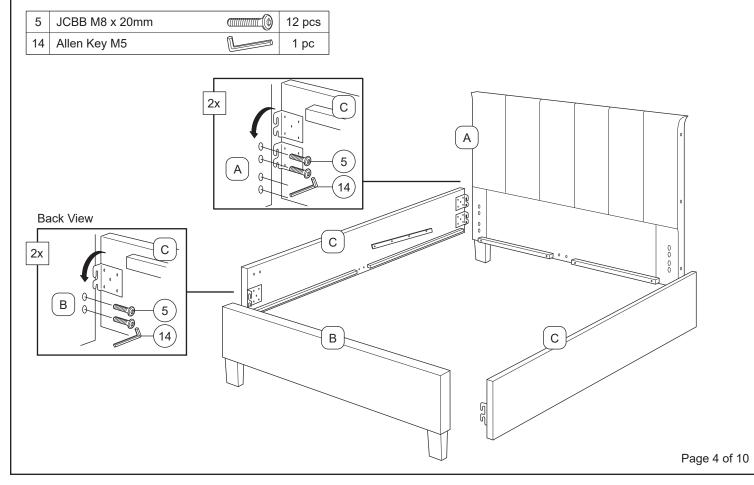


#### Step 3:

To assembler the cross bar I (K), II (L) you will need to use hardware parts 2 with the M4 allen key (13).

To assembler support cross bar leg (M) after cross bar I, II completed.

	2	JCBB M6 x 35mm		8 pcs
	11	M6 Hex Nuts		8 pcs
1	13	Allen Key M4		1 pc
-	15	M6 Spanner	2	1 pc



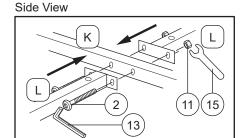

Top View

13


K
2

L

11

M


15

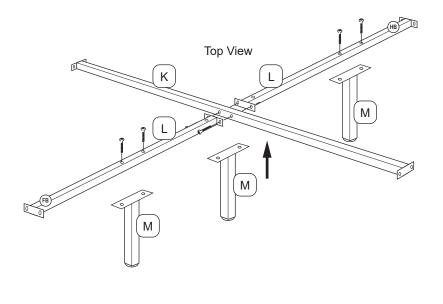

#### Step 4:

To fix the cross bar I (K), II (L) to the footboard (B), side rails (C), you will need to use hardware parts (1) and the M4 Allen Key (13).

To attached the L Shape Metal Corner Bracket (18) to the footboard (B) and side rails (C) you will need to use hardware parts (5) with the M5 Allen Key (14).

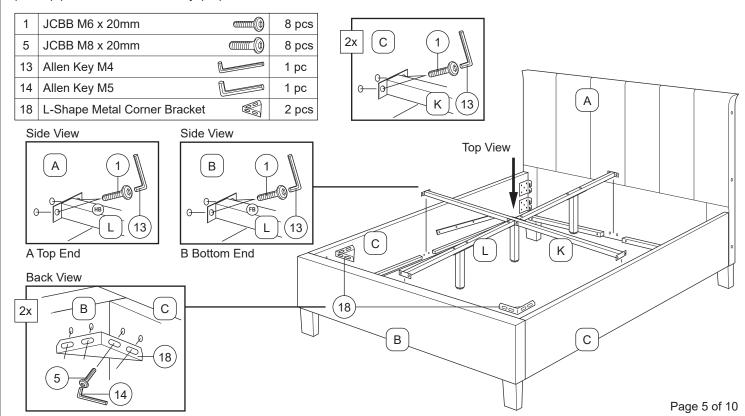

#### Step 5:

To install Hydraulic (H) to the Hydraulic Base Support (G), you will need to loose out the M8 HEX nut from the part (G). After the part (H) go inside the position, put back the M8 HEX Nut and tighten it using M8 Spanner (16).


To install the complete set of (G) to the left and right side rail (C), you will need to use hardware 6 and 8 with Allen key M5 (14).

To assemble part G, it is a must to make sure the hole go into the right position as shown in (NOTE). And before tighten the screw, please make sure part G is in same alignment in between left and right side rail.

**DO NOT** use any power tools as this may damage the bed frame and will invalidate any claims.

6	JCBB M8 x 40mm		8 pcs
10	M8 Flat Washer		8 pcs
14	Allen Key M5		1 pc
16	M8 Spanner	2	1 pc



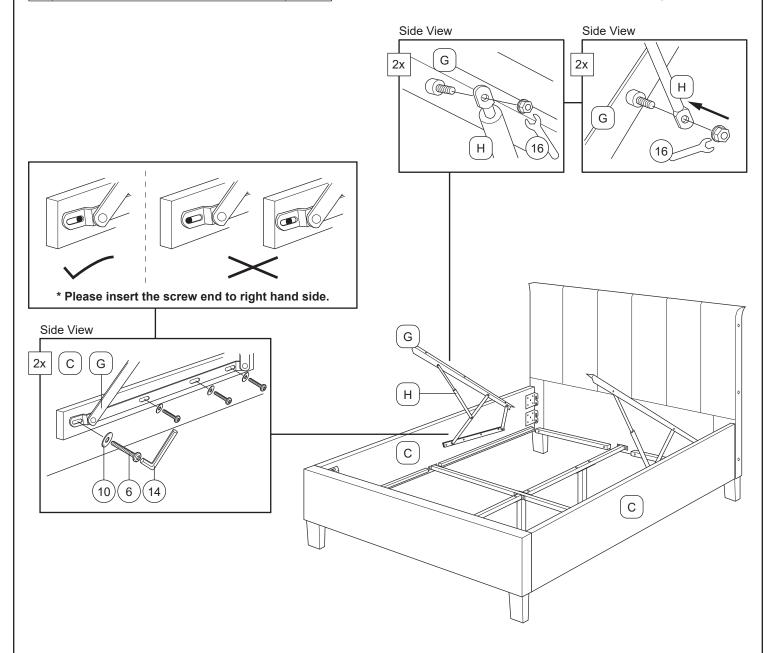


#### Step 6:

To assemble part D, it is a must to make sure the hole go into the right position as shown in (NOTE). And before tighten the screw, please make sure part G is in same alignment in between left and right side of part G.

#### **DO NOT** use any power tools as this may damage the bed frame and will invalidate any claims.

3	JCBC M6 x 45mm		8 pcs
4	JCBC M6 x 80mm		2 pcs
9	M6 Flat Washer	0	8 pcs
11	M6 Hex Nuts		10 pcs
13	Allen Key M4		1 pc
15	M6 Spanner	2	1 pc



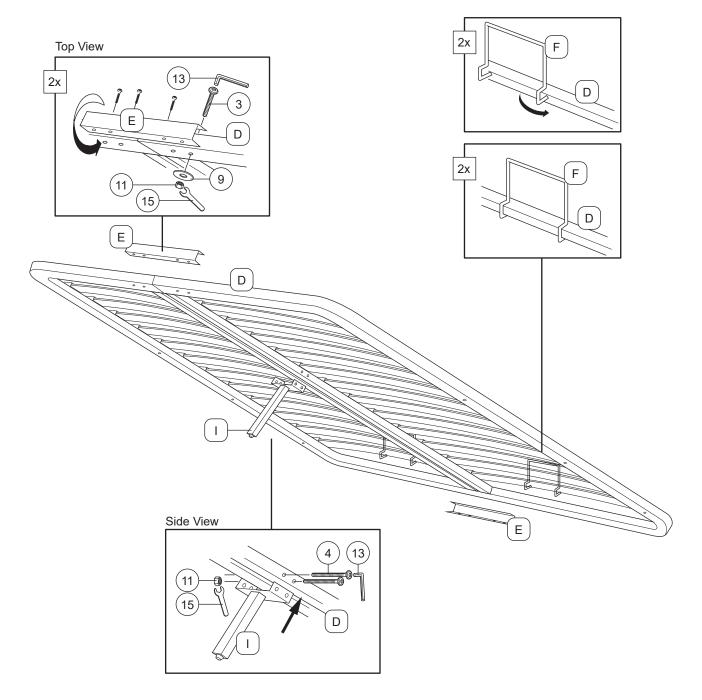

#### Step 7:


To assemble part D, it is a must to make sure the hole go into the right position as shown in (NOTE). And before tighten the screw, please make sure part G is in same alignment in between left and right side of part G.

#### **DO NOT** use any power tools as this may damage the bed frame and will invalidate any claims.

7	JCBC M8 x 45mm	<b>(IIIIIIIII)</b>	6 pcs
12	M8 Hex Nuts		6 pcs
14	Allen Key M5		1 pc
16	M8 Spanner	$\sim$	1 pc



Do Not Use Power Tools

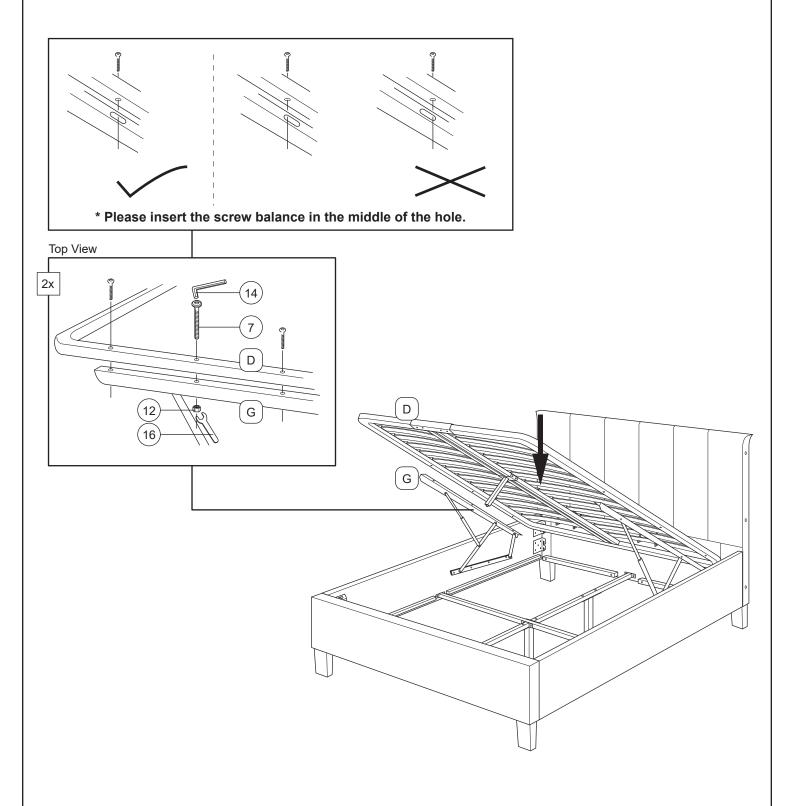


#### Step 8:

To put the 4 X BOTTOM PANEL (J), you will need to slightly raise up the beds from the footboard (B) and slot in the panel go direct to the headboard and continue the second pieces there after the first pieces was in right position.

To assembler the wing (O) you will need to open the velco behind the headboard (A) as shown.

DO NOT use any power tools as this may damage the bed frame and will invalidate any claims.

6	JCBC M8 x 40mm		6 pcs
8	M8 Spring Washer	<b>©</b>	6 pcs
10	M8 Flat Washer	0	6 pcs
14	Allen Key M5		1 pc

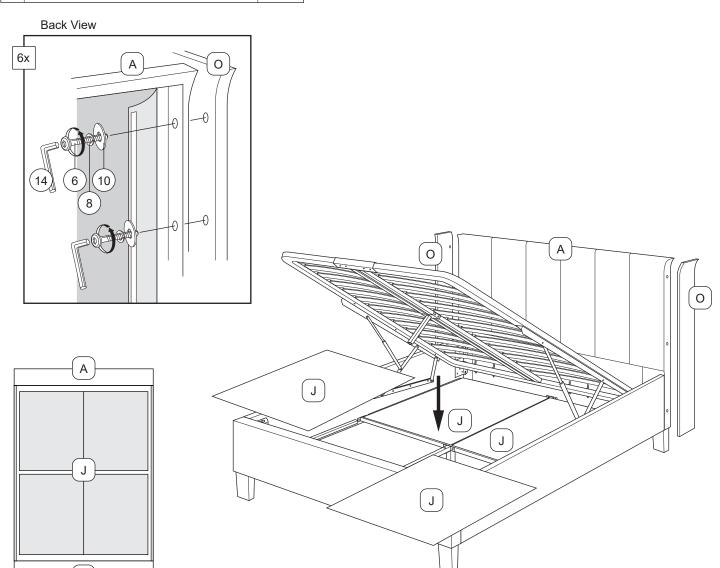

#### **COMPLETE**

#### **WARNING:**

В

Take care when assembling the base, assemble the ottoman as closed to its final position. The Ottoman has a powerful mechanism and after assembly should only be closed and opened when the mattress is in place.



www.happybeds.co.uk

## Important for Ottoman and other gas lift beds

#### Please follow these final steps to ensure the best experience with your new bed

- Please ensure the pistons are fitted to the bed frame.
- Please place the mattress on top of the bed frame.
- Standing at the foot of the frame (looking at the headboard) open the base and the press quite forcefully down on the mattress please do not attempt to do this without the mattress being in place.
- Please do not pull on the strap handles.
- Please note as the pistons are full of gas you will need to press heavily to release the compressed gas.
- Once done the pistons should start operating as normal.







Please dispose of all packaging safely.

### **General Care & Maintenance**

Wipe clean with a slightly damp cloth.

Avoid the use of all household cleaners and abrasives.

Periodically check all screw & fixings to ensure they are secure.

When moving your product, carefully lift into place. Never drag or push the product across the floor as this will cause damage to the joints. If the product is used on hard flooring, such as wood or laminated floor, you must place some protection under the legs to stop the product from moving. If this is not adhered to, it could result in failure to the product that will invalidate the warranty.

For more information on cleaning and product care visit: https://www.happybeds.co.uk/help-and-advice

### **Notes**

In the unlikely event that you have problems putting this product together or have damaged or missing parts, please contact us by visiting:

https://www.happybeds.co.uk/customer-service

