


Castello Ottoman Sleigh Bed - Double/King Size

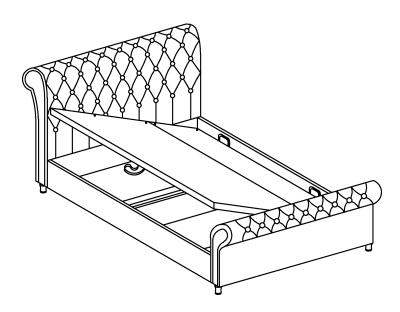

Assembly Instructions

Important before assembly:

Read these instructions carefully before assembling or using the product.

Please check the contents of the boxes before attempting to assemble this product. The instructions will have a checklist of parts and fittings.

Assemble the product as close to its intended final location/room as possible.

Health & Safety:

This product or some parts of this product will be heavy. Please use an assistant when lifting.

Please keep small parts out of reach of children.

Always use on a level, even surface.

DO NOT jump on the product or any of its parts.

DO NOT use this product if any parts are missing, damaged or worn.

DO NOT use this product unless all fixings are secured.

Further instructions are on the following pages.

Please keep these instructions for future reference.



Do NOT use any power tools as this may damage the frame.






This product or some parts of this product will be heavy. Please use an assistant when lifting.






Never drag or push the pieces across a hard or stone floor as this will cause damage to the joints. Use a carpet or a rug for extra care.



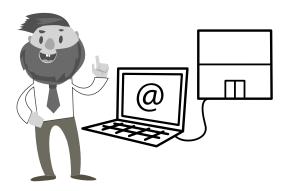


If you have problems assembling or have damaged or missing pieces, please contact our customer services (details at the back of these instructions)



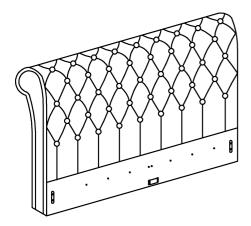



1.Headboard (x1)



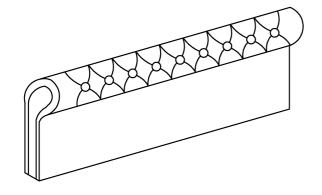

2.Footboard (x1)



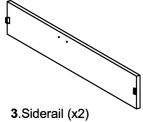



4.Legs (x4)




5.Metal Centre Rail (x1)










8. Pump Mounting Bracket (x2)



9.Bracket Base (x2)



10.Gas Spring (x2)




11.Wooden Frame Bracket (x2)





12.Bed Stopper (x2)





13.Small Wooden Frame(x1) **14**.Big Wooden Frame (x1)




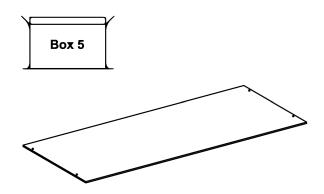


15.Bottom Panel (x4)



All fitting are stored within Box 3

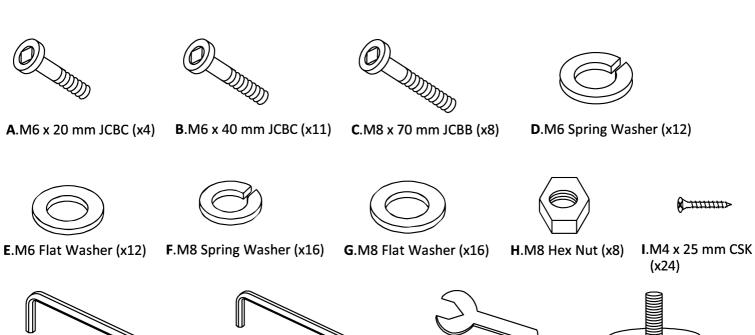







K.Allen Key M5 x 70 mm (x1)



L.M8 Spanner (x1)





M.Adjuster (x3)

*You will need a screwdriver (not provided)

Step 1


Unpack all components from the boxes and check you are not missing anything. Please check these against the list on page 3 & 4. Should you identify any missing components, please contact the retailer you purchased the bed from.

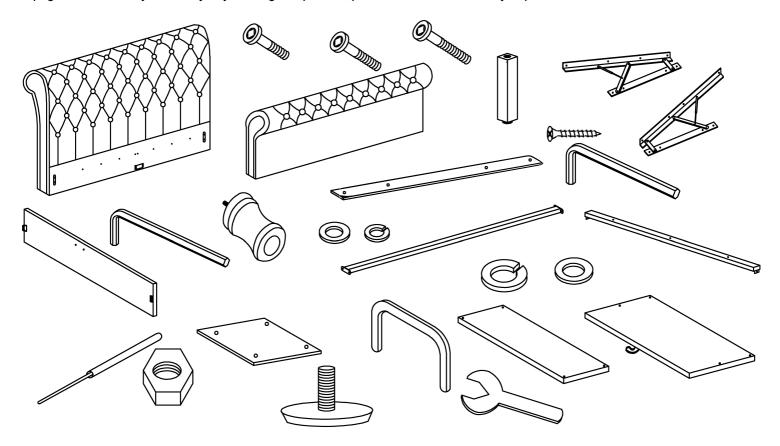

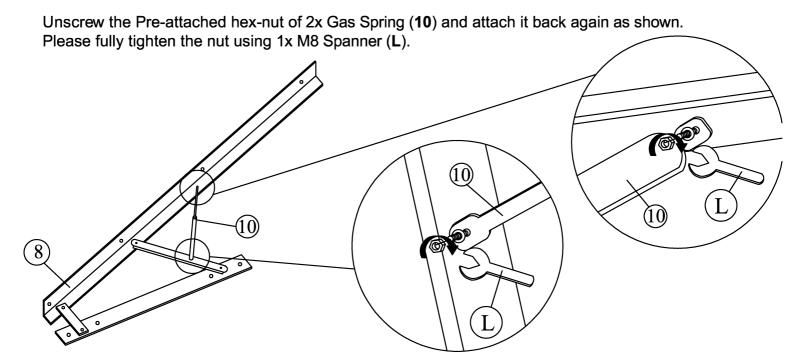


Step 3

Attach the 4x Legs (4) to the 1x Heaboard (1) and 1x Footboard (2).

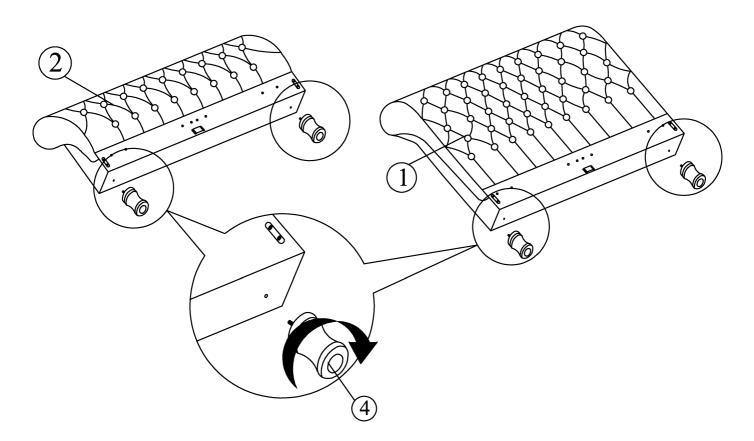


Attach the 2x Pump Mounting bracket (8) and 2x Bracket Base (9) to the 1x Headboard (1) and 1x Footboard (2) using hardware parts 8x M6 x 40 mm JCBC (B), 8x M6 Spring Washer(D), 8x M6 Flat Washer(E) and 1x Allen Key M4 x 65 mm(J).

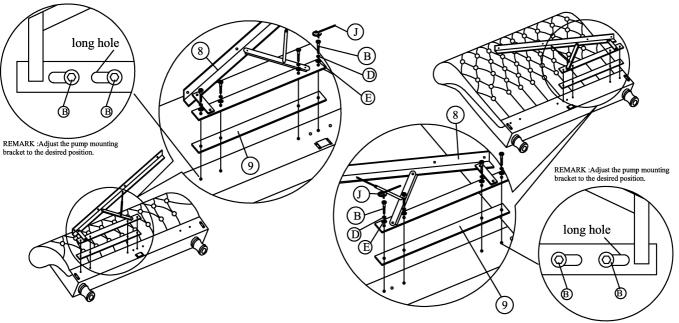


Step 5

Slot the 2x Side Rails (3) to the Bolts attached to 1x Headboard (1). Then slot the 2x Side Rails (3) to the Bolts attached to 1x Footboard (2).

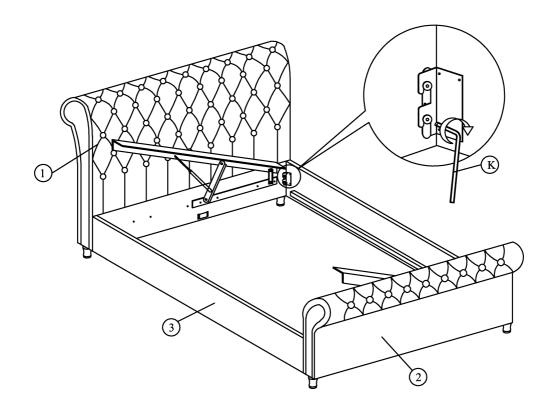


Attach the 3x Support Leg (7) to 1x Centre Rail (6) using 3x M6x40mm JCBC (B) and 1x M4 Allen Key (J). Then, screw 3x Adjuster (M) to Support Leg (7).

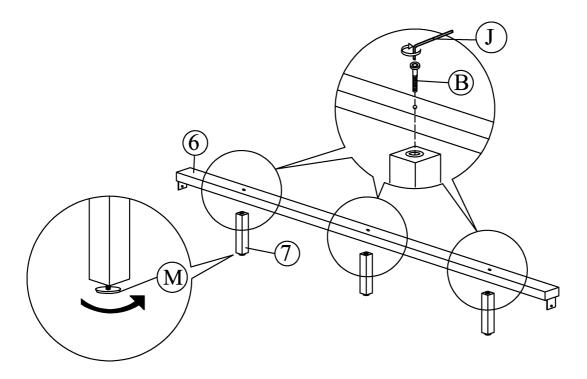


Step 7

Insert the 1x Centre Rail (6) to the 1x Headboard (1) and 1x Footboard (2).

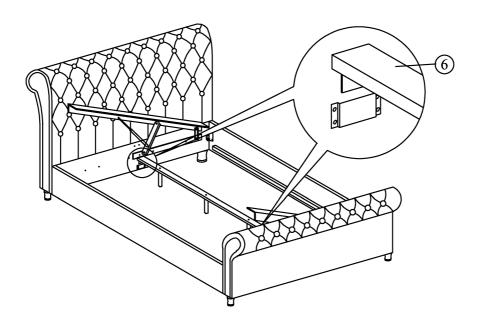


Insert the 4x Bottom Panel (15) to the below frame and secure using hardware 16x M4 x 25 mm CSK (I) and a screwdriver (not provided).

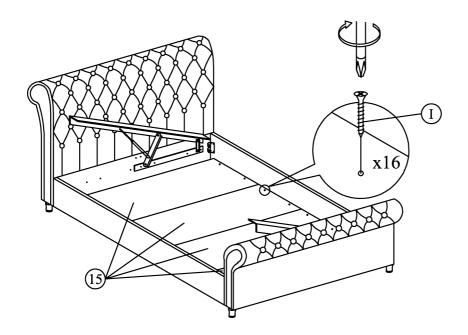


Step 9

Insert the 1x Centre Rail (5) to the 2x Side Rail (3) and secure using hardware part $4x \text{ M6} \times 20 \text{ mm JCBC}$ (A) $,4x \text{ M6} \times 20 \text{ Spring Washer}$ (D) $,4x \text{ M6} \times 20 \text{ Flat Washer}$ (E) and $1x \text{ Allen Key M4} \times 65 \text{ mm}$ (J).

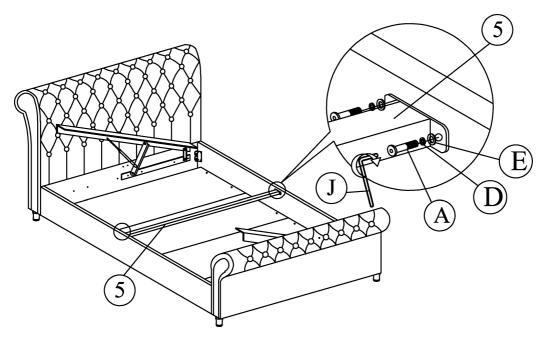


Assemble the 1x Small Wooden Frame (13) and 1x Big Wooden Frame (14) to the bracket and tighten all the fitting accordingly using 8x M8 x 70 mm JCBB (C),16x M8 Spring Washer (F), 16x M8 Flat Washer (G),8x M8 Hex Nut (H),1x Allen Key M5 x 70 mm (K),1x M8 Spanner (L).

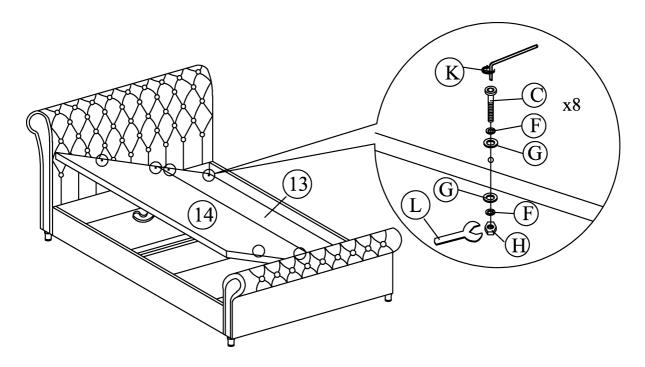


Step 11

Insert the 2x Bed Stopper (12) to the wooden frame as shown.

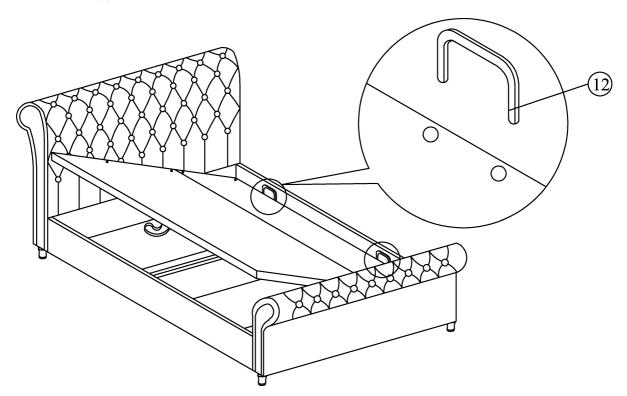


DO NOT use any power tools as this may damage the frame and will invalidate any claim.

Attach the wooden 2x Frame Bracket (11) to the wooden frame using hardware 8x M4 x 25 mm CSK (I) and a screwdriver (not provided).

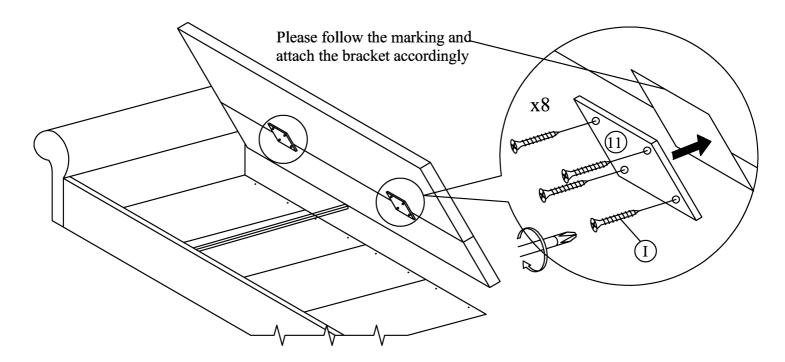

Step 13

Please use the safety lock for safety purpose.

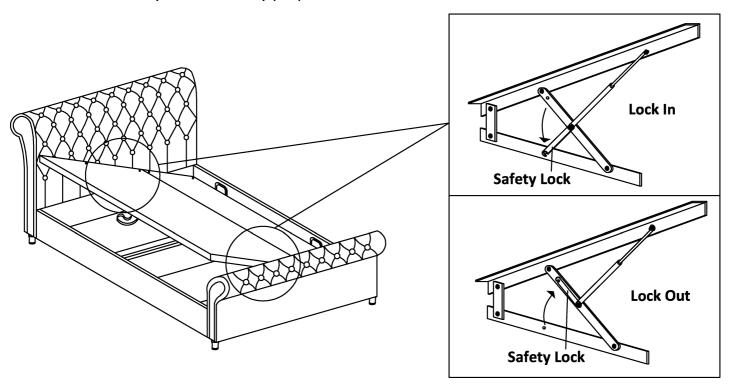



www.happybeds.co.uk

Important for Ottoman and other gas lift beds

Please follow these final steps to ensure the best experience with your new bed

- Please ensure the pistons are fitted to the bed frame.
- Please place the mattress on top of the bed frame.
- Standing at the foot of the frame (looking at the headboard) open the base and the press quite forcefully down on the mattress please do not attempt to do this without the mattress being in place.
- Please do not pull on the strap handles.
- Please note as the pistons are full of gas you will need to press heavily to release the compressed gas.
- Once done the pistons should start operating as normal.







Please dispose of all packaging safely.

General Care & Maintenance

Wipe clean with a slightly damp cloth.

Avoid the use of all household cleaners and abrasives.

Periodically check all screw & fixings to ensure they are secure.

When moving your product, carefully lift into place. Never drag or push the product across the floor as this will cause damage to the joints. If the product is used on hard flooring, such as wood or laminated floor, you must place some protection under the legs to stop the product from moving. If this is not adhered to, it could result in failure to the product that will invalidate the warranty.

For more information on cleaning and product care visit: https://www.happybeds.co.uk/help-and-advice

Notes

In the unlikely event that you have problems putting this product together or have damaged or missing parts, please contact us by visiting:

https://www.happybeds.co.uk/customer-service

