

## Assembly Instructions

### Important: Before Assembly

Please read these instructions carefully before assembling or using the product.

Please check the contents of each box before attempting to assemble this product. The instructions will have a checklist of parts and fittings.

Assemble the product as close to its intended final location/room as possible.

### Health & Safety:

This product or some parts of this product will be heavy. Please use an assistant when lifting.

Please keep small parts out of reach of children.

Always use on a level, even surface.

DO NOT jump on the product or any of its parts.

DO NOT use this product if any parts are missing, damaged or worn.


DO NOT use this product unless all fixings are secured.

Further instructions are on the following pages








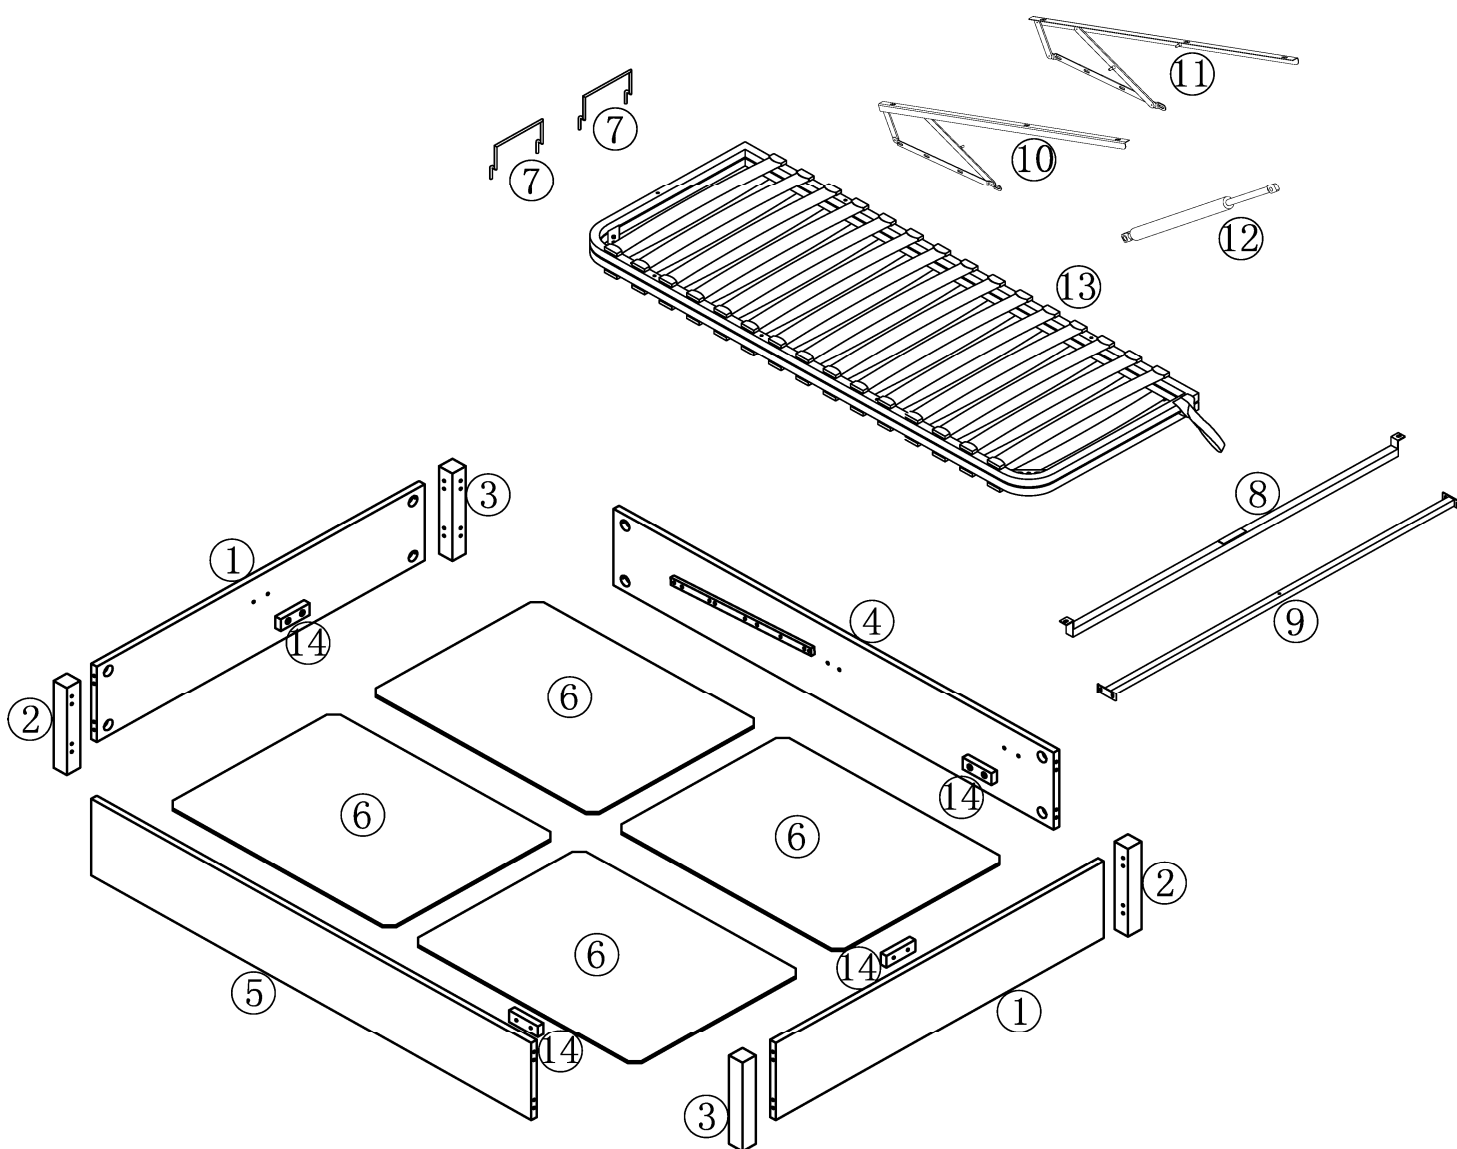


Please keep these instructions for future reference.

No	Part List	Qty	Box
1	Bed frame Headboard - Footboard	2 pcs	1
2	Bed frame leg pairs - LH	2 pcs	3
3	Bed frame leg pairs - RH	2 pcs	3
4	Side rail - RH	1 pc	2
5	Side rail - LH	1 pc	2
6	Storage base boards	4 pcs	3
7	Mattress stoppers	2 pcs	3










No	Part List	Qty	Box
8	Slat frame cross bar	1 pc	3
9	Side rail cross bar	1 pc	3
10	Gas lift mechanism RH	1 pc	3
11	Gas lift mechanism LH	1 pc	3
12	Gas lift pistons	2 pcs	3
13	Metal slat frame	1 pc	3
14	Slat frame support blocks	4 pcs	3



## HARDWARE NEEDED FOR BED ASSEMBLY (PACK A)

No	Hardware List	Qty	Box	No	Hardware List	Qty	Box
A	Threaded stud (M8x80mm) for fitting legs (2 & 3) 	16 pcs	3	F	Dowel (Ø10x40mm) 	16 pcs	3
B	Bolt (M8x35mm) for fitting gas lift mechanism (11) & (12) to siderails (4) & (5). 	8 pcs	3	G	Nut for M8 bolts 	16 pcs	3
C	Spring washer for M8 bolts 	24 pcs	3	H	Flat washer for M8 bolts (Ø19x1.5mm) 	16 pcs	3
D	Flat washer for M8 bolts . (Ø19x1.5mm) 	8 pcs	3	J	Half-moon bracket 	16 pcs	3
E	Allen key for M8 bolts. 	1 pc	3	K	Spanner for M8 Bolts 	1 pcs	3

## HARDWARE NEEDED FOR BED ASSEMBLY (PACK B)

No	Hardware List	Qty	Box	No	Hardware List	Qty	Box
L	Bolt (M8 x 20mm) to fit metal connection plates (P) and side rail cross bar (9). 	10 pcs	3	N	Centre cross bar support block 	1 pc	3
B	Bolt (M8x35mm) for fitting support blocks (14) to side rails, head & footboards 	9 pcs	3	P	Metal slat frame connection plates 	2 pcs	3
C	Spring washer for M8 bolts 	24 pcs	3	G	Nut for M8 bolts 	6 pcs	3
D	Flat washer for M8 bolts . (Ø19x1.5mm) 	31 pcs	3	R	Flanged lock nuts for M8 bolts 	4 pcs	3
M	Bolt (M8 x 50mm) 	6 pc	3				

## IMPORTANT OTTOMAN SAFETY WARNINGS



### IMPORTANT – READ CAREFULLY – RETAIN FOR FUTURE REFERENCE

- You must ensure that the mattress is on the bed frame before operating the lift mechanism – Failure to do so could result in injury.
- Keep hands clear of the mechanism when opening or closing the ottoman.
- Beware of entrapment – Never reach in through the mechanism to access the storage area.
- Always ensure that the ottoman is FULLY opened before accessing the storage area.
- Do not exceed the maximum weight as specified in the table below:







Bed	Bed Size	Min Weight (kg)	Max Weight (kg)
Westbrook Ottoman Bed	Double	20	50
	King	25	55
	Super King	25	60



Step 1:

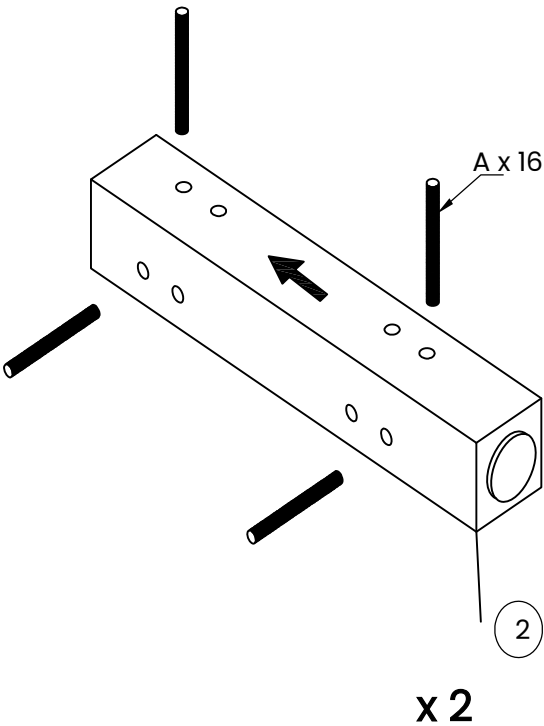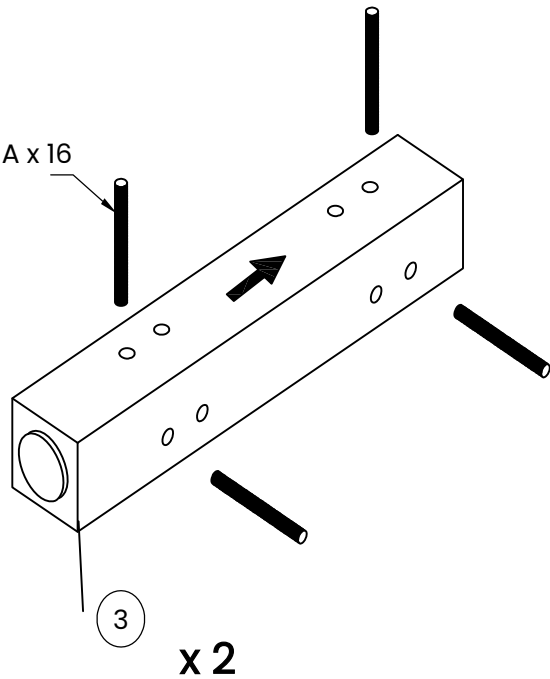A	Threaded Stud		16 pcs
---	---------------	--	--------







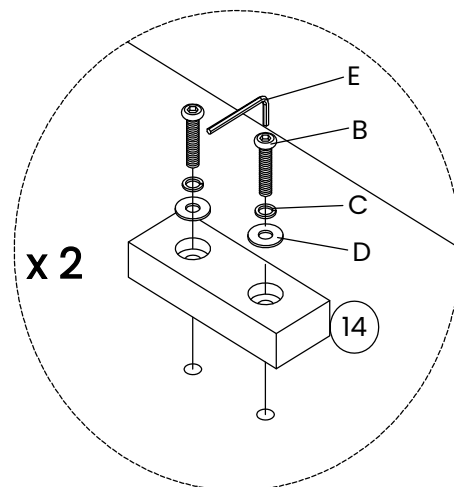
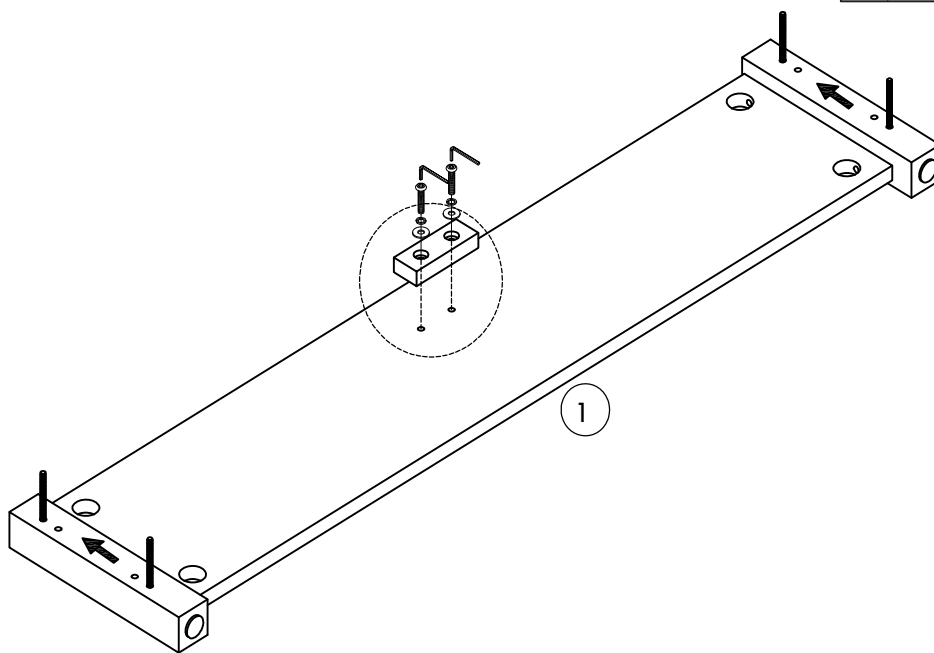
Step 2:

G	Nut for M8 bolts		8 pcs	H	Flat washer for M8 bolts (Ø14x1.5mm)		8 pcs
J	Half-moon bracket		8 pcs	K	Spanner for M8 bolts		1 pcs
C	Spring washer for M8 bolts		8 pcs	F	Dowel (Ø10x40mm)		8 pcs

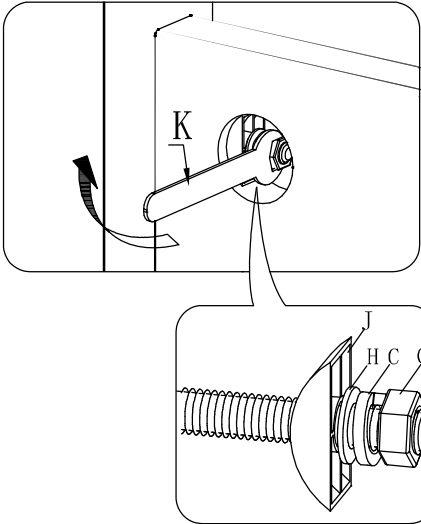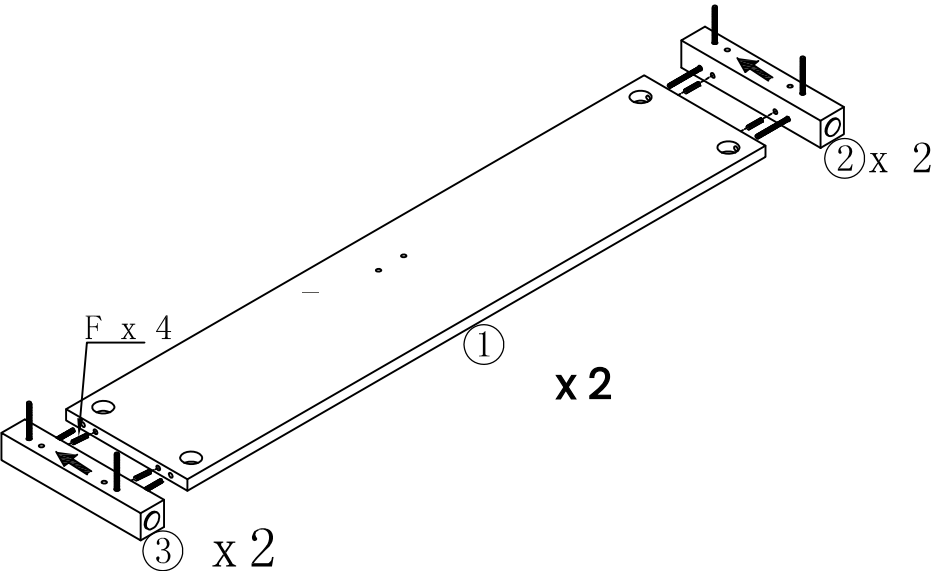





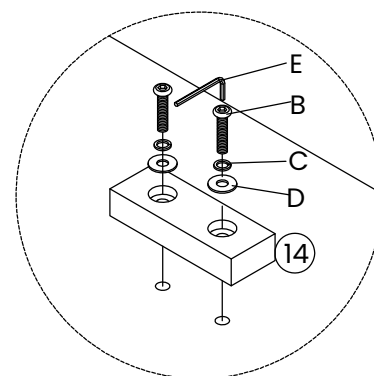
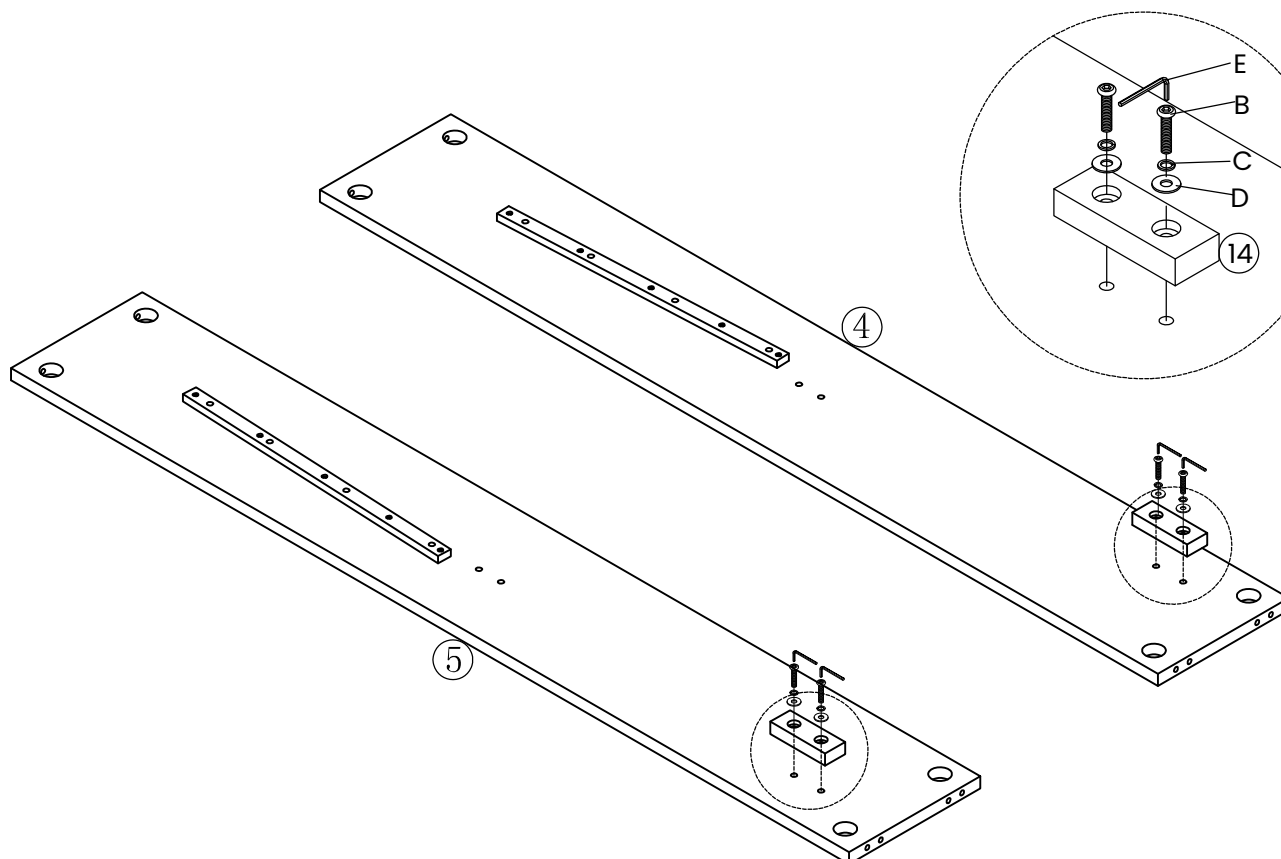
### Step 3:

C	Spring washers for M8 bolts.		4 pcs	B	Bolts (M8x35mm)		4 pcs
D	Flat washers for M8 bolts.		4 pcs	E	Allen key for M8 bolts		1 pc









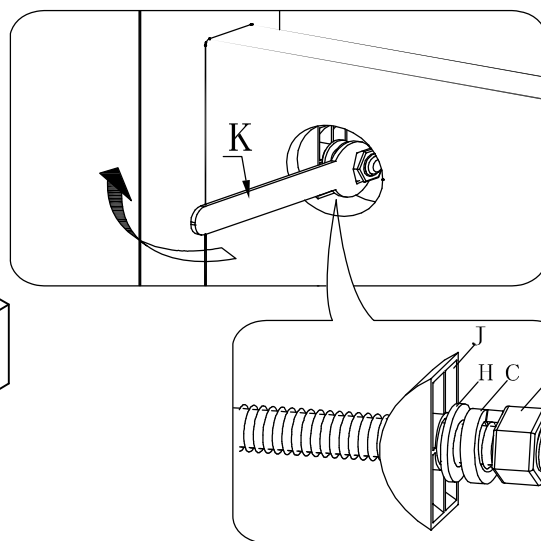
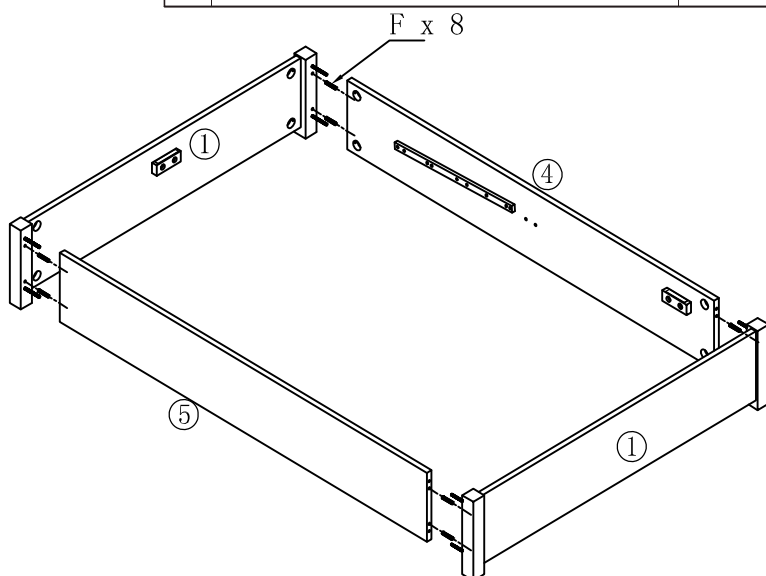
### Step 4:

C	Spring washers for M8 bolts.		4 pcs	B	Bolts (M8x35mm)		4 pcs
D	Flat washers for M8 bolts.		4 pcs	E	Allen key for M8 bolts		1 pc




Step 5:

G	Nut for M8 bolts		8 pcs	H	Flat washer for M8 bolts.(Ø14x1.5mm)		8 pcs
J	Half-moon bracket		8 pcs	K	Spanner for M8 bolts		1 pcs
C	Spring washer for M8 bolts.		8 pcs	F	Dowel (Ø10x40mm)		8 pcs




Step 6:

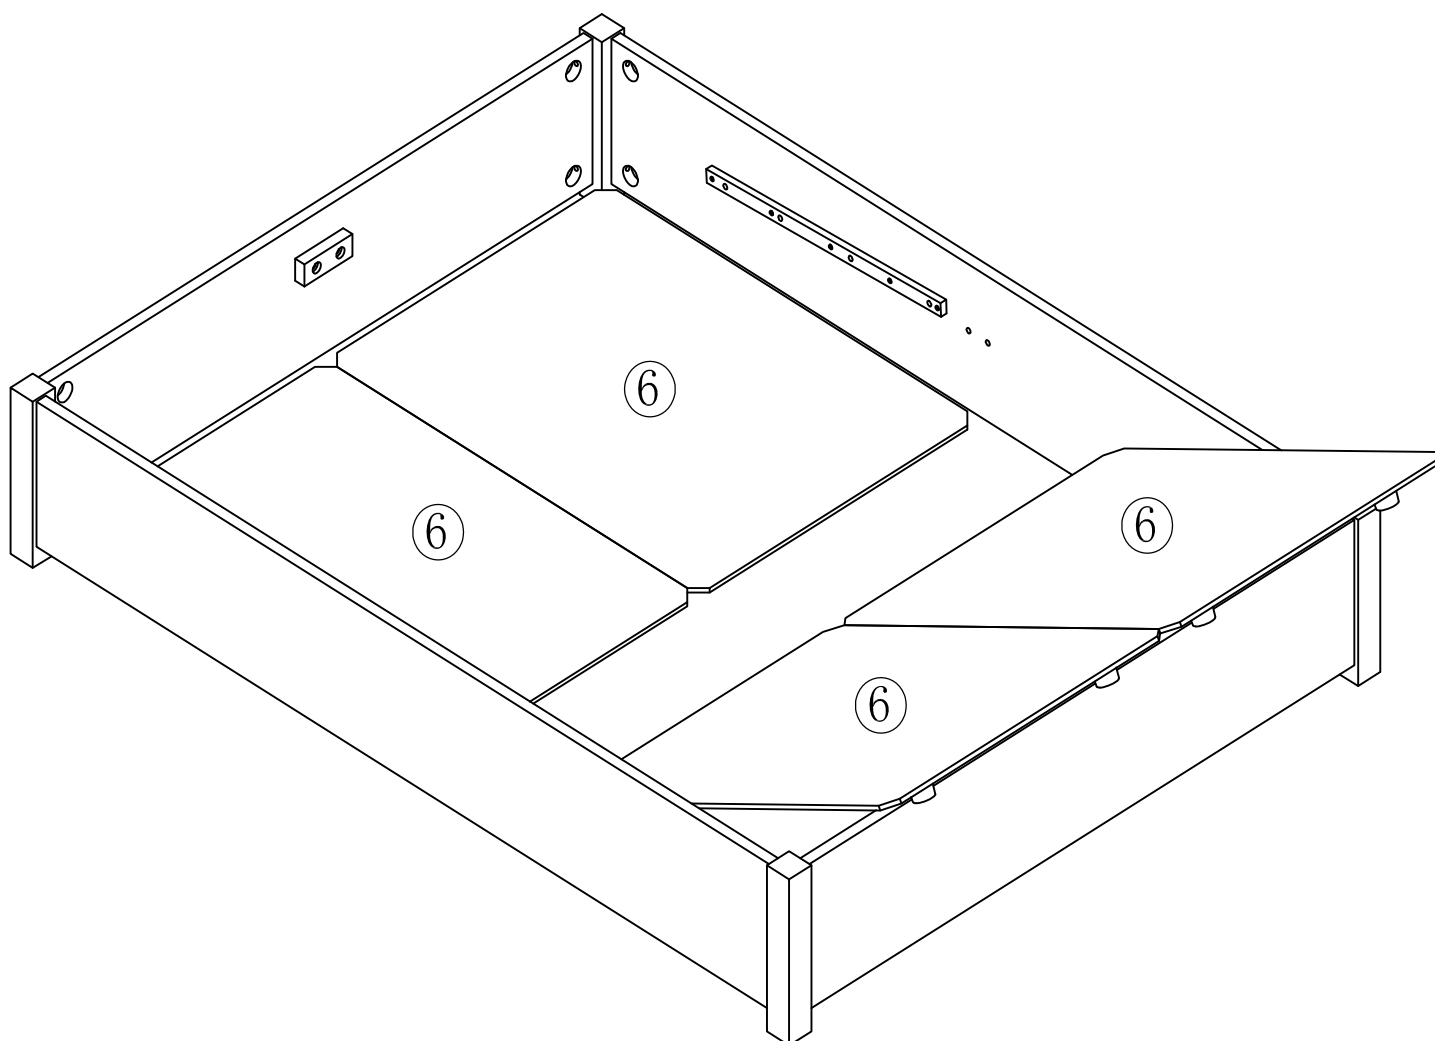


# Step 7:

K	Spanner for M8 bolts		1 pc
---	----------------------	--	------



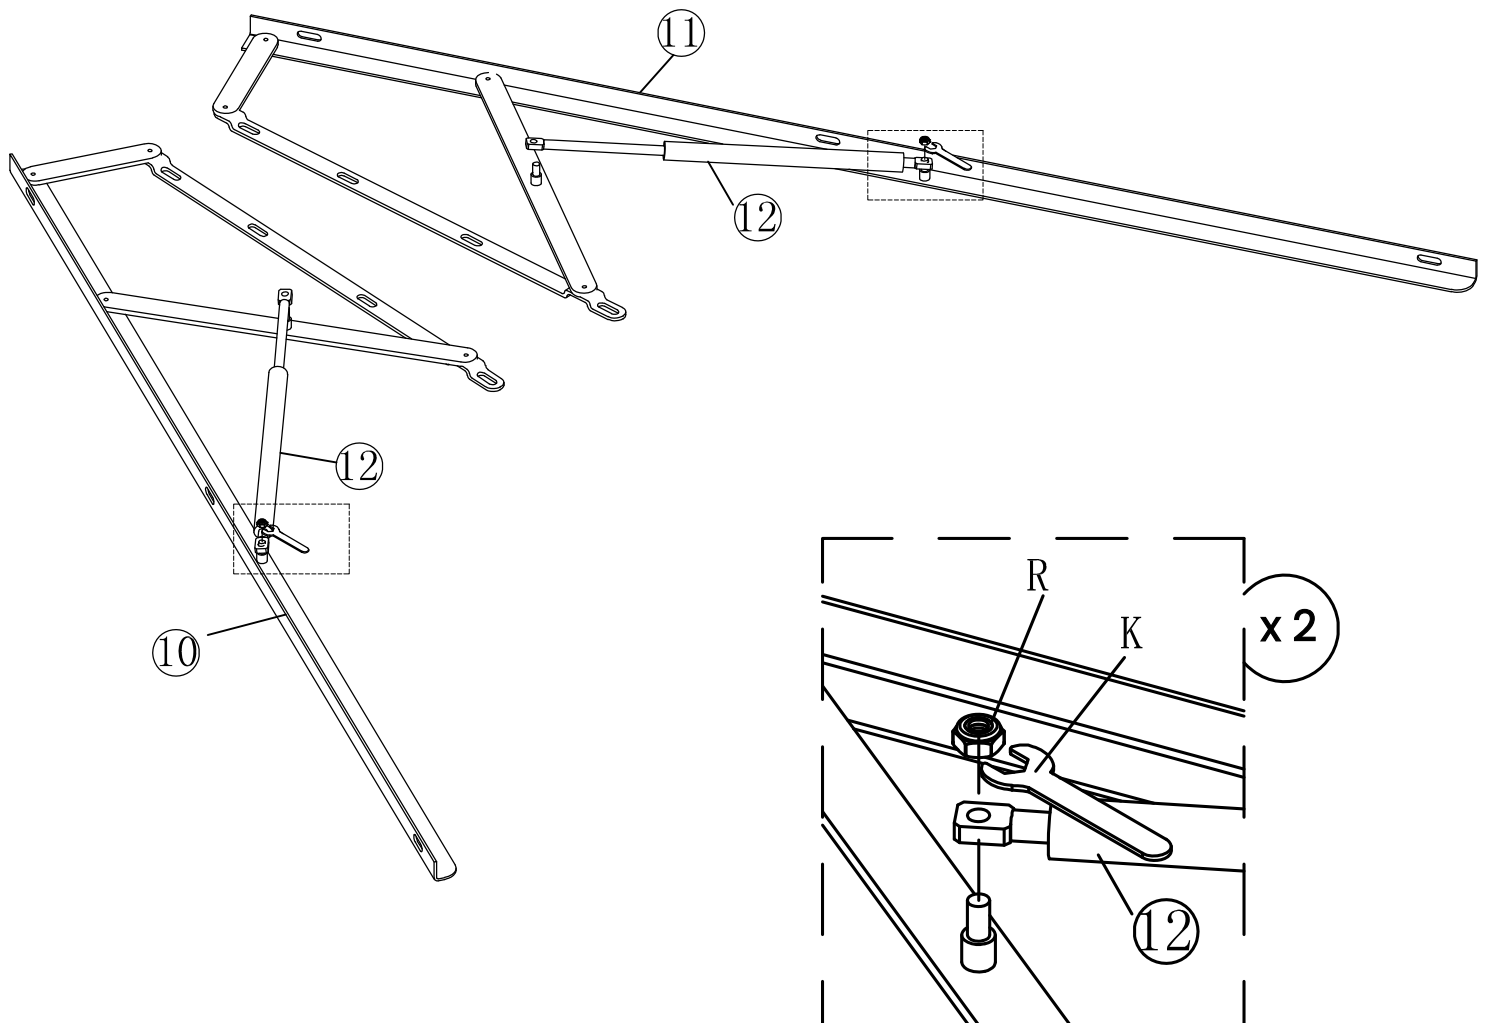



R	Flanged M8 lock-nuts for gas-lift Pistons		2 pcs
---	---	--	-------

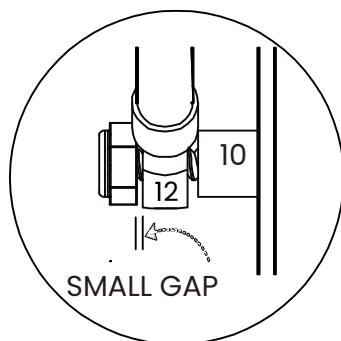


A small gap must be left so stem can move freely -this is important, see sketch below.







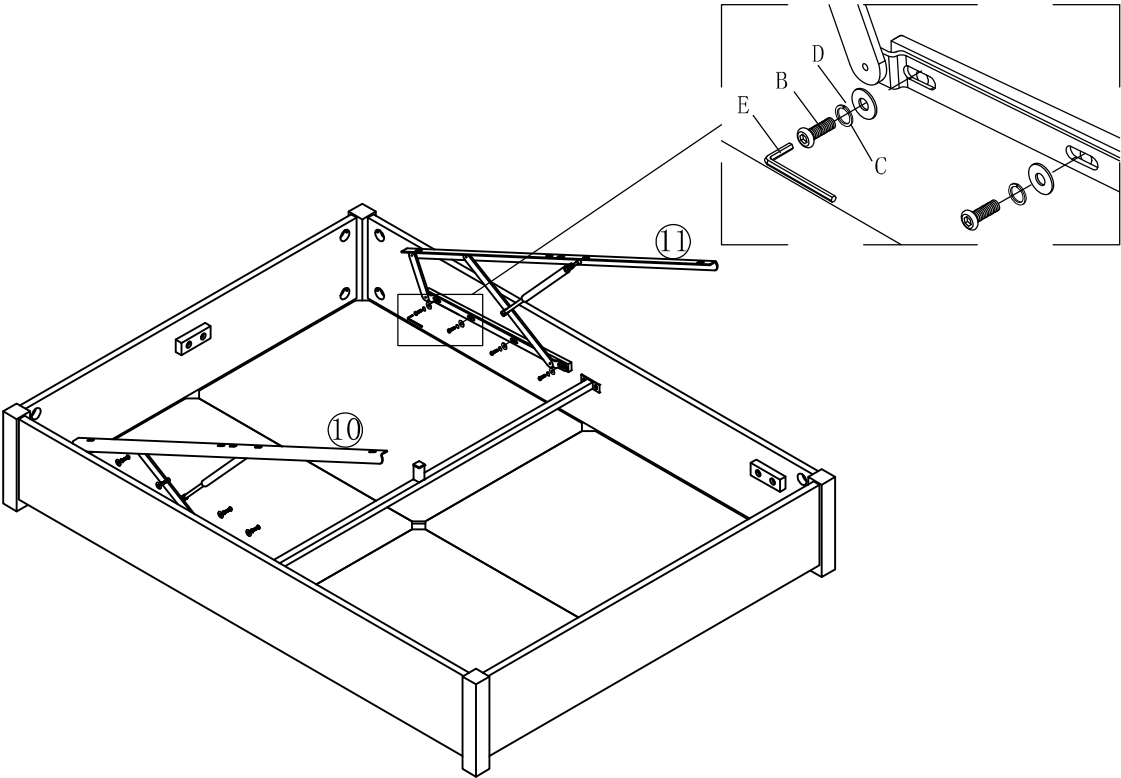
Step 8:

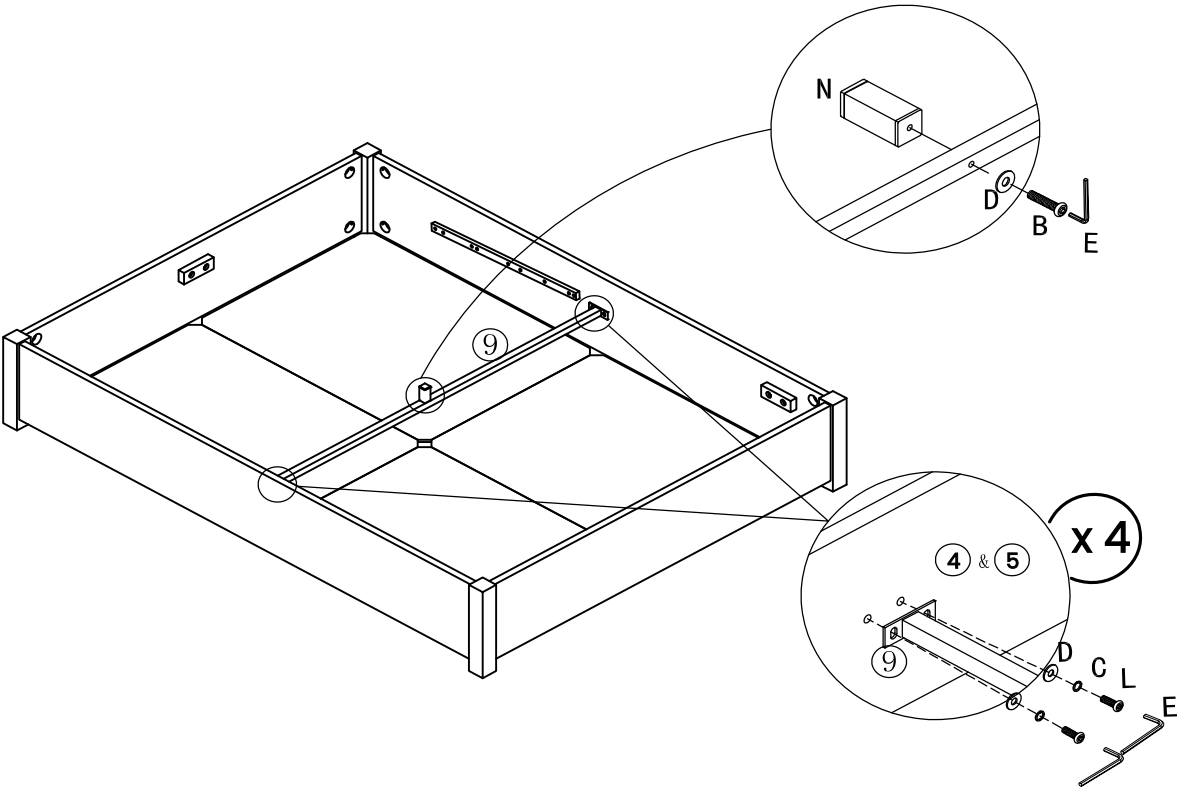C	Spring Washer for M8 bolts		4 pcs	B	Bolts (M8x35mm)		1 pcs
D	Flat Washer for M8 bolts		5 pcs	L	Bolts (M8 x 20)		4 pc
E	Allen Key for M8 bolts		1 pc	N	Side rail cross bar support block		1 pc








Step 9


C	Spring washer for M8 bolts.		8 pcs	B	Bolts (M8x35mm)		8 pcs
D	Flat washer for M8 bolts.		8 pcs	E	Allen key for M8 bolts		1 pc









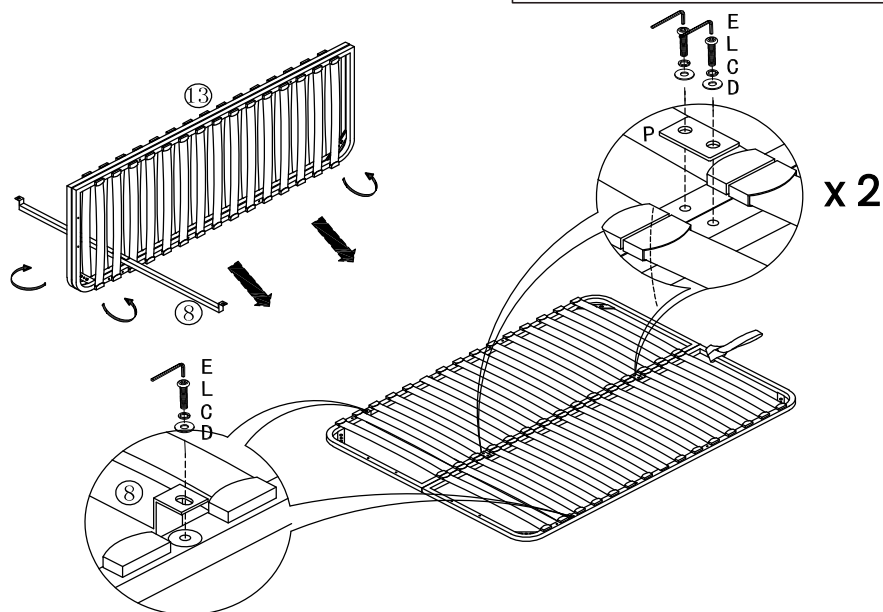


## Step 10:

C	Spring washer for M8 bolts.		6 pcs	L	Bolts (M8x20mm)		6 pcs
D	Flat washer for M8 bolts.		6 pcs	E	Allen key for M8 bolts		1 pc
P	Slat frame connection plate		2 pcs				




## Step 11:


C	Spring Washer for M8 bolts		6 pcs	G	Nuts (M8) to fix slat frame (13) to support bars		6 pcs
D	Flat Washer for M8 bolts		12 pcs	K	Spanner for M8 nuts		1 pc
E	Allen Key for M8 bolts		1 pc	M	Bolts (M8x50mm) to fit slat frame (13) to support bars		6 pcs

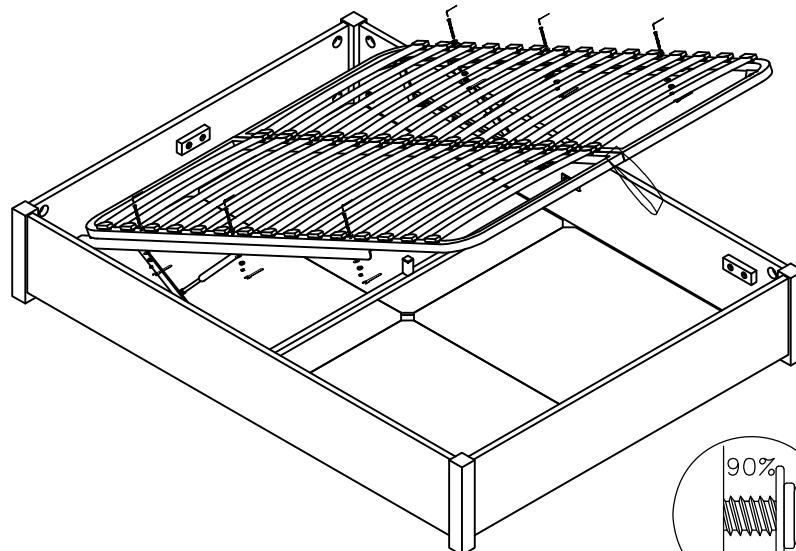

Loosely fit three bolt sets on each side (M, D, D, C & G). Carefully hold the frame in place and align so the gaps at each side are even, then tighten all bolts

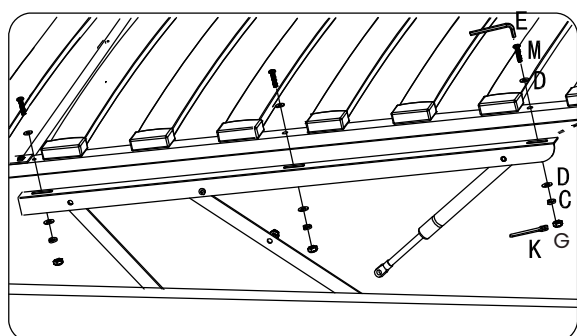

Bolt into centre of long holes

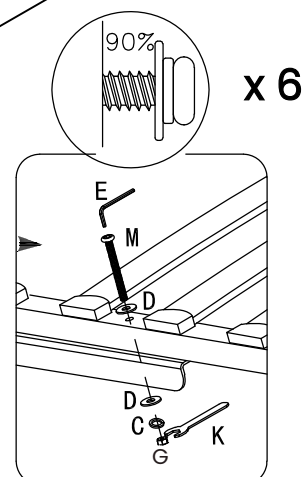


Step 12:

E Allen key for  
M8 bolts




1 pcs

K Spanner for flanged  
M8 lock-nuts



1 pc

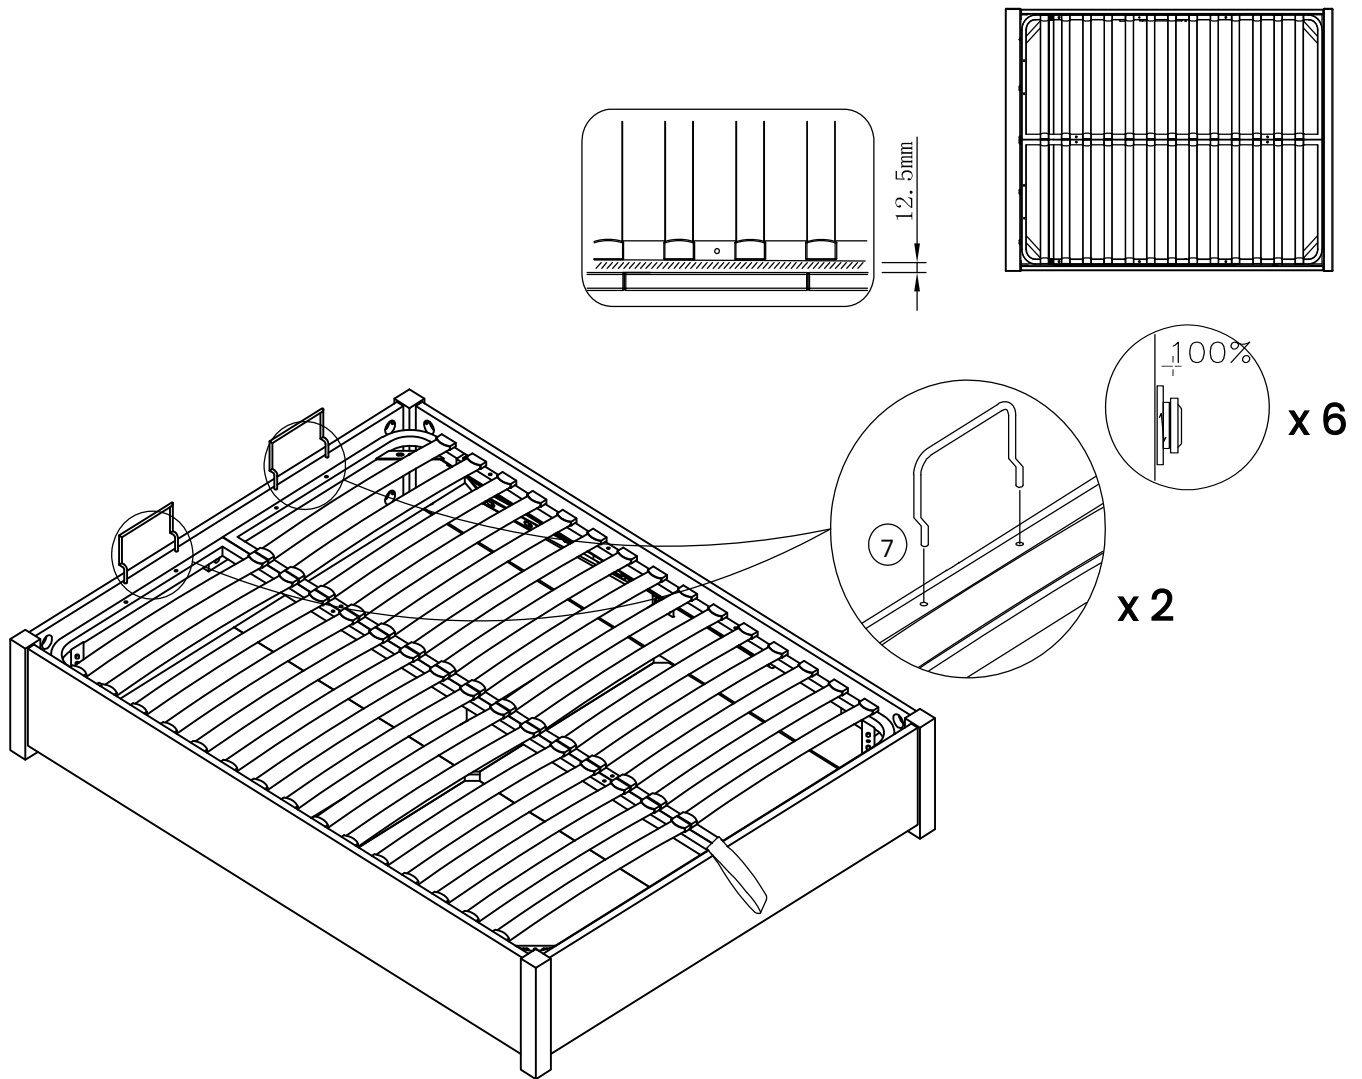

Step 13:

**WARNING: ONLY USE THE HANDLE TO LIFT &  
LOWER THE BED FRAME TO  
AVOID TRAPPING FINGERS!**


**TO AVOID ACCIDENTS**  
TO ACCESS THE STORAGE AREA THE OTTOMAN FRAME  
MUST BE FULLY OPENED AND THEN FULLY CLOSED AFTERWARDS

R Flanged lock  
nuts



2 pcs

K Spanner for  
lock nuts




1 pc

**SAFETY WARNING**

PLEASE DO NOT ALLOW CHILDREN  
OR PETS INSIDE THE STORAGE AREA.

**SAFETY WARNING**




PLEASE BE CAREFUL WHEN LIFTING.  
ONLY LIFT WITH MATTRESS ON TOP.  
TO BE OPERATED BY ADULTS ONLY.

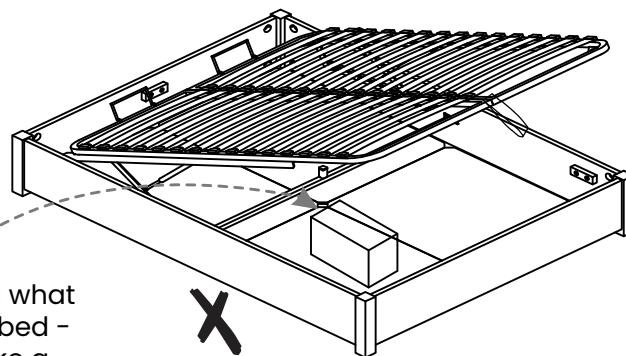

Note: Be very careful what  
you store under the bed -  
the top of an item, like a  
suitcase or a box, must not  
touch the slats or they may  
be damaged. Maximum  
storage height is 240mm.



A small gap must be left so  
stem can move freely - this  
is important, see sketch ->>

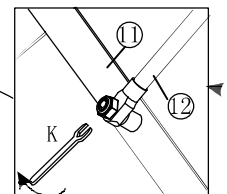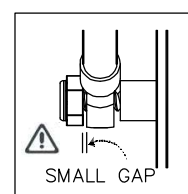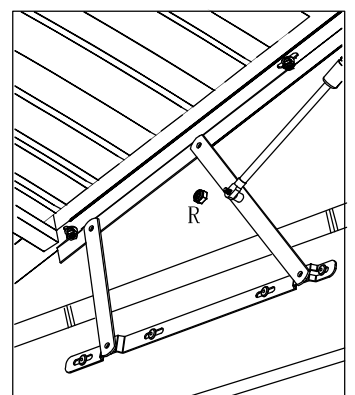

## Technical Specifications

### Overall Dimensions (LWH cm)

Double: 200 x 144.5 x 35.5

King: 210 x 159.5 x 35.5

### Internal Dimension (LWH cm)

Double: 193 x 137.5 x 24

King: 203 x 152.5 x 24

### Distance Between Slats (cm)

Double: 7

King: 6.8


### Ottoman Piston Rating

Double & King: 800 N

### Slat Dimension (LWH cm)

Double: 66.9 x 5.3 x 0.9

King: 74.4 x 5.3 x 0.9

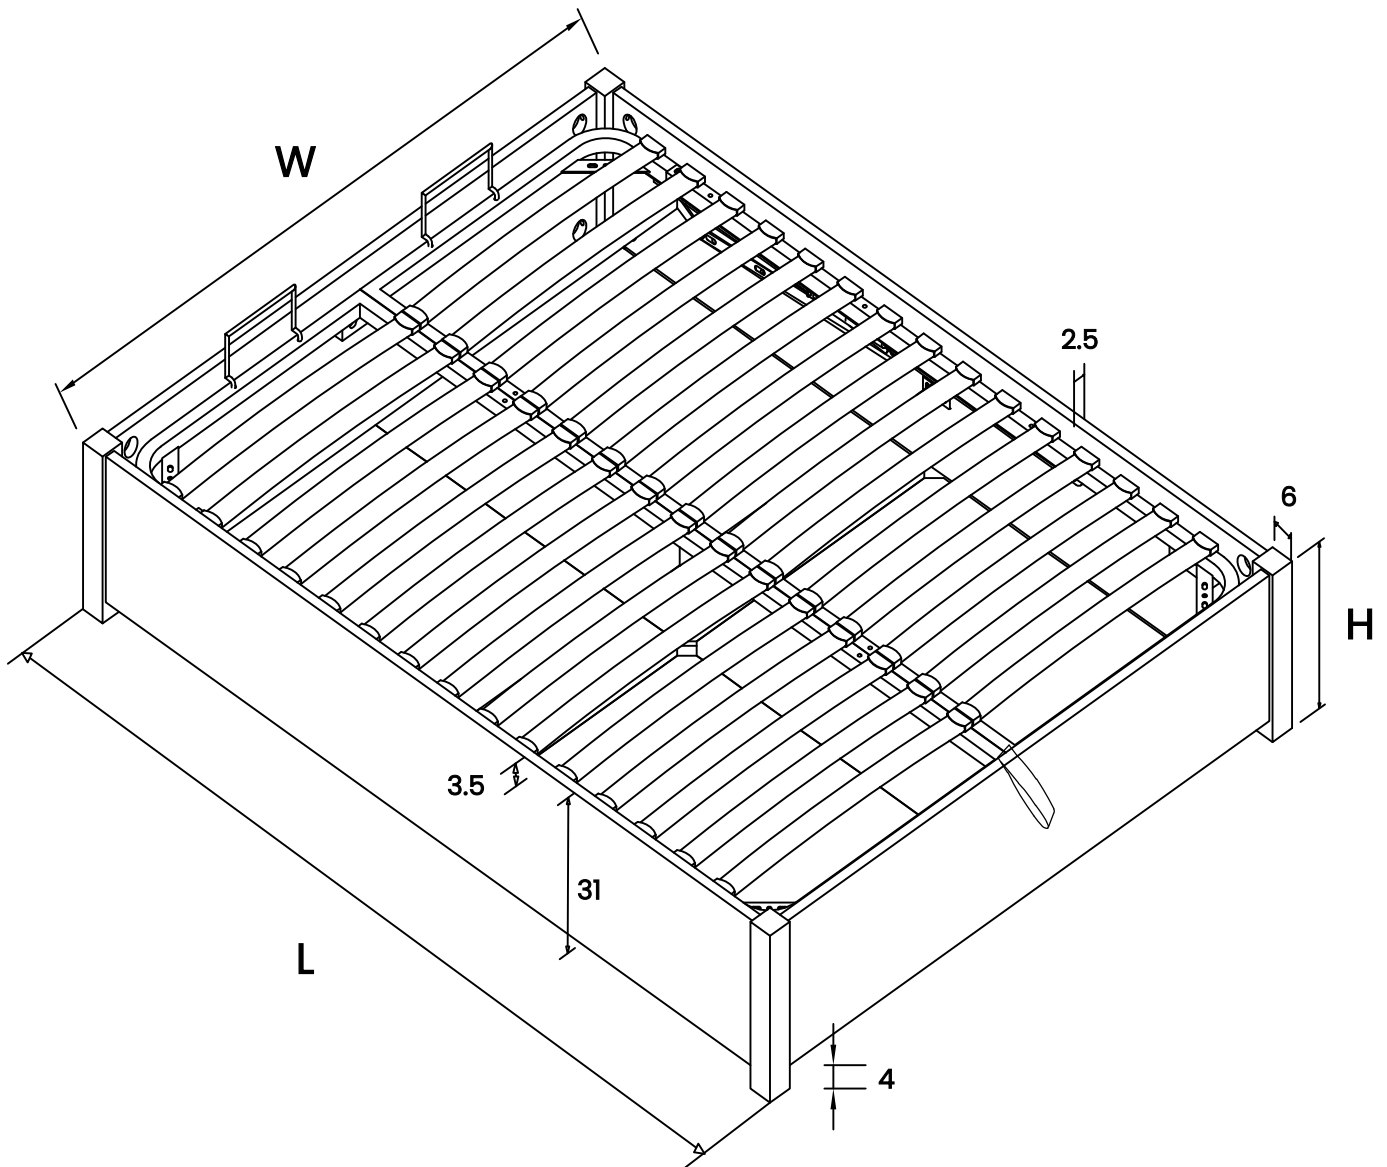

# IMPORTANT OTTOMAN SAFETY WARNINGS Cont.

- Use caution when operating, always use the handle when lifting.
- Note: This bed uses a pressurised mechanism.
- To be operated by adults only.
- Please ensure that children and pets are kept away from the bed when operating the lift mechanism.
- Keep children and pets away from the storage area.
- Do not overload the internal storage base.
- Do not stand inside the internal storage area of the bed.
- Before removing the mattress secure the frame to ensure it does not open unexpectedly.
- Do not attempt to lie on the mattress when the ottoman is in the raised position.
- When lifting the ottoman, remove all bedding except the fitted sheet.

Please dispose of all packaging safely.

## General Care & Maintenance

Wipe clean with a slightly damp cloth.

Avoid the use of all household cleaners and abrasives.

Periodically check all screw & fixings to ensure they are secure.

When moving your product, carefully lift into place. Never drag or push the pieces across the floor as this will cause damage to the joints and could result in failure to the product that will invalidate the warranty.

For more information on cleaning and product care visit:

<https://www.happybeds.co.uk/help-and-advice>

### Notes:

We've tried to make this product as easy to assemble as possible. In the unlikely event that you have problems putting it together or have damaged or missing pieces, please contact us by visiting:

<https://www.happybeds.co.uk/customer-service>