


#### **Assembly Instructions**

## Winchester 2 Door Wardrobe

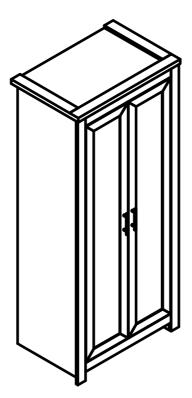

# Important before assembly: Read these instructions carefully before assembling or using the product.

Please check the contents of the boxes before attempting to assemble this product. The instructions will have a checklist of parts and fittings.

It would be sensible to lay a rug or a carpet on the floor where you intend to assemble the product, to void scratches and damaging the product or the floor.

Assemble the product as close to its intended final location/room as possible.

Do NOT use any power tools as this may damage the frame.

#### Health & Safety:

This product or some parts of this product will be heavy. Please use an assistant when lifting.

DO NOT jump on the product or any of its parts.


DO NOT use this product if any parts are missing, damaged or worn.

DO NOT use this product unless all fixings are secured.

Please keep small parts out of reach of children.


Always use on a level, even surface.


Please keep these instructions for future reference.

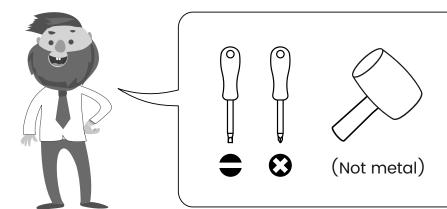


These tools are not necessary, but may help to assemble certain parts of the product.


Do NOT use any power tools as this may damage the frame.

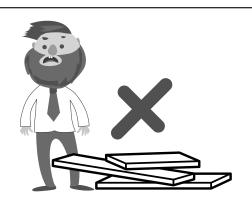

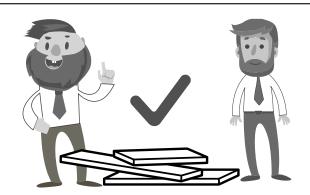



This product or some parts of this product will be heavy. Please use an assistant when lifting.

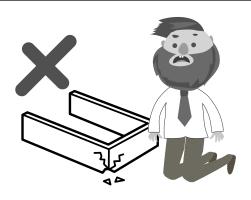

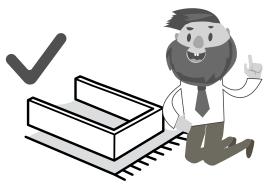


Never drag or push the pieces across a hard or stone floor as this will cause damage to the joints. Use a carpet or a rug for extra care.

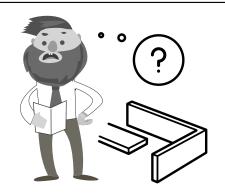

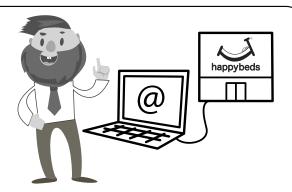

If you have problems assembling or have damaged or missing pieces, please contact us by visiting:


https://www.happybeds.co.uk/customer-service

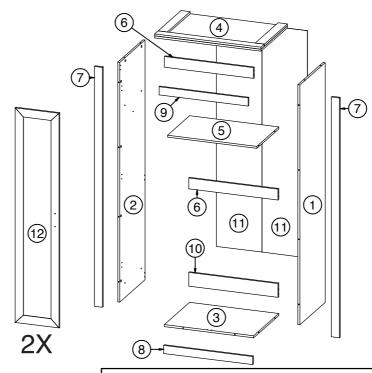

Parts List			
Part	Item	Qty	
1	Right Side	1	
2	Left Side	1	
3	Base	1	
4	Тор	1	
5	Middle Top	1	
6	Back Traverse	2	
7	Column	2	
8	Bottom Traverse	1	
9	Upper Traverse	1	
10	Baseboard	1	
11	Back	2	
12*	Door	2	


8			
Hardware List			
Part	Item	Qty	
Α	Wooden Dowel	6	
В	Cam Bolt	28	
С	Cam Lock	28	
D	Tack	80	
E	Slip Shoe	4	
F	25mm Screw	3	
G	14mm Screw	30	
Н	Sticker	8	
I	Handle	2	
J	Hat Stand Suport	2	
K	45mm Screw { 100000000000000000000000000000000000	4	
L	Hinge	6	
М	Door Stop	1	
N	Back Profile	1	
0	Hatstand	1	
Р	Safety Strap	2	

<sup>\*\*</sup> You will need a small mallet and a screwdriver.

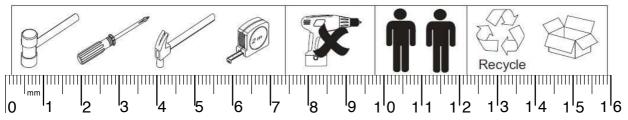


Vendor: S000401


Step 1: Insert the hardware (A) into the back traverse (6) and baseboard (10). Do NOT use any power tools are this may damage the frame and will invalidade any claim.

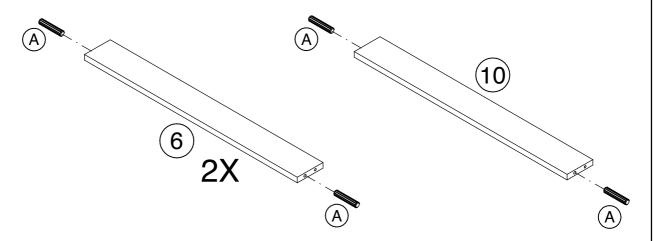

**Step 2:** Insert the hardware (B) in the right side (1), left side (2), top (4), column (7) and bottom traverse (8). Then fix hardware (J) onto the right side (1) and left side (2) using hardware (G). **Do NOT use any power tools are this may damage the frame and will invalidade any claim.** 

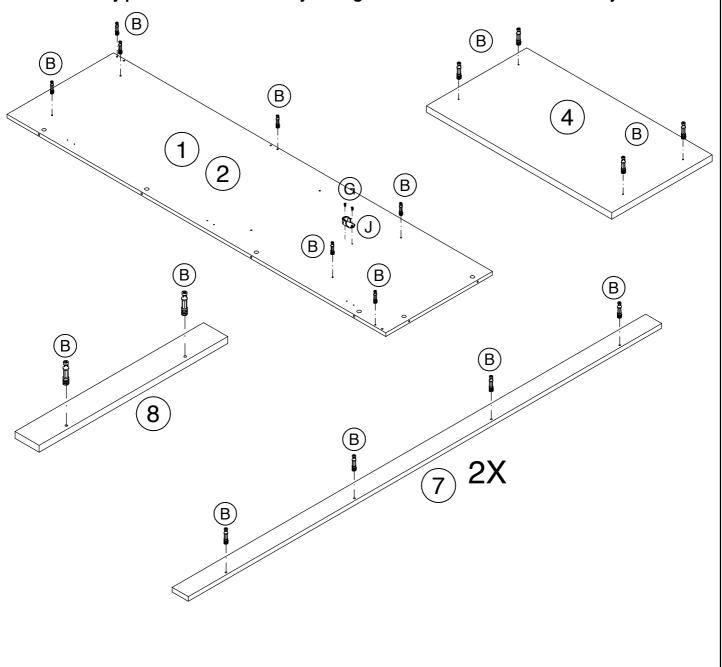


Step 3: Assemble column (7) to the right side (1) and left side (2) using hardware (C). Vendor: S000401 Do NOT use any power tools are this may damage the frame and will invalidade any claim.

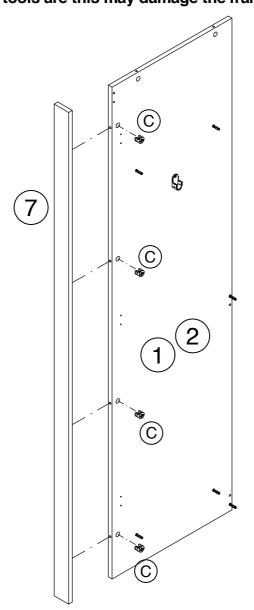


**Step 4:** Attach the bottom traverse (8) to the base (3) using hardware (C). Then fix hardware (M) onto the base (3) using hardware (G).

Do NOT use any power tools are this may damage the frame and will invalidade any claim.

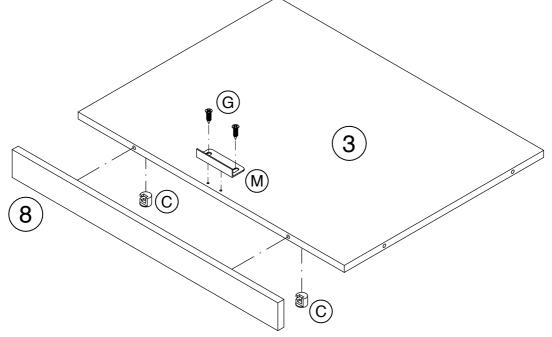


**Step 5:** Attach hardware (L) to the door (12) using hardware (G). Attach hardware (I) to the door (12) using hardware (K).

Do NOT use any power tools are this may damage the frame and will invalidade any claim.

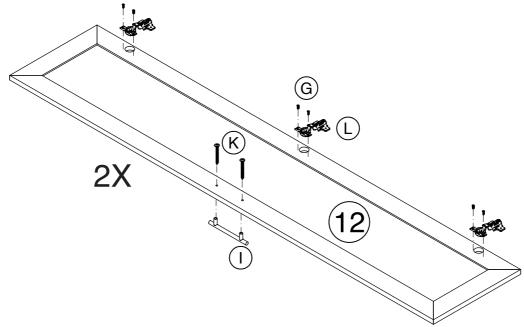

**Step 6:** Attach the base (3) and middle top (5) to the right side (1) and left side (2) using hardware (C). Then attach the baseboard (10) and back traverse (6) to the right side (1) and left side (2) using hardware (A) and (C).

Do NOT use any power tools are this may damage the frame and will invalidade any claim.

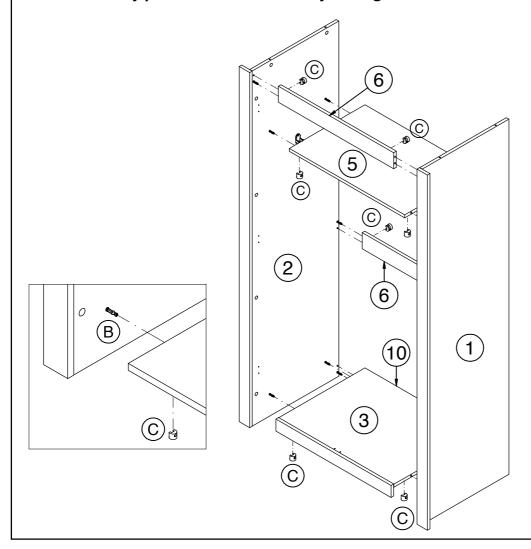



Vendor: S000401

**Step 7:** Attach the top (4) using hardware (C). Then attach hardware (E) and (D) to the bottom of the right side (1) and left side (2).

Attach the upper traverse (9) to back traverse (6) using hardware (F). Insert the hardware (O) inside the product, above the hardware (J).


Do NOT use any power tools are this may damage the frame and will invalidade any claim.

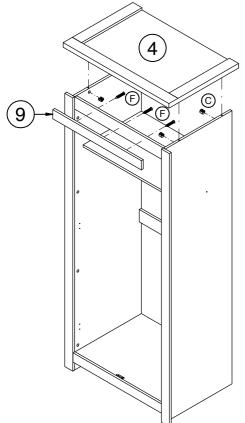


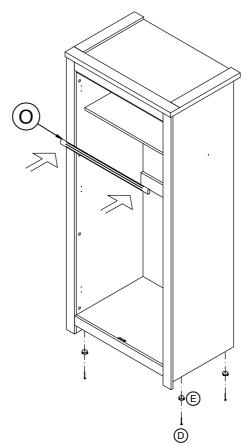

**Step 8:** Attach the back (11) to the back of the assembled product using hardware (D) and combining them using hardware (N).

Do NOT use any power tools are this may damage the frame and will invalidade any claim.

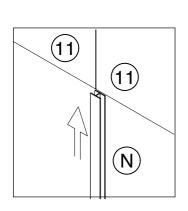

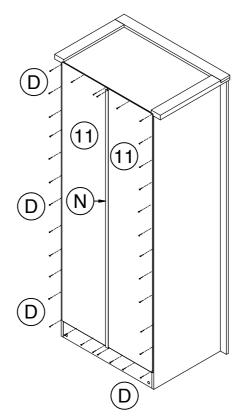


Vendor: S000401


Step 9: Fix door (12) to the right side (1) and left side (2) using hardware (G), (L) and a screwdriver (not provided).


Insert hardware (H) over the holes show below.

Attach the safety strap (P) to the back of the wardrobe and wall following the diagram. **Do NOT use any power tools are this may damage the frame and will invalidade any claim.** 

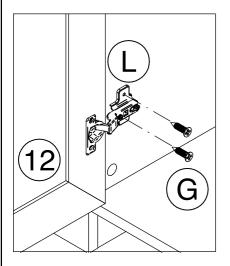

### Safety Strap

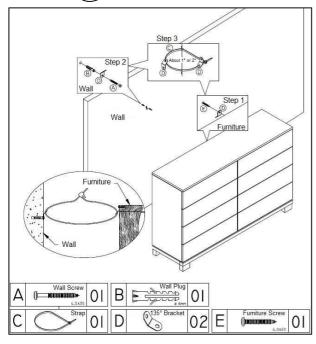

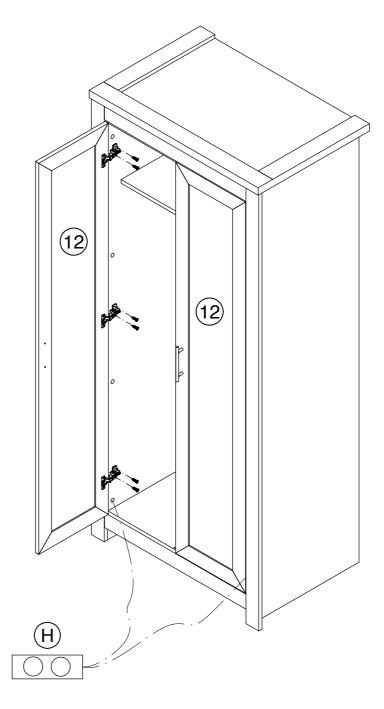

Please dispose of all packaging safely.

#### **General Care & Maintenance**

Wipe clean with a slightly damp cloth. Avoid the use of all household cleaners and abrasives.

Periodically check all screw & fixings to ensure they are secure.

When moving your product, carefully lift into place. Never drag or push the pieces across the floor as this will cause damage to the joints and could result in failure to the product that will invalidate the warranty.

For more information on cleaning and product care visit: https://www.happybeds.co.uk/help-and-advice

#### **Notes**

We've tried to make this product as easy to assemble as possible. In the unlikely event that you have problems putting it together or have damaged or missing pieces, please contact us by visiting:

https://www.happybeds.co.uk/customer-service



