

# **Brandon Ottoman Storage Bed - 4ft6**



# **Assembly Instructions**

# Important before assembly:

Read these instructions carefully before assembling or using the product.

Please check the contents of the boxes before attempting to assemble this product. The instructions will have a checklist of parts and fittings.

Assemble the product as close to its intended final location/room as possible.

## **Health & Safety:**

This product or some parts of this product will be heavy. Please use an assistant when lifting.

Please keep small parts out of reach of children.

Always use on a level, even surface.

DO NOT jump on the product or any of its parts.

DO NOT use this product if any parts are missing, damaged or worn.


DO NOT use this product unless all fixings are secured.

#### Further instructions are on the following pages.

Please keep these instructions for future reference.



Do NOT use any power tools as this may damage the frame.

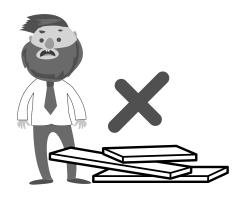




This product or some parts of this product will be heavy. Please use an assistant when lifting.





Never drag or push the pieces across a hard or stone floor as this will cause damage to the joints. Use a carpet or a rug for extra care.




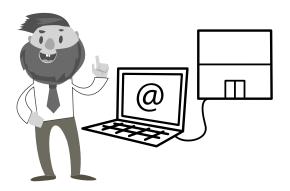

If you have problems assembling or have damaged or missing pieces, please contact our customer services (details at the back of these instructions)


No	Part List	Qty	Вох
1	Headboard	1pc	1
2	Footboard	1pc	2
3	Side Rails (Left)	1pc	2
4	Side Rails (Right)	1pc	2
5	Support Bar	1pc	2
6	Metal Left Frame (L)	1pc	2
7	Metal Right Frame (R)	1рс	2
8	Metal Frame (Short - Headboard)	1pc	3
9	Metal Frame (Short - Footboard)	1pc	3
10	Horizontal Support Bar	1pc	3
11	Storage Wooden Base	2pcs	1
12	Bed Cross Bars	2pcs	3
13	Bed Cross Bars (with holes)	3pcs	3
14	Feet	4pcs	2
15	Headboard Support Wood	1pc	2
16	Footboard Support Wood	1pc	2
17	Slats	28pcs	3
18	Metal Corner Plate	2pcs	2
19	Mattress Stopper	2pcs	2
20	Pull Strap	1pc	2
21	Support Leg	3pcs	2
22	Single Plastic Cap Side	28pcs	2
23	Double Plastic Cap Center	14pcs	2

	I		i .	ı
No	Hardware List		Qty	Box
А	Bolt (M6x25mm)		14pcs	2
В	Bolt (M8x16mm)		18pcs	2
С	Bolt (M8x30mm)		10pcs	2
D	Bolt (M8x45mm)		8pcs	2
Е	Bolt (M8x70mm)		2pcs	2
F	M8 Nut	9	6pcs	2
G	Spanner		1рс	2
Н	Allen Key M5		1pc	2
I	Allen Key M4		1pc	2
J	Adjustable Foot		3pcs	2

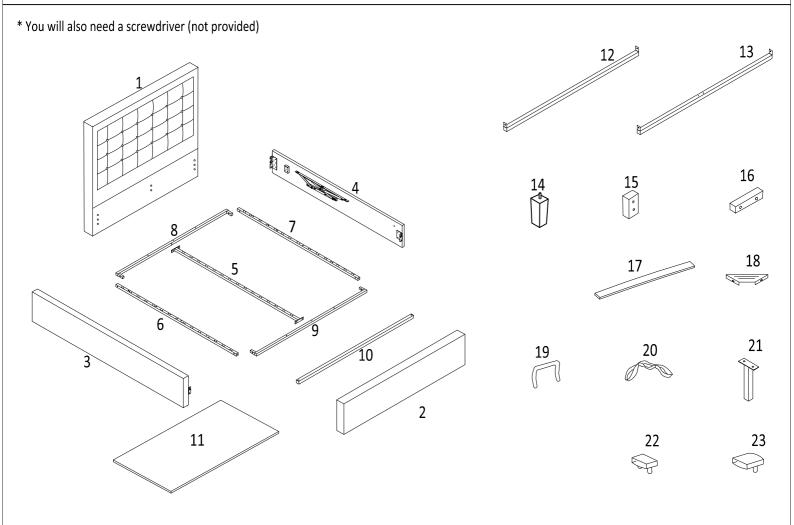

### Step 1:


To fix the Headboard Support Wood (15) to the headboard (1). the Footboard Support Wood (16) to the footboard (2). you will need to use bolt (D) with the M5 allen key (H).

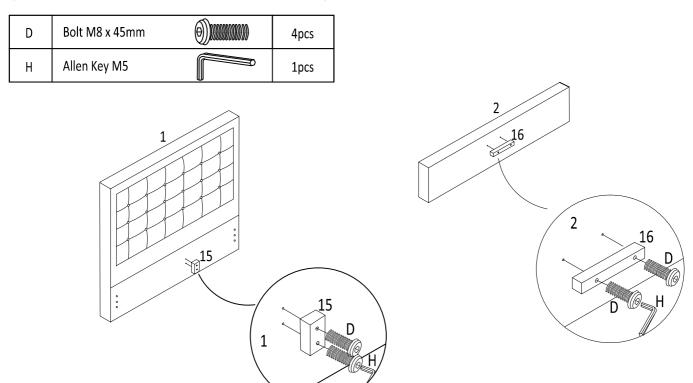

DO NOT use any power tools as this may damage the frame and will invalidate any claim.


## Step 2:

To fix the Feet (14) to the headboard (1) and footboard (2).

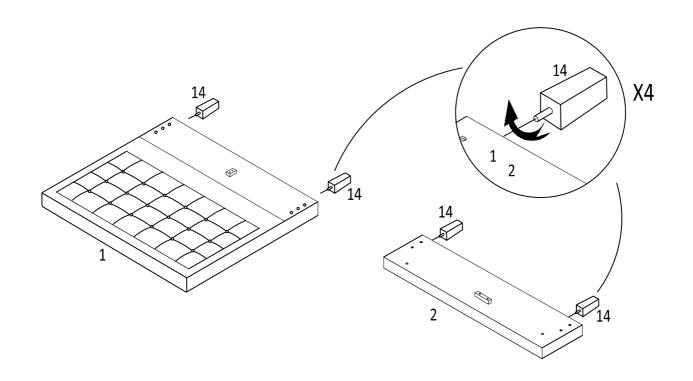

#### Step 3:

To fix the side rail (3) and (4) to the headboard (1) and footboard (2). you will need to use Bolt (C) with the M5 allen key (H).

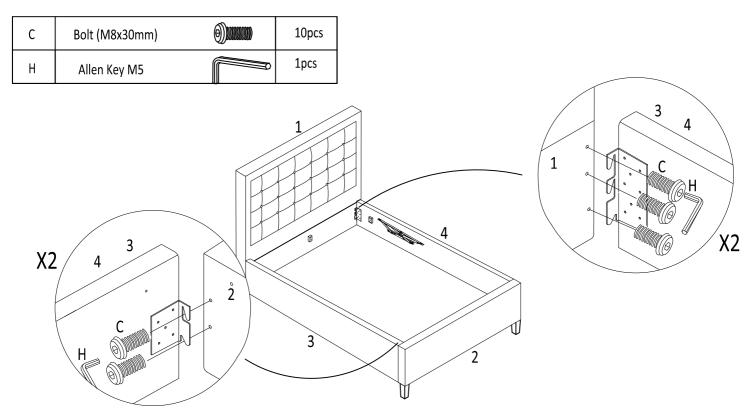


DO NOT use any power tools as this may damage the frame and will invalidate any claim.

#### Step 4:

To fix the Metal Corner Plate (18) to the footboard (2) and side rail (3), (4). you will need to use bolt (A) with the M4 allen key (I).


А	Bolt M6 x 25mm	9)1111111	4pcs
I	Allen Key M4		1pc

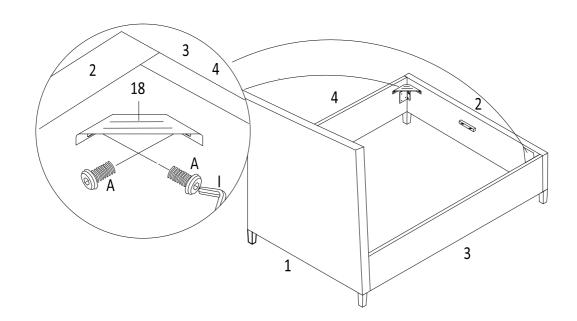

#### Step 5:

To fix the Support Leg (21) to the Bed Cross Bars (with holes) (13). you will need to use Bolt (C) with the M5 allen key (H), Adjustable Foot (J).


В	Bolt (M8x16mm)	6pcs
Н	Allen Key M5	1рс
J	Adjustable Foot	3pcs

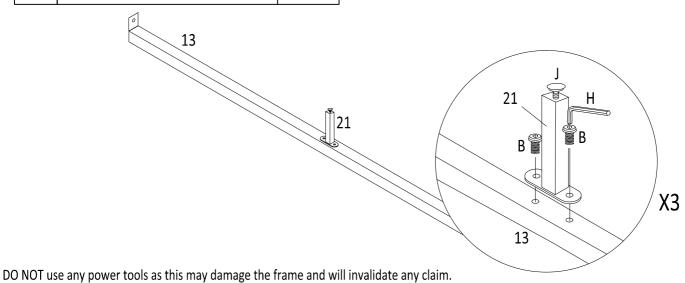

## Step 6:


To fix the Bed Cross Bars (12) and (13) to the side rail (3),(4). you will need to use Bolt (A) with the M4 allen key (I).

Α	Bolt M6 x 25mm	10pcs
ı	Allen Key M4	1pc

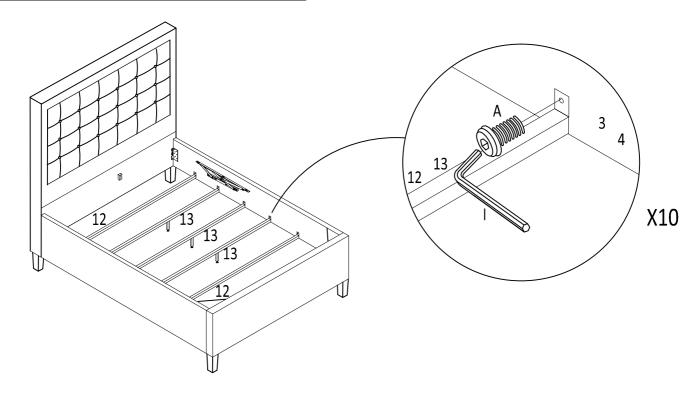


#### Step 7:

To fix the Storage Wooden Base (11) to the Bed Cross Bars (12), (13).

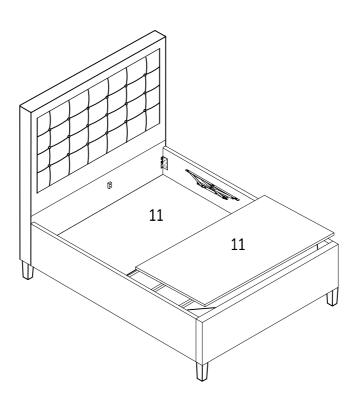


Step 8:

To fix the Front Frame Short (8) and (9) to the Metal Left Frame (L) (6) and Metal Right Frame (R) (7). To fix the Support Bar (5) to the Front Frame Short (8) and (9).

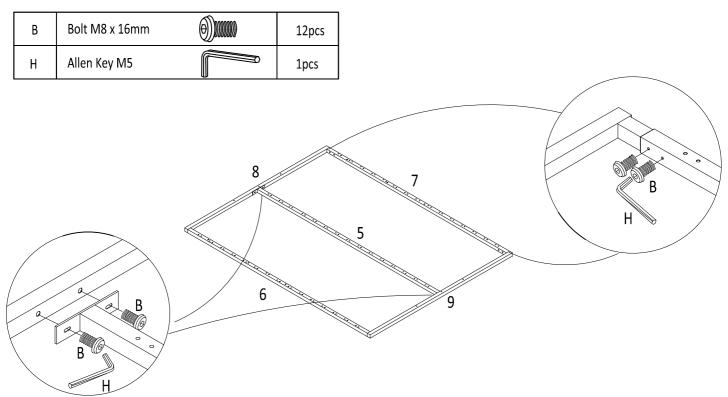


### Step 9:

To fix the Metal frame to the gas lift mechanisms, the Horizontal Support Bar (10) to the Metal frame. and gas lift mechanisms.

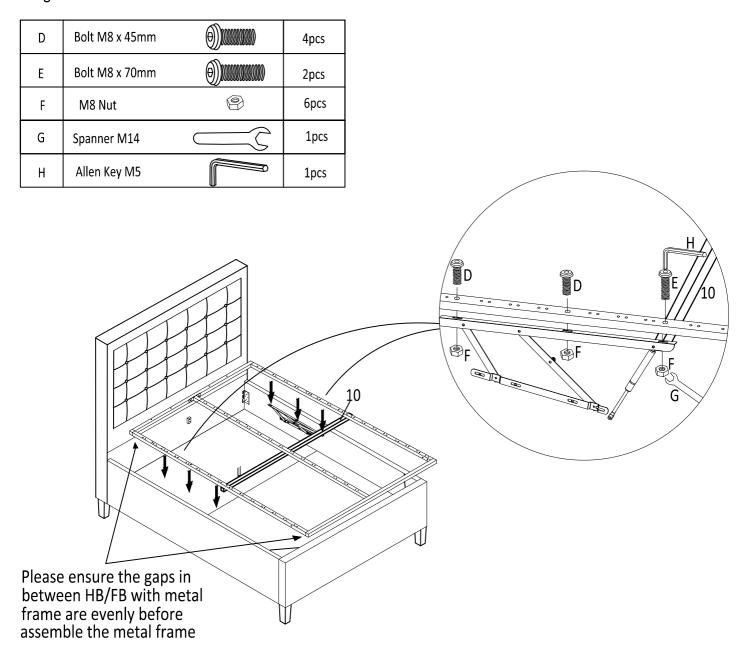

# **Step 10:**


To fix the Pull Strap (20) to the Front Frame Short (9). Tighten the nuts on hydraulic pump.

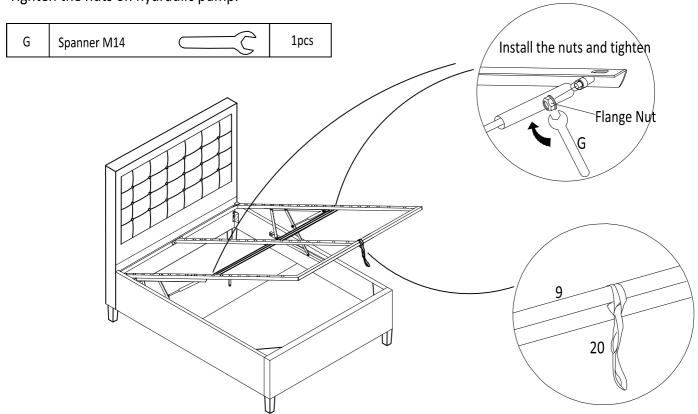

DO NOT use any power tools as this may damage the frame and will invalidate any claim.


# Step 11

To fix the Mattress Stopper (19) to the Front Frame Short (8), Single Plastic Cap Side (22) and Double Plastic Cap Center (23) to the Slats (17) to the metal frame.

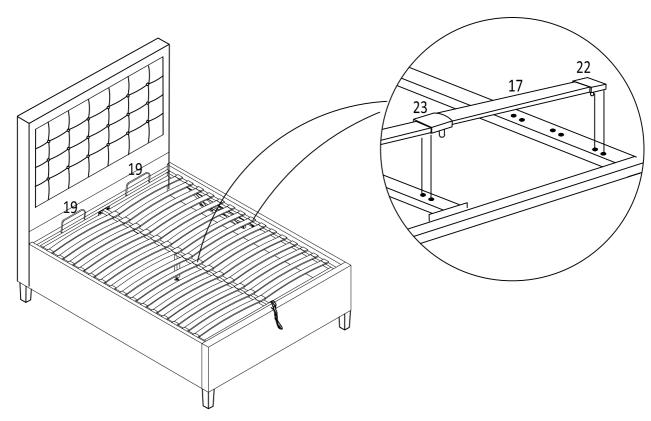

# **IMPORTANT NOTE**

WHEN THE BED IS BUILT
PLEASE NOTE THAT THE WEIGHT OF THE MATTRESS IS REQUIRED TO
HELP CLOSE THE BED

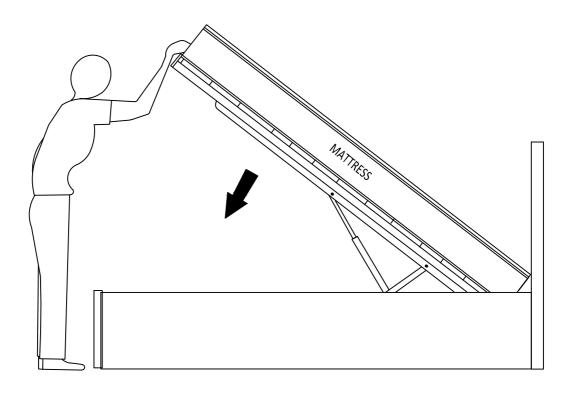

WARNING: Take care when assembling the base. Assemble the ottoman as closed to its final position. The Ottoman has a powerful, mechanism and after assembly should only be opened when the mattress is in place.

Please dispose of all packaging safely.

### **General Care & Maintenance**

Wipe clean with a slightly damp cloth.

Avoid the use of all household cleaners and abrasives.

Periodically check all screw & fixings to ensure they are secure.

When moving your product, carefully lift into place. Never drag or push the product across the floor as this will cause damage to the joints. If the product is used on hard flooring, such as wood or laminated floor, you must place some protection under the legs to stop the product from moving. If this is not adhered to, it could result in failure to the product that will invalidate the warranty.

For more information on cleaning and product care visit: https://www.happybeds.co.uk/help-and-advice

## **Notes**

In the unlikely event that you have problems putting this product together or have damaged or missing parts, please contact us by visiting:

https://www.happybeds.co.uk/customer-service

