

## Assembly Instructions

### Important before assembly:

Read these instructions carefully before assembling or using the product.

Please check the contents of the boxes before attempting to assemble this product. The instructions will have a checklist of parts and fittings.

Assemble the product as close to its intended final location/room as possible.

### Health & Safety:

This product or some parts of this product will be heavy. Please use an assistant when lifting.

Please keep small parts out of reach of children.

Always use on a level, even surface.

DO NOT jump on the product or any of its parts.

DO NOT use this product if any parts are missing, damaged or worn.

DO NOT use this product unless all fixings are secured.

**Further instructions are on the following pages.**

Please keep these instructions for future reference.



## **Important for Ottoman and other gas lift beds**

### **Note:**

The bed base is in the upright position when first assembled as the gas lifts are fully extended during shipment for safety. After assembly a firm downward push will be required to overcome any resistance in the gas lifts as these may initially stick. We suggest placing a mattress on top of the bed base to aid this and also test the operation of your new lift up bed by lifting and pushing down the bed base a few times to allow the lifting mechanism to bed in.

The lift mechanism provides assistance with the lift of the mattress fitted to the base. It does not lift the mattress for you. The system has been designed to effectively lift the base system fitted with a variety of mattress weights and combinations of depths. Depending on the combination of the mattress weight and depth determines the degree of assistance provided by the mechanism.




Following the installation of the mechanism lift, pull the base up and down a few times to free off the system. The gas cylinders fitted to the system may be stiff when first used or if the system has not been operated for a period of time.

Use the strap handles to lift up the mattress base using two hands. Pull the mattress base down using two hands equally spaced from the centre of the mattress base. DO NOT pull down on one side of the base only as this is likely to damage the base system with potential failure of the mattress base system and lift mechanism.



Do NOT operate the lift up mechanism without the mattress placed on the base.

### **Caution:**



Do NOT allow children to operate the lift mechanism.  
Do NOT allow children near the lift base when operating the mechanism.  
Do NOT allow children in the area of the internal storage base.  
Keep hands clear of the mechanism when operating the base system.  
Do NOT stand inside the bed or the internal storage base.  
Do NOT overload the internal storage base.

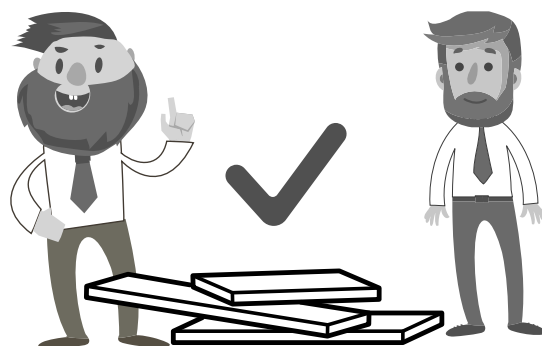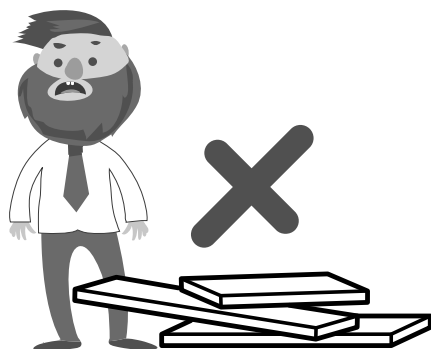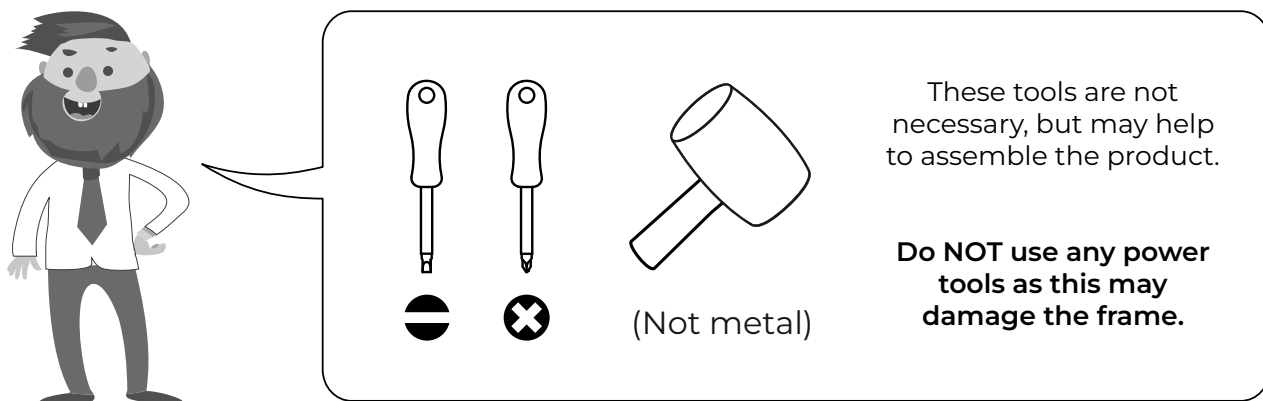

This product or some parts of this product will be heavy. Please use an assistant when lifting.

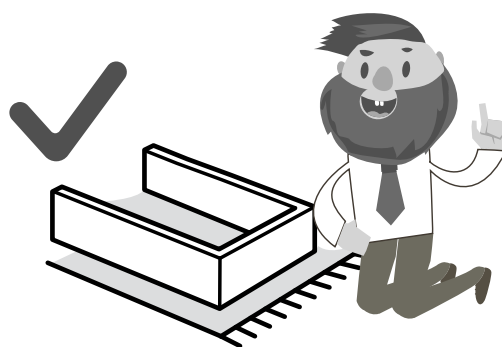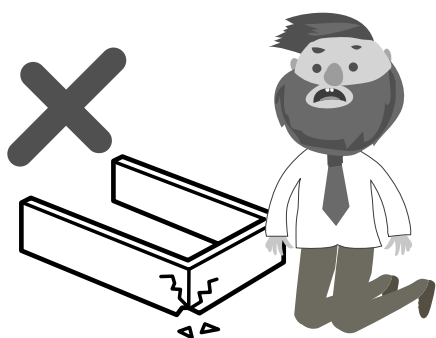



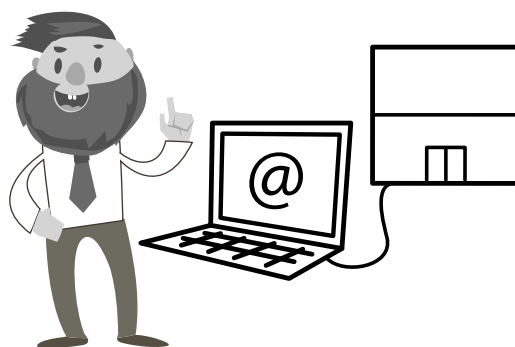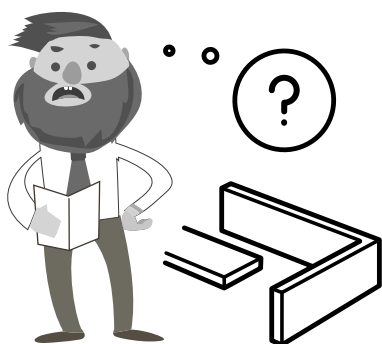











Never drag or push the pieces across a hard or stone floor as this will cause damage to the joints. Use a carpet or a rug for extra care.



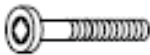
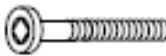





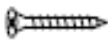





If you have problems assembling or have damaged or missing pieces, please contact our customer services (details at the back of these instructions)
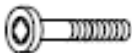
## Parts List


Parts	Description	Box	Qty
1	Headend 	1	1
2	Footend 	2	1
3	Side Rail 	2	2
4	Legs 	2	4
5	Metal Centre Rail 	2	1
6	Wooden Centre Rail 	2	1
7	Support Leg 	2	3
8	Pump Mounting Bracket 	2	2
9	Bracket Base 	2	2
10	Gas Spring 	2	2
11	Wooden Frame Bracket 	2	2
12	Wooden Frame (holes are not the same) 	3	1
13	Wooden Frame (holes are not the same) 	3	1
14	Bottom Panel 	4	4

### Hardware List ( Found in box 2)


Parts	Description	Box	Qty
A	M6 x 20 mm JCBC 	2	4
B	M6 x 40 mm JCBC 	2	11
C	M6 x 50 mm JCBC 	2	4
D	M8 x 60 mm JCBC 	2	8
E	M6 Spring Washer 	2	12
F	M6 Flat Washer 	2	12
G	M8 Spring Washer 	2	16
H	M8 Flat Washer 	2	16
I	M8 Hex Nut 	2	8
J	M4 x 25 mm CSK 	2	24
K	Allen Key M4 x 100 mm 	2	1
L	Allen Key M5 x 70 mm 	2	1
M	M8 Spanner 	2	1

\*You will need a screwdriver (not provided)


Step 1: Attach the pump mounting bracket (8) and bracket base (9) to the both side rail (3) using hardware parts B, E, F and K.  
**DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

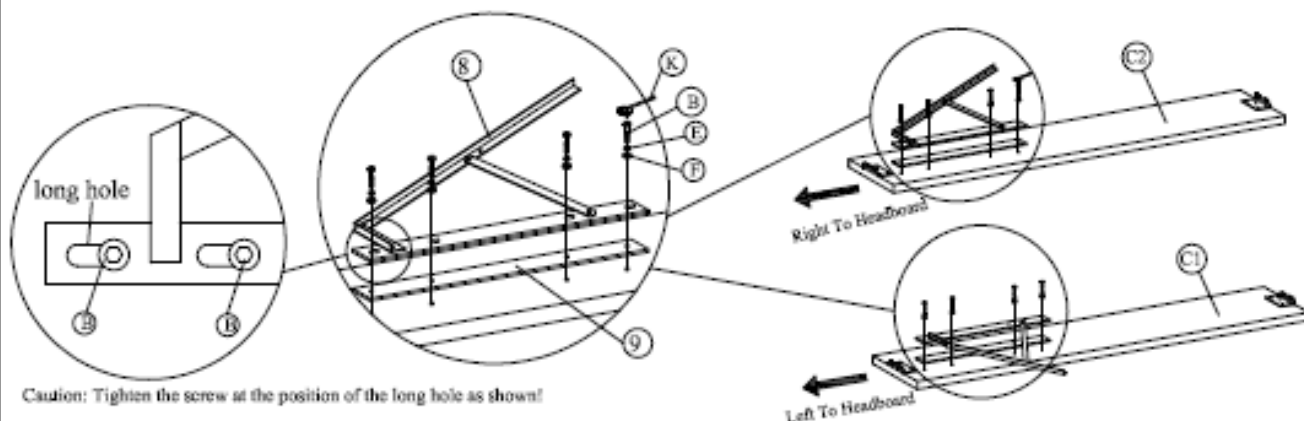


Step 2: Attach the legs (4) to the headend (1) and footend (2).  
**DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

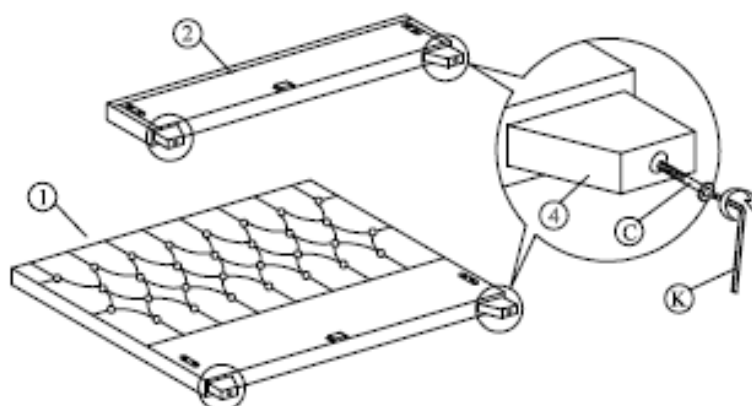

Step 3: Attach the side rails (3) by pushing the brackets down into place and secure the bolts using hardware part L as shown.  
**DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

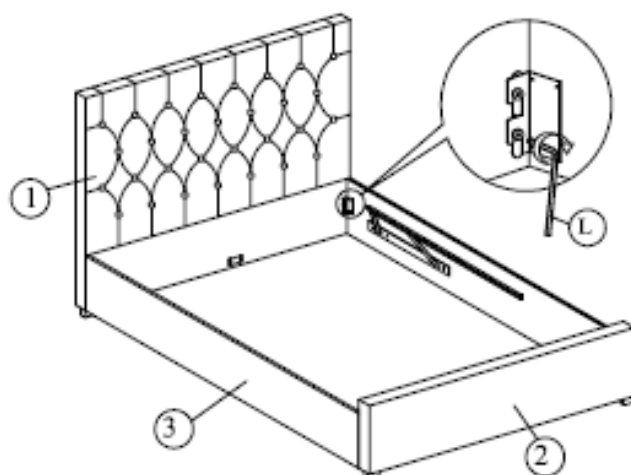


Step 4: Attach the support legs (7) to the centre rail (6) using hardware parts B and K.  
**DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

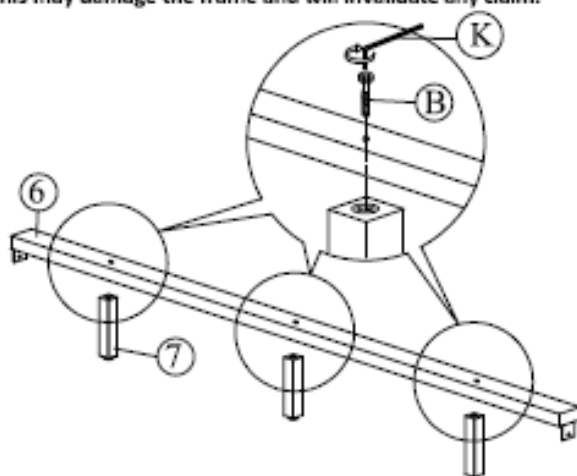


Step 5: Insert the centre rail (6) to the headend (1) and footend (2) .

**DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

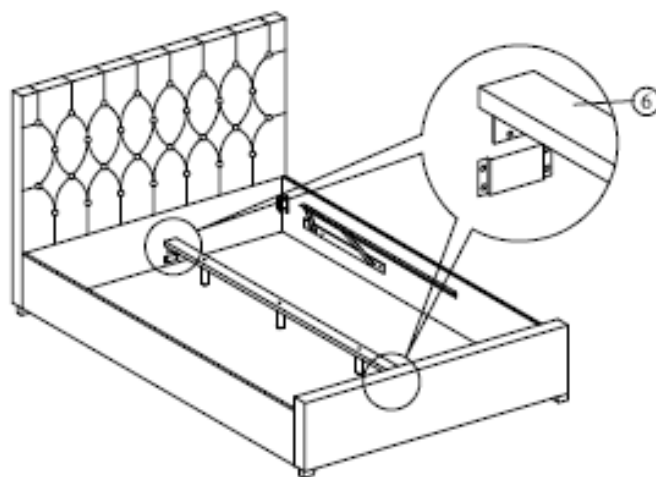


Step 7: Insert the bottom panel (14) to the below frame and secure using hardware part J and a screwdriver (not provided) .


**DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

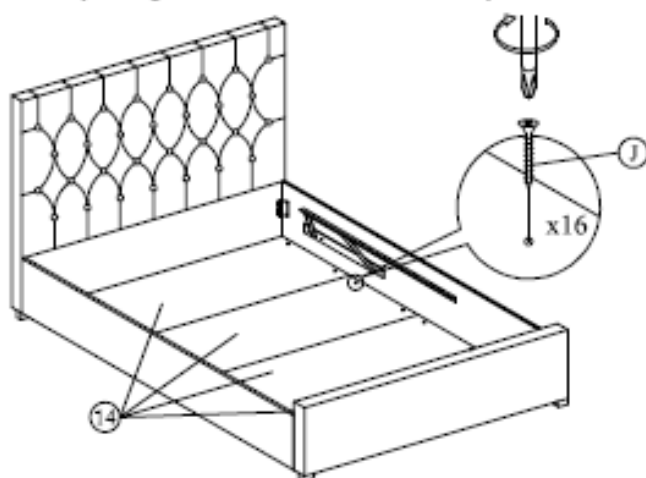


Step 7: Insert the centre rail (5) to the headend (1) and footend (2) and secure using hardware part A and K.  
**DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

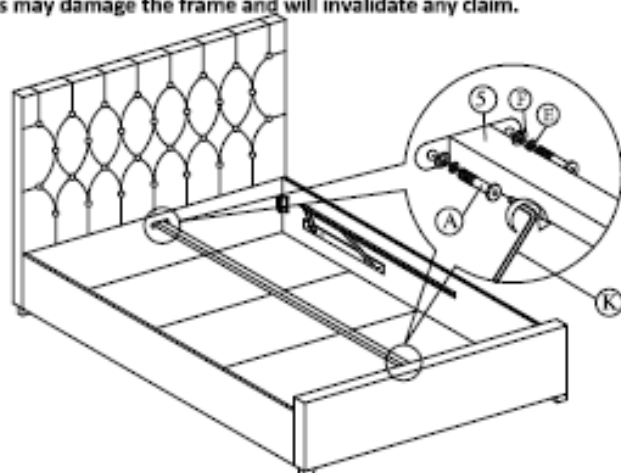

Step 8: Unscrew the Pre-attached hex-nut of gas spring (10) and attach it back again as shown. Please fully tighten the nut, .  
**DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

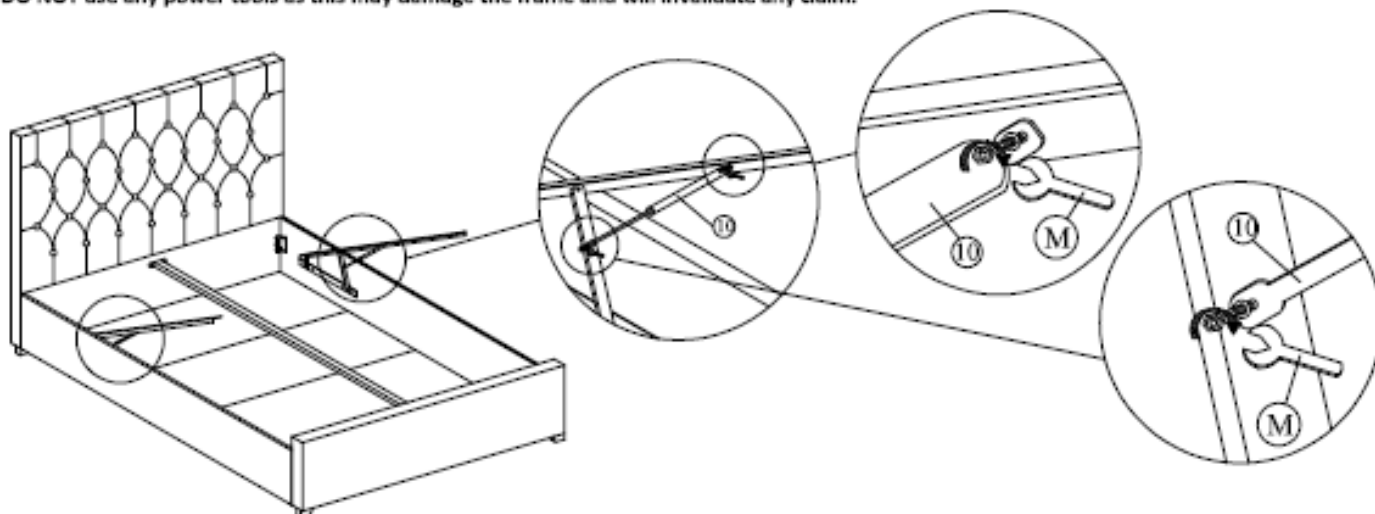


Step 9: Must place the wooden frame (12 & 13) in correct position (please follow the position as shown in diagram)  
**DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

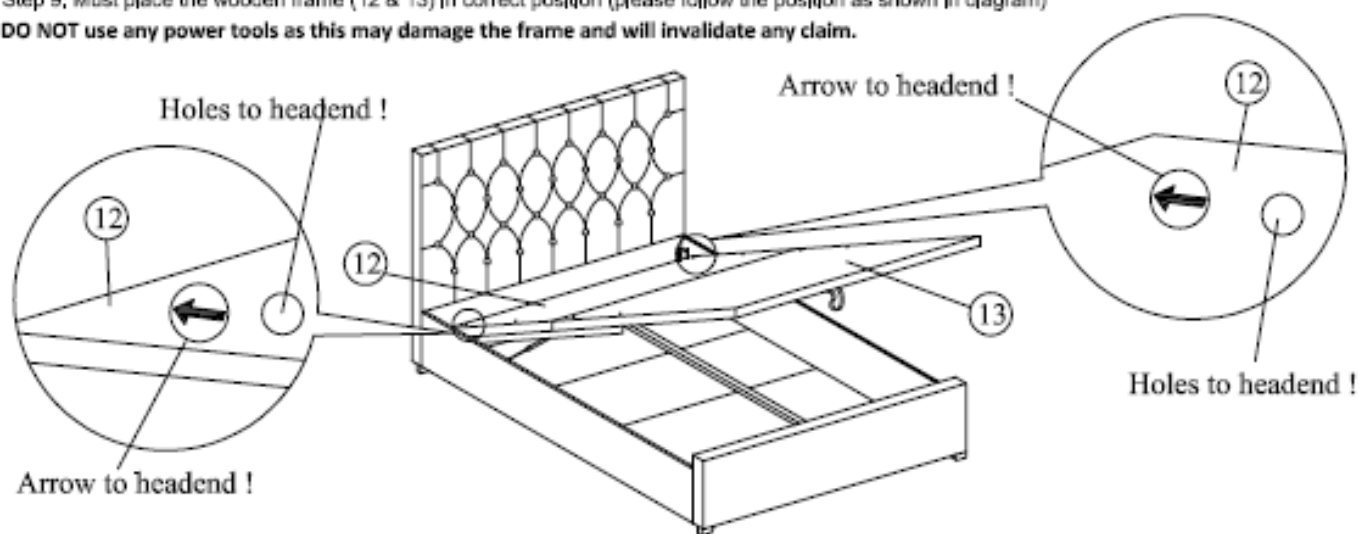

**WARNING:** Take care when assembling the base, assemble the ottoman as closed to its final position. The Ottoman has a powerful mechanism and after assembly should only be opened when the mattress is in place.




Step 10: Assembly the wooden frame (12) and wooden frame (13) to the bracket and tighten all the fitting accordingly .  
**DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

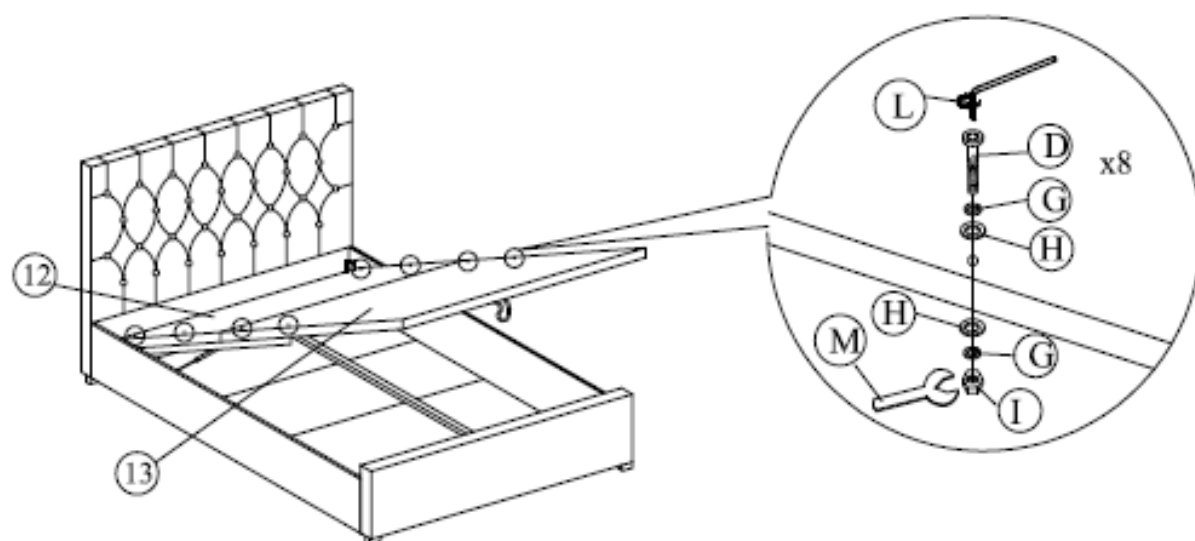


Step 11: Attach the wooden frame bracket (11) to the wooden frame using hardware parts J and a screwdriver (not provided).  
**DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

Please follow the marking and attach the bracket accordingly

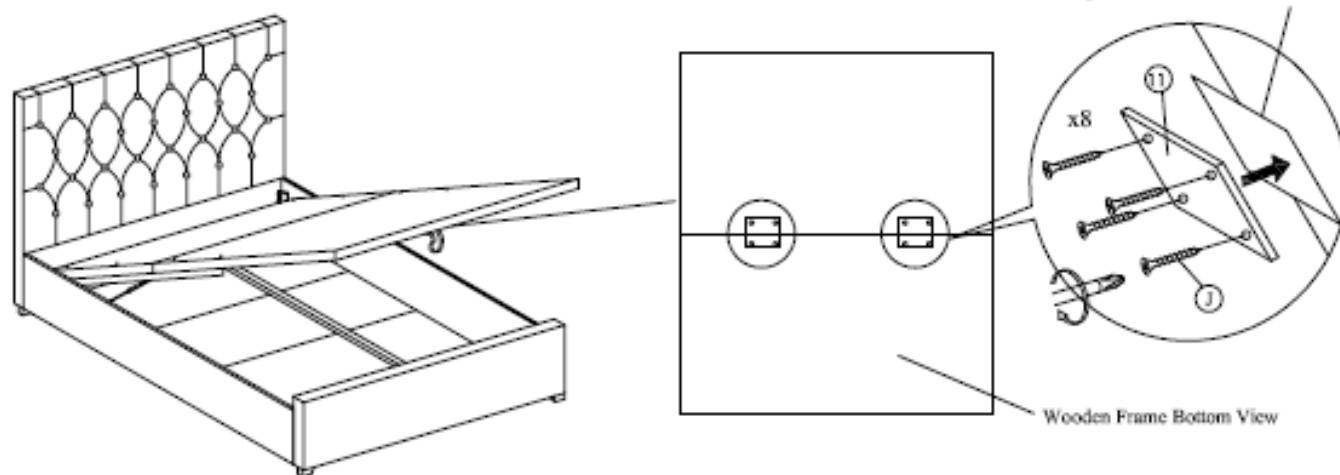

Step 12: Please use the safety lock for safety purpose.

**DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

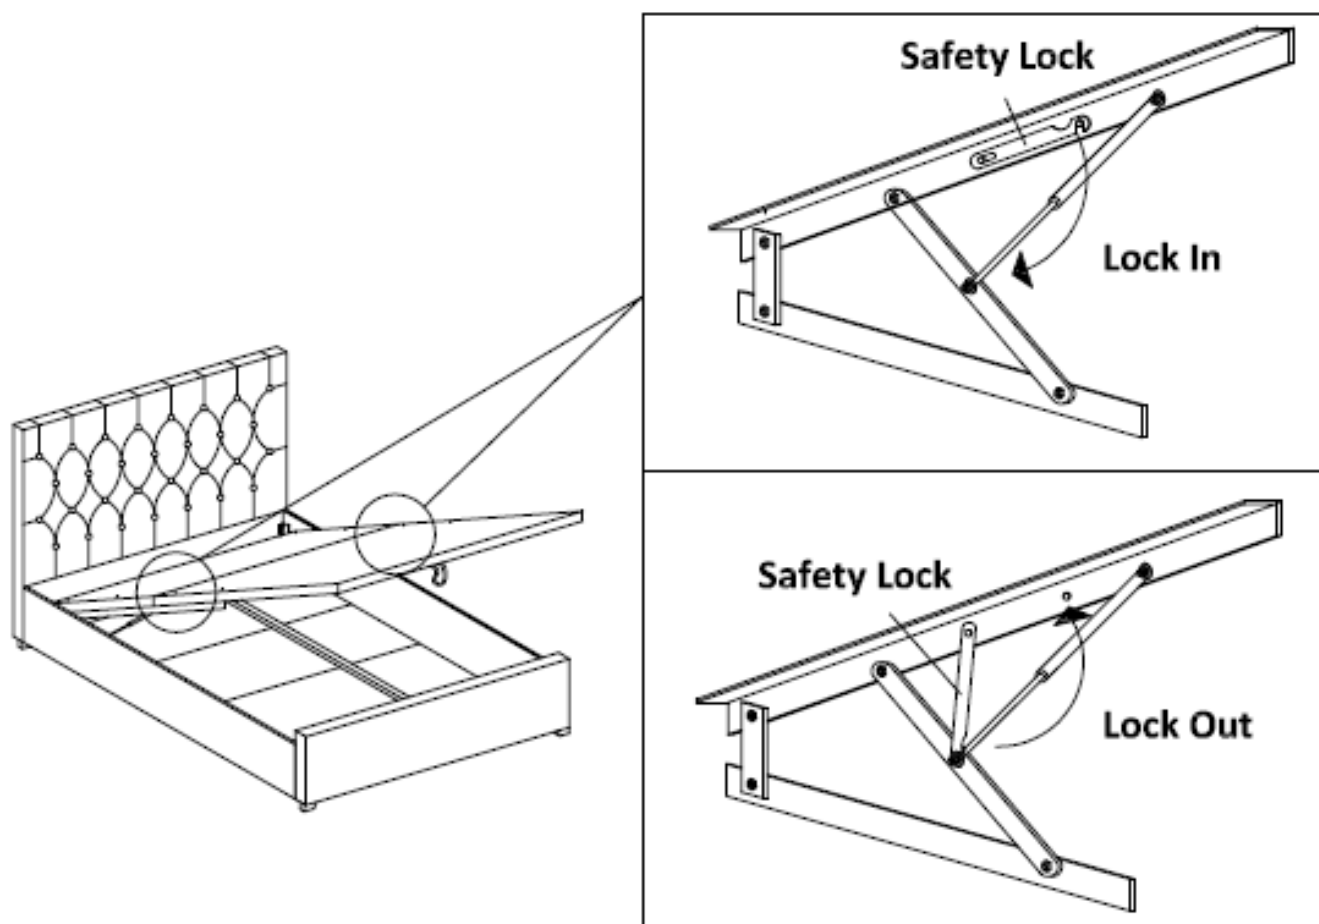



[www.happybeds.co.uk](http://www.happybeds.co.uk)

## Important for Ottoman and other gas lift beds

**Please follow these final steps to ensure the best experience with your new bed**

- Please ensure the pistons are fitted to the bed frame.
- Please place the mattress on top of the bed frame.
- Standing at the foot of the frame (looking at the headboard) open the base and then press quite forcefully down on the mattress – please do not attempt to do this without the mattress being in place.
- Please do not pull on the strap handles.
- Please note as the pistons are full of gas – you will need to press heavily to release the compressed gas.
- Once done the pistons should start operating as normal.



Please dispose of all packaging safely.

## General Care & Maintenance

Wipe clean with a slightly damp cloth.  
Avoid the use of all household cleaners and abrasives.

Periodically check all screw & fixings to ensure they are secure.

When moving your product, carefully lift into place. Never drag or push the product across the floor as this will cause damage to the joints. If the product is used on hard flooring, such as wood or laminated floor, you must place some protection under the legs to stop the product from moving. If this is not adhered to, it could result in failure to the product that will invalidate the warranty.

For more information on cleaning and product care visit:  
<https://www.happybeds.co.uk/help-and-advice>

## Notes

In the unlikely event that you have problems putting this product together or have damaged or missing parts, please contact us by visiting:  
<https://www.happybeds.co.uk/customer-service>