

Assembly Instructions

Important before assembly:

Read these instructions carefully before assembling or using the product.

Please check the contents of the boxes before attempting to assemble this product. The instructions will have a checklist of parts and fittings.

Assemble the product as close to its intended final location/room as possible.

Health & Safety:

This product or some parts of this product will be heavy. Please use an assistant when lifting.

Please keep small parts out of reach of children. Always use on a level, even surface. DO NOT jump on the product or any of its parts. DO NOT use this product if any parts are missing, damaged or worn. DO NOT use this product unless all fixings are secured.

Further instructions are on the following pages.

Please keep these instructions for future reference.



This product or some parts of this product will be heavy. Please use an assistant when lifting.



Never drag or push the pieces across a hard or stone floor as this will cause damage to the joints. Use a carpet or a rug for extra care.



If you have problems assembling or have damaged or missing pieces, please contact our customer services (details at the back of these instructions)



www.happybeds.co.uk

Health & Safety:

This product or some parts of this product will be heavy. Please use an assistant when lifting.

Please keep small parts out of reach of children.

Always use on a level, even surface.

DO NOT jump on the product or any of its parts.

DO NOT use this product if any parts are missing, damaged or worn.

DO NOT use this product unless all fixings are secured.

Please keep these instructions for future reference.

Important for Ottoman and other gas lift beds

Note:

The gas lifts are fully extended during shipment for safety. After assembly a firm downward push will be required to overcome any resistance in the gas lifts as these may initially stick. We suggest placing a mattress on top of the bed base to aid this and also test the operation of your new lift-up bed by lifting and pushing down the bed base a few times to free off the system.

Do NOT operate the lift-up mechanism without the mattress placed on the base.

The lift mechanism provides assistance with the lift of the mattress fitted to the base. It does not lift the mattress for you. The system has been designed to effectively lift the base system fitted with a variety of mattress weights and combinations of depths.

The gas cylinders fitted to the system may be stiff when first used or if the system has not been operated for a period of time.

If provided, use the strap handles to lift up the mattress base using two hands. Pull the mattress base down using two hands equally spaced from the centre of the mattress base. DO NOT pull down on one side of the base only as this is likely to damage the base system with potential failure of the mattress base system and lift mechanism.

Caution:

Do NOT allow children to operate the lift mechanism. Do NOT allow children near the lift base when operating the mechanism. Do NOT allow children in the area of the internal storage base. Keep hands clear of the mechanism when operating the base system. Do NOT stand inside the bed or the internal storage base. Do NOT overload the internal storage base.



www.happybeds.co.uk


@happybeds

Happy beds™


www.happybeds.co.uk


| No | Part List | Qty | Box |
|----|---|------|-----|
| 1 | Headboard | 1 pc | 1 |
| 2 | LH wing | 1 pc | 3 |
| 3 | RH wing | 1 pc | 3 |
| 4 | Footboard | 1 pc | 3 |
| 5 | Side rail - LH | 1 pc | 2 |
| 6 | Side rail - RH | 1 pc | 2 |
| 7 | Metal slat frame for Double and King Size | 1 pc | 3 |
| 8 | "U" shaped cross bar | 1 pc | 3 |


| No | Part List | Qty | Box |
|----|--------------------------------------|-------|-----|
| 9 | Angled corner brackets | 2 pcs | 3 |
| 10 | Mattress stoppers | 2 pcs | 3 |
| 11 | Fabric hand strap | 1 pc | 3 |
| 12 | Base Fabric Cover | 1 pc | 3 |
| 13 | Lift mechanism - LH | 1 pc | 3 |
| 14 | Lift mechanism - RH | 1 pc | 3 |
| 15 | Gas lift pistons | 2 Pcs | 3 |
| 16 | Metal slat frame for Super King Size | 1 pc | 3 |
| 17 | Legs | 4 pcs | 3 |

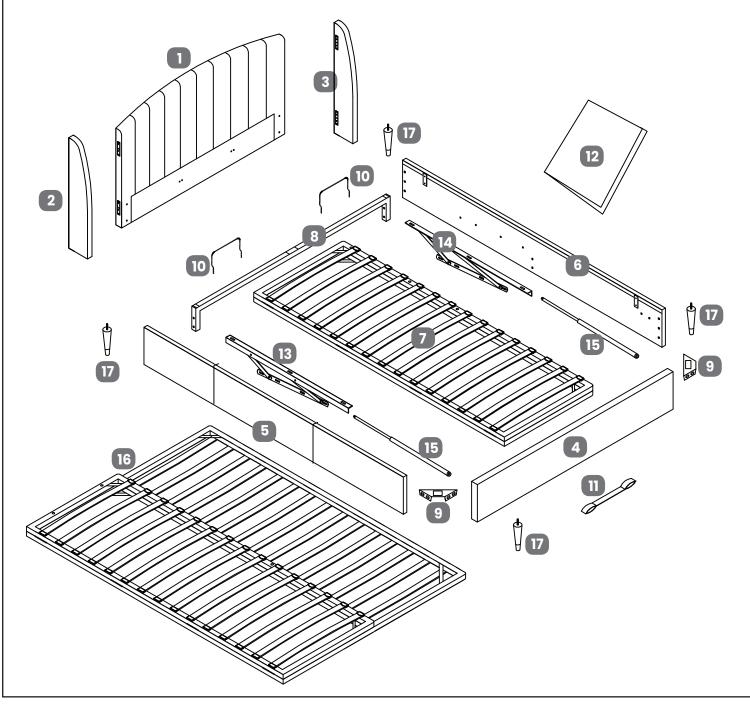



| | HARDWA | | ED FOR | BED A | SSEMBLY (PACK A) | | | | |
|---|---|------------------|---------|-------|--|--|--|--|--|
| No | Hardware List | Qty | Box | No | Hardware List Qty Box | | | | |
| А | Bolts (M8x45mm) for fitting "U" shape cross bar to side rail (5&6) | 4 pcs | 3 | I | Angle bracket - RH footend | | | | |
| С | Bolts (M8x25mm) for Double & King Super King | 32 pcs 36 pcs | 3 | L | Angle bracket - LH headend | | | | |
| D | "L" shape bracket Double & King Super King Double | 2 pcs 4 pcs | 3 | R | Angle bracket - RH headend | | | | |
| E | Spring washer for M6 bolts& KingSuper King | | 3 | N | Leg Locking Washer 4 pcs 3 | | | | |
| F | Flat washer for M8 boltsDouble & King Super King | 36 pcs 40 pcs | 3 | Р | Allen key for M8 bolts 1 pc 3 | | | | |
| Н | Angle bracket - LH footend | 1рс | 3 | | | | | | |
| | HARDWARE NEE | | R METAL | SLAT | FRAME ASSEMBLY (PACK B) | | | | |
| No | Hardware List | Qty | Box | No | Hardware List Qty Box | | | | |
| В | Bolts (M8x35mm) for fitting lift mechanisms | 8 pcs | 3 | J | Plastic spacer for lift mechanism (13 & 14) 8 pcs 3 | | | | |
| E | Spring washer for M6 bolts | 18 pcs | 3 | к | Metal connection plate 2 pcs 3 | | | | |
| F | Flat washer for M8 bolts | 24 pcs | 3 | м | Flanged M8 lock-nuts I0 pcs 3 | | | | |
| G | Bolts (M8x50mm) for fitting metal slat frame to lift mechanism (13&14)6 pcs3QSpanner for flanged M8 lock-nuts1 pc3 | | | | | | | | |
| Ste | C Bolts (M8x25mm) | 6) | | 8 pc | H Angle bracket - LH footend | | | | |
| | E Spring Washer for M8 bolts | | | 8 pc | es I Angle bracket - RH footend 1 pc | | | | |
| | F Flat Washer for M8 bolts | | 9 | 8 pc | L Angle bracket - LH headend | | | | |
| | R | | | | R Angle bracket - RH headend | | | | |
| Image: Solution of the second seco | | | | | | | | | |
| | | | | | | | | | |

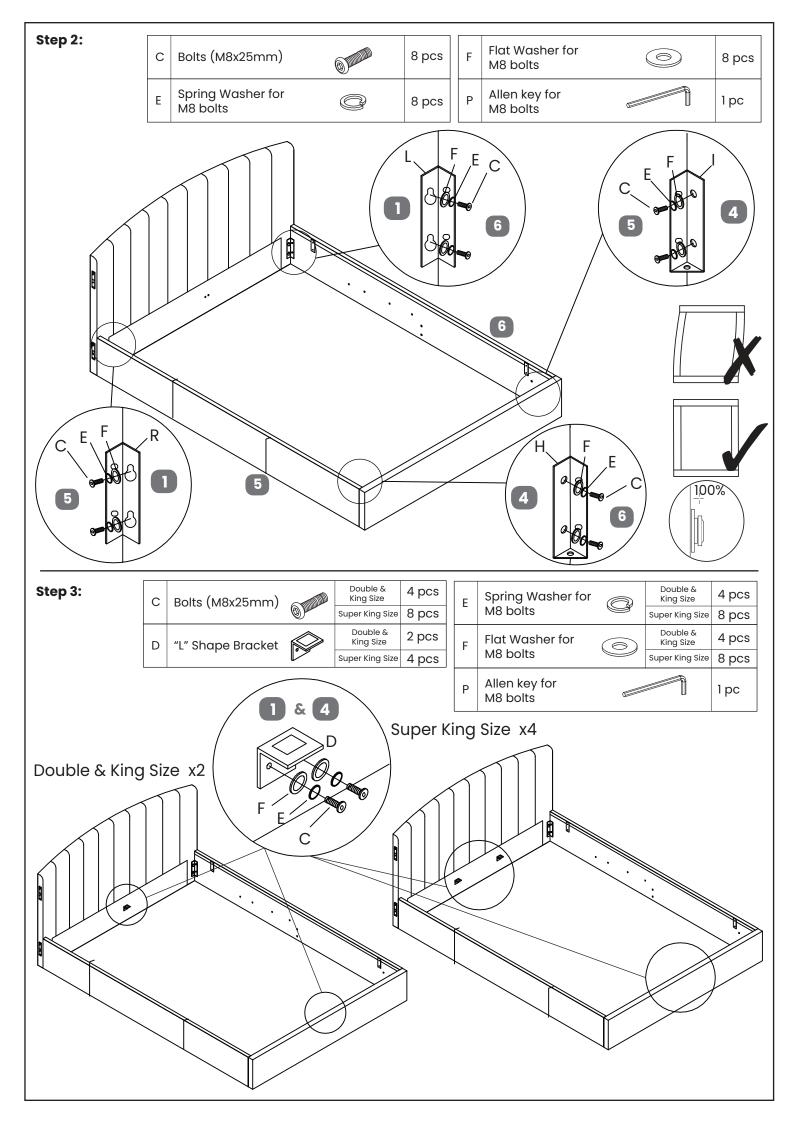

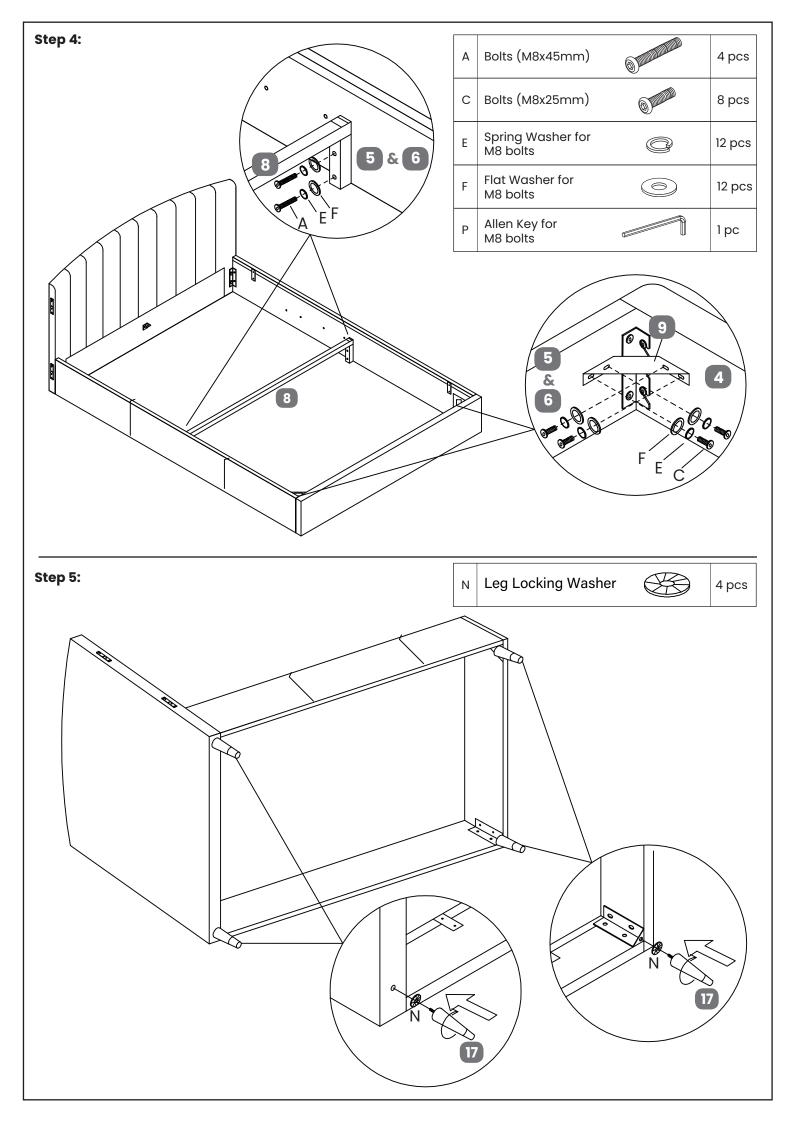

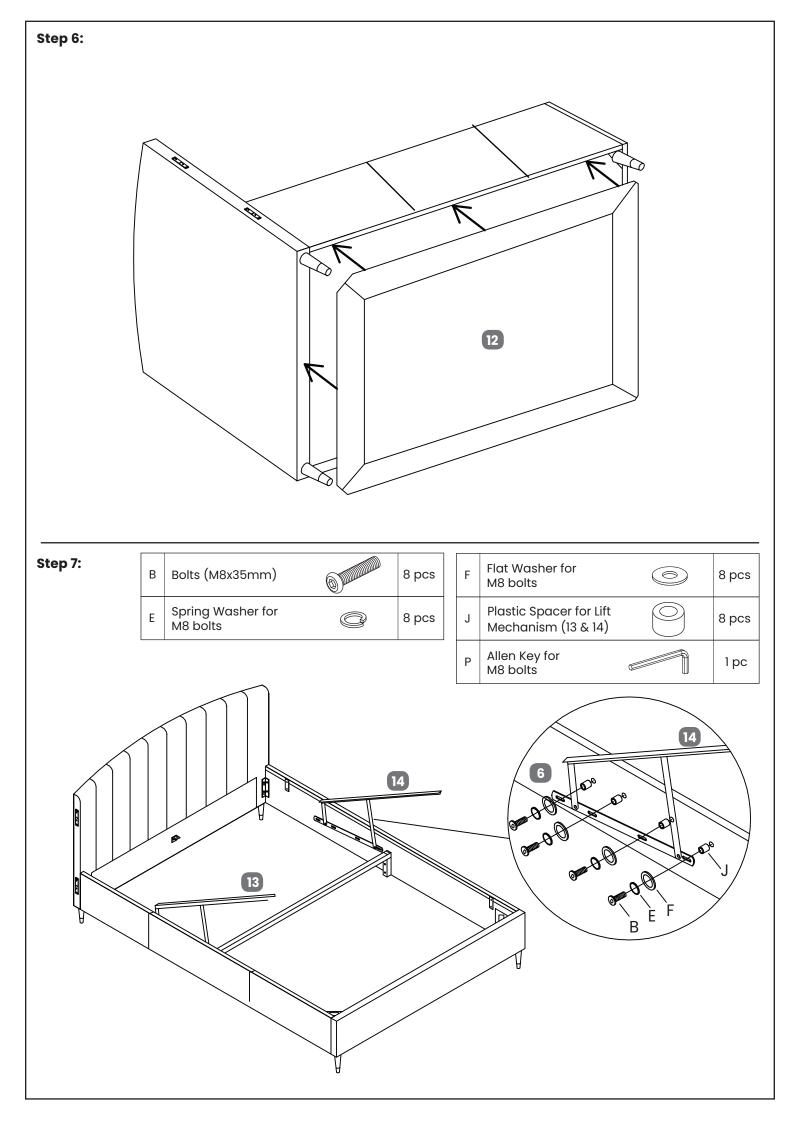

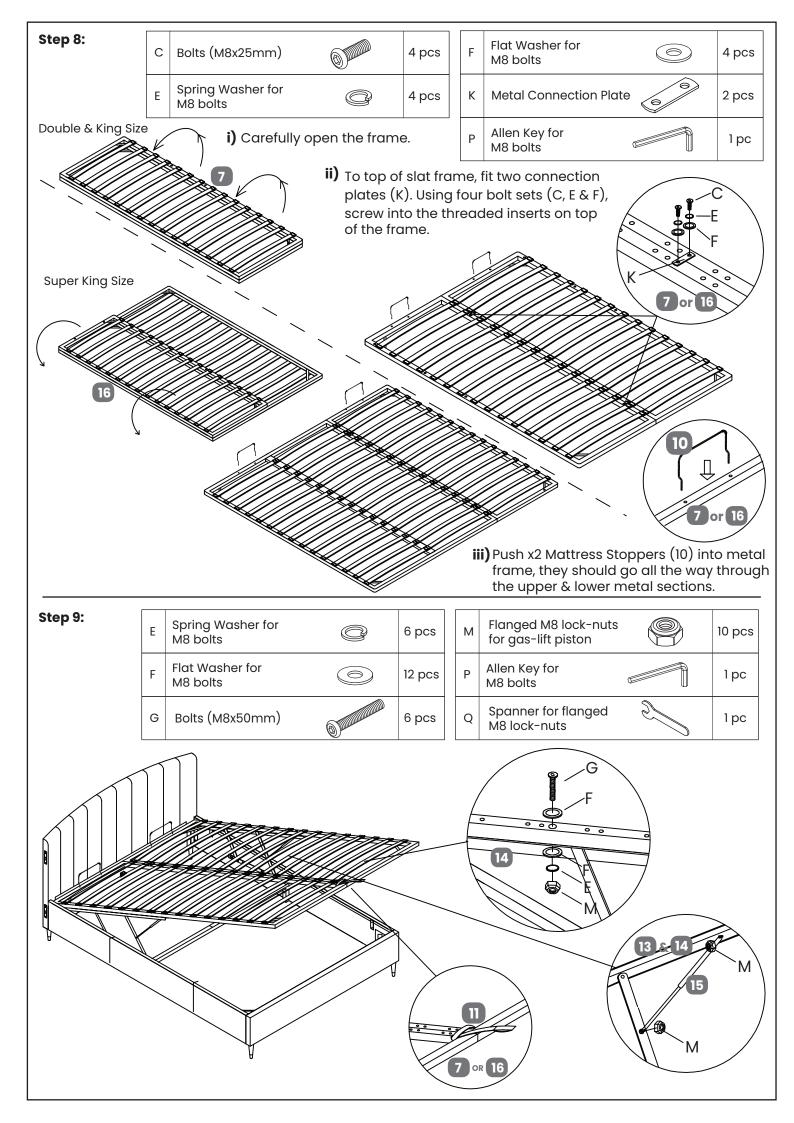

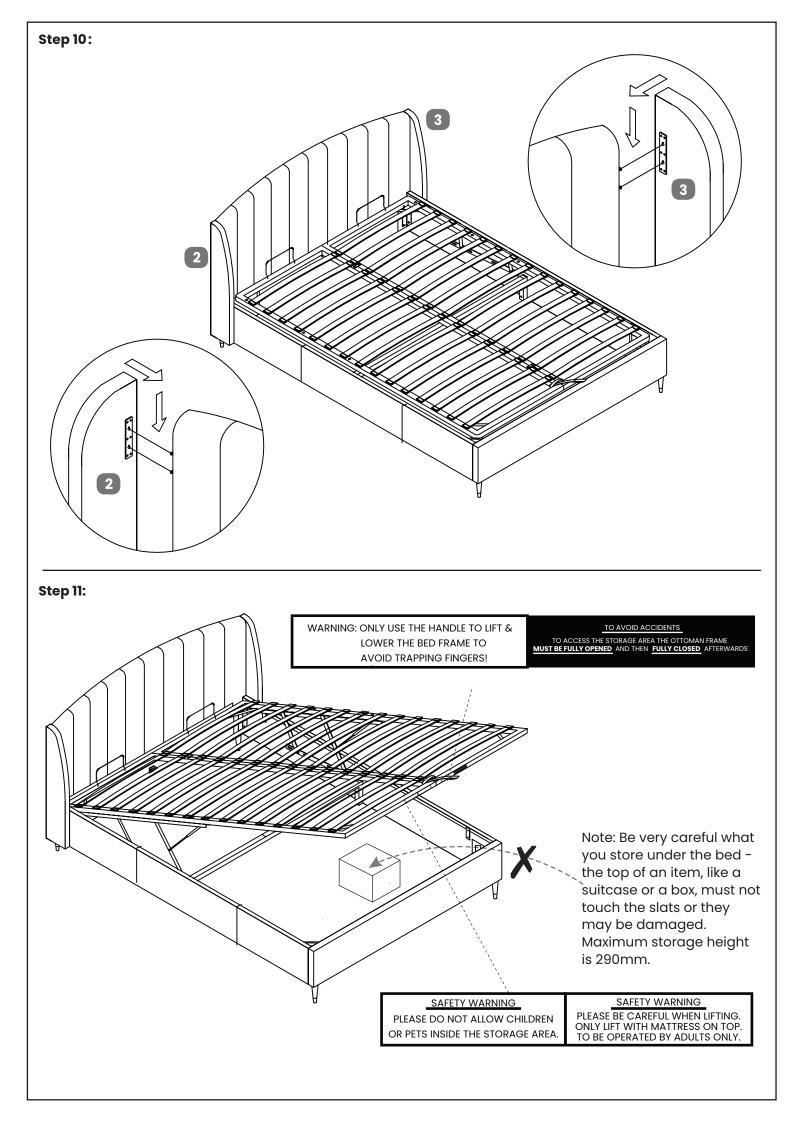

Happy beds[™]

www.happybeds.co.uk

Important for Ottoman and other gas lift beds

Please follow these final steps to ensure the best experience with your new bed

- Please ensure the pistons are fitted to the bed frame.
- Please place the mattress on top of the bed frame.
- Standing at the foot of the frame (looking at the headboard) open the base and the press quite forcefully down on the mattress please do not attempt to do this without the mattress being in place.
- Please do not pull on the strap handles.
- Please note as the pistons are full of gas you will need to press heavily to release the compressed gas.
- Once done the pistons should start operating as normal.



@happybeds

Please dispose of all packaging safely.

General Care & Maintenance

Wipe clean with a slightly damp cloth. Avoid the use of all household cleaners and abrasives.

Periodically check all screw & fixings to ensure they are secure.

When moving your product, carefully lift into place. Never drag or push the product across the floor as this will cause damage to the joints. If the product is used on hard flooring, such as wood or laminated floor, you must place some protection under the legs to stop the product from moving. If this is not adhered to, it could result in failure to the product that will invalidate the warranty.

For more information on cleaning and product care visit: https://www.happybeds.co.uk/help-and-advice

Notes

In the unlikely event that you have problems putting this product together or have damaged or missing parts, please contact us by visiting: https://www.happybeds.co.uk/customer-service

