

Assembly Instructions

Allendale Ottoman Storage Bed 4ft6



Important before assembly:

Read these instructions carefully before assembling or using the product.

Please check the contents of the boxes before attempting to assemble this product. The instructions will have a checklist of parts and fittings.

It would be sensible to lay a rug or a carpet on the floor where you intend to assemble the product, to void scratches and damaging the product or the floor.

Assemble the product as close to its intended final location/room as possible.

Do NOT use any power tools as this may damage the frame.

Health & Safety:

This product or some parts of this product will be heavy. Please use an assistant when lifting.

DO NOT jump on the product or any of its parts.


DO NOT use this product if any parts are missing, damaged or worn.

DO NOT use this product unless all fixings are secured.

Please keep small parts out of reach of children.


Always use on a level, even surface.


Please keep these instructions for future reference.

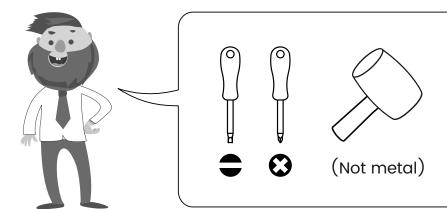


These tools are not necessary, but may help to assemble certain parts of the product.


Do NOT use any power tools as this may damage the frame.

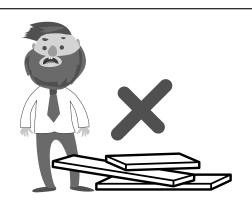

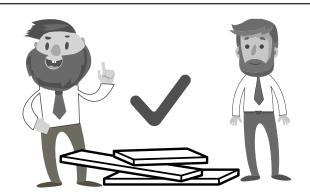



This product or some parts of this product will be heavy. Please use an assistant when lifting.

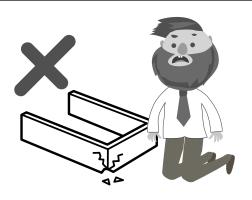

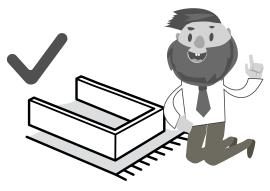


Never drag or push the pieces across a hard or stone floor as this will cause damage to the joints. Use a carpet or a rug for extra care.

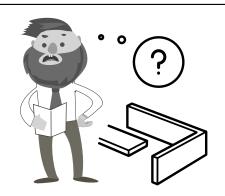


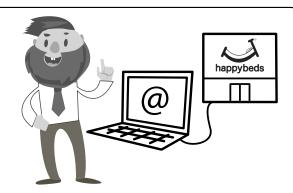

If you have problems assembling or have damaged or missing pieces, please contact us by visiting:

https://www.happybeds.co.uk/customer-service

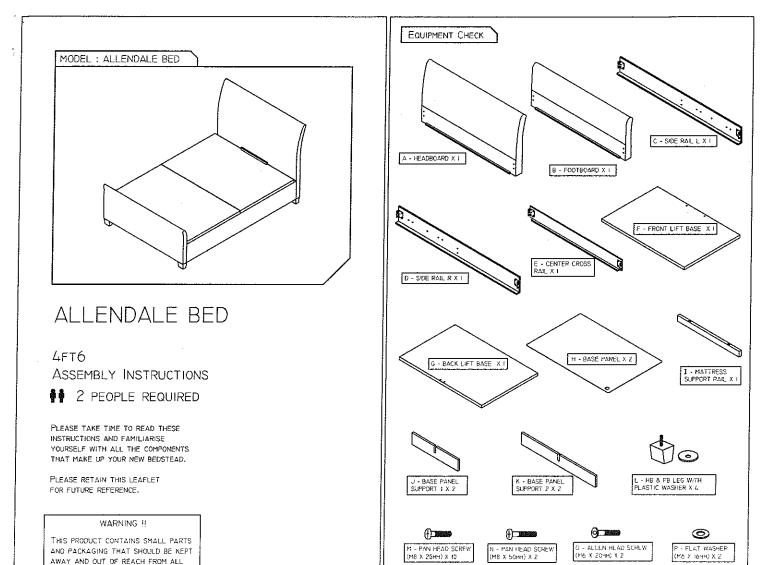



8

W- STRAP HANDLE X I

PAN HEAD SCREW X 16mm) X 4

©

- B. Following installation of the mechanism lift / pull the base up and down a few times to free off the system the gas cylinders fitted to the system may be stiff when first used or if the system has not been operated for a period of time . The mattress must be fitted to the base.
- C. Use the strap handle to lift up the mattress base using two hands Pull the mattress base down using two hands equally spaced from the centre of the mattress base. DO NOT pull down on one side of the base only as this is likely to damage the base system with potential failure of the mattress base system and lift mechanism. Do not operate the lift up mechanism without the mattress fitted to the base.

CAUTION:

CHILDREN.

AA - LIFT UP MECHANISM (LEFT) X I

Do not allow children to operate the lift Mechanism.

Do not allow children near the lift base when operating the Mechanism.

AB - LIFT UP MECHANISM (RIGHT) X I

Do not allow children in the area of the internal storage base.

Keep hands clear of the mechanism when operating the base system.


Do not stand inside the bed / on the internal storage base.

Do not overload the internal storage base.

Maintain the storage base panel supports in the centre position below each storage base.

1 - ATTACHING FOOT TO HEADBOARD & FOOTBOARD


CAREFULLY UNPACK ALL ITEMS FROM THE CARTONS, REMOVE THE PROTECTIVE PLASTIC CAP FROM THE LEG BOLT AND INSERT INTO THE HEADBOARD AND FOOTBOARD AS SHOWN.

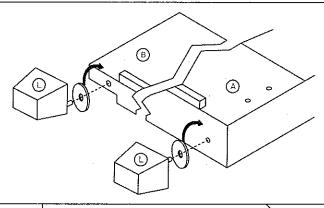

2 - ATTACHING SIDE RAIL TO HEADBOARD & FOOTBOARD

HOOK SIDE RAIL BRACKET OVER BOLTS AND SCREW BOLTS TIGHTLY IN WITH THE SCREWDRIVER PROVIDED. NOTE: TO INCREASE THE LONGEVITY, TIGHTEN BOLTS

REGULARLY.

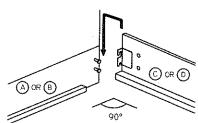


3 - ATTACHING GAS CYLINDER TO THE LIFT UP MECHANISM

FIX THE GAS CYLINDER (S) TO THE LIFT UP MECHANISM WITH THE NYLON NUT (R) USING SPANNER PROVIDED.

REPEAT THE SAME STEP FOR THE OTHER SIDE.


NOTE: GAS CYLINDER 1000N DO NOT OVER TIGHTEN THE NYLON NUT.

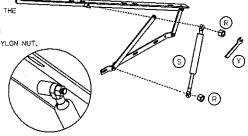

4 - ATTACHING LIFT UP MECHANISM TO THE SIDE RAIL


FIX THE LIFT UP MECHANISM TO THE SIDE RAIL WITH THE FLAT WASHER (Q) AND SCREW (M) USING SCREWDRIVER PROVIDE.

REPEAT THIS STEP FOR THE OTHER SIDE RAIL ALSO.

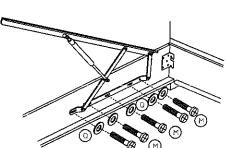


5 - ATTACHING MATTRESS SUPPORT RAIL TO FRONT LIFT BASE

FIX THE MATTRESS SUPPORT RAIL (I) TO THE FRONT LIFT BASE (F) WITH SCREW (N) USING SCREW DRIVER PROVIDE.

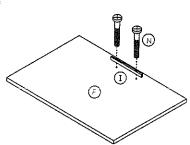

6 - ATTACHING STRAP HANDLE TO BACK LIFT BASE

FIX THE STRAP HANDLE (W) TO THE BACK LIFT BASE (G) WITH FLAT WASHER (P) AND SCREW (O) USING SCREW DRIVER PROVIDED.

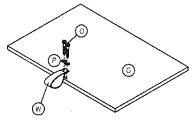

7 - REMOVE ALL SCREW FROM FRONT & BACK LIFT BASE


REMOVE ALL STREW PROVI & BACK LIFT BASE

REMOVE ALL THE ALLEN HEAD SCREW
AND FLAT WASHER FROM THE FRONT
LIFT BASE AND BACK LIFT BASE
USING ALLEN KEY, FOR NEXT STEP TO
ASSEMBLE THE LIFT UP MECHANISM.

8 - ATTACHING FRONT LIFT BASE TO LIFT UP MECHANISM

STEP


(VIEW FROM UNDERNEATH THE BED)
FIRST PUT THE BASE (F) ON THE TOP OF MECHANISM
(AA) AND (AB) THEN USE ALLEN HEAD SCREW AND
FLAT WASHER TO SCREW THE FIRST HOLE LOOSELY FOR
SAFETY AND TO PREVENT THE LIFT BASE FROM
DROPPING DOWN.




STEP 2

(VIEW FROM UNDERNEATH THE BED)
USE ALLEN HEAD SCREW
AND FLAT WASHER TO TIGHTEN THE
FIRST ROUND LOCATING HOLE AS
SHOWN, AFTER THIS FULLY TIGHTEN
ALL OTHERS SCREWS AS SHOWN,









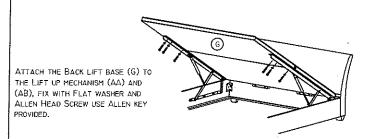


10 - ATTACHING METAL PLATE TO BOTTOM OF LIFT BASE

ATTACH THE METAL PLATE (U) TO THE BOTTOM OF LIFT BASE (F) & (G), FIX WITH RATTAN SCREW (V) USING SCREWDRIVER PROVIDE AS SHOWN.




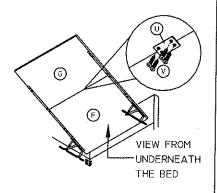

II - ATTACHING BASE PANEL SUPPORT 1 & BASE PANEL SUPPORT 2

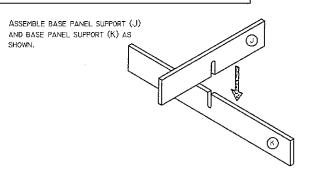


12 - ATTACHING BASE PANEL SUPPORT TO THE BED

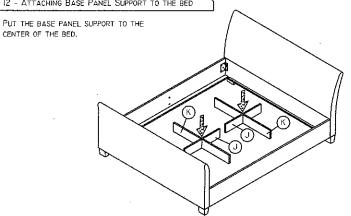

13 -ATTACHING BASE PANEL TO THE BED


SLIDE THE BASE PANEL (H) TO THE BED AS SHOWN.

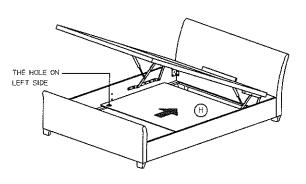

14 - ATTACHING CENTER CROSS RAIL TO SIDE RAIL


FIX THE SCREW (T) TO THE CENTER OF THE SIDE RAIL (C) AND (D) USING SCREWDRIVER PROVIDE. HOOK CENTER CROSS RAIL (E) BRACKET OVER BOLTS AND SCREW BOLTS TIGHTLY IN WITH THE SCREWDRIVER PROVIDED.

NOTE : TO INCREASE THE LONGEVITY, TIGHTEN BOLTS REGULARLY.

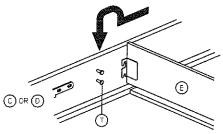

15 -ATTACHING BASE PANEL TO THE BED

PUT THE BASE PANEL (H) TO THE BED AS SHOWN.

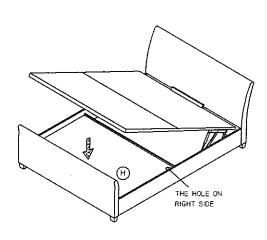


16 - FINAL TOUCH

MAKESURE THE BED ALL SQUARE BEFORE YOU CLOSING THE LIFT BASE.

THE MATTRESS MUST BE FITTED TO THE BASE.

DO NOT OPERATE THE LIFT UP MECHANISM WITHOUT THE MATTRESS FITTED TO THE BASE.

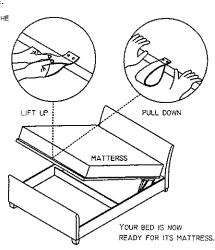

PLEASE HEED THE FOLLOWING INSTRUCTIONS.

- KEEF AWAY FROM DIRECT SUNLIGHT TO AVOID DISCOLOURATION.
- DO NOT DRAG THE BED ACPUSS THE FLOOR WHEN FOSITIONING OR MOVING WHILST CLEANING.
- 3. WIFE CLEAN WITH A DAMP CLOTH.
- . TIGHTEN ALL SCREWS AT REGULAR INTERVALS, TO AVOID DAMAGE TO THE FRAME.
- 5. ENJOY YOUR PRODUCT.

Please dispose of all packaging safely.

General Care & Maintenance

Wipe clean with a slightly damp cloth. Avoid the use of all household cleaners and abrasives.

Periodically check all screw & fixings to ensure they are secure.

When moving your product, carefully lift into place. Never drag or push the pieces across the floor as this will cause damage to the joints and could result in failure to the product that will invalidate the warranty.

For more information on cleaning and product care visit: https://www.happybeds.co.uk/help-and-advice

Notes

We've tried to make this product as easy to assemble as possible. In the unlikely event that you have problems putting it together or have damaged or missing pieces, please contact us by visiting:

https://www.happybeds.co.uk/customer-service



