


# **Assembly Instructions**

# Allendale Ottoman Storage Bed 5ft & 6ft

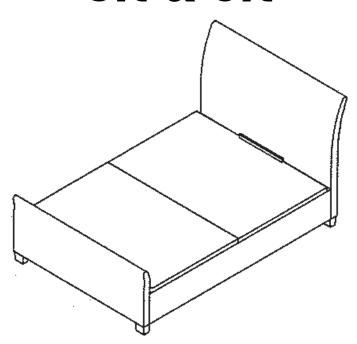

## Important before assembly:

Read these instructions carefully before assembling or using the product.

Please check the contents of the boxes before attempting to assemble this product. The instructions will have a checklist of parts and fittings.

It would be sensible to lay a rug or a carpet on the floor where you intend to assemble the product, to void scratches and damaging the product or the floor.

Assemble the product as close to its intended final location/room as possible.

Do NOT use any power tools as this may damage the frame.

## Health & Safety:

This product or some parts of this product will be heavy. Please use an assistant when lifting.

DO NOT jump on the product or any of its parts.


DO NOT use this product if any parts are missing, damaged or worn.

DO NOT use this product unless all fixings are secured.

Please keep small parts out of reach of children.


Always use on a level, even surface.


Please keep these instructions for future reference.

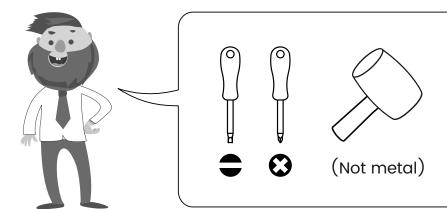


These tools are not necessary, but may help to assemble certain parts of the product.


Do NOT use any power tools as this may damage the frame.

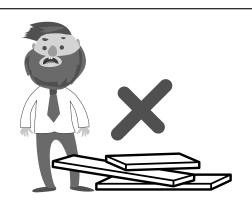

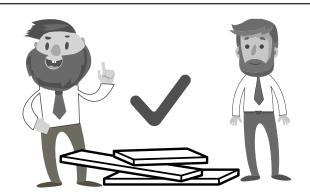



This product or some parts of this product will be heavy. Please use an assistant when lifting.

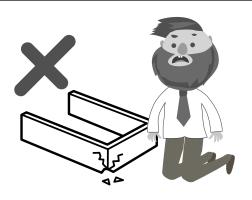

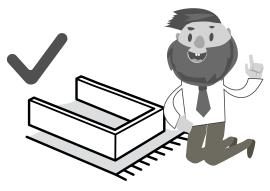


Never drag or push the pieces across a hard or stone floor as this will cause damage to the joints. Use a carpet or a rug for extra care.

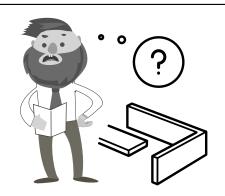


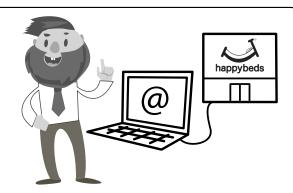

If you have problems assembling or have damaged or missing pieces, please contact us by visiting:

https://www.happybeds.co.uk/customer-service

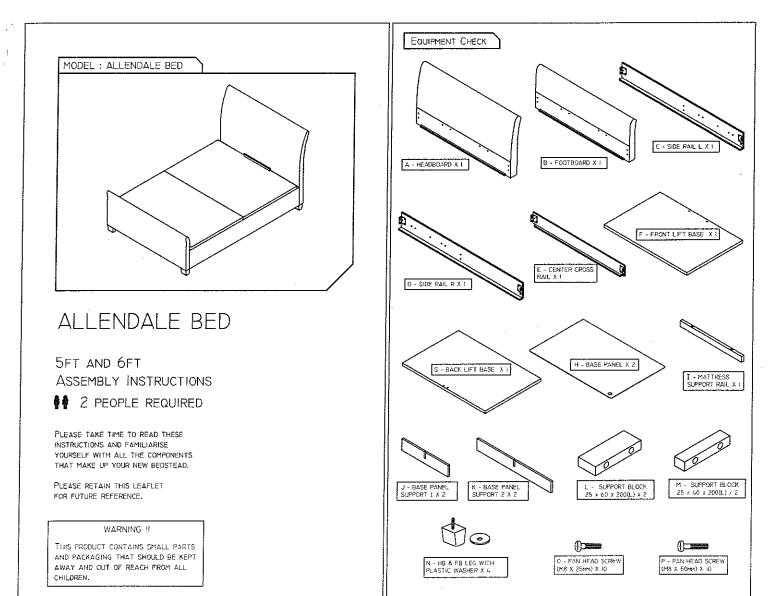



Q - ALLEN HEAD SCREW (M6 X 20MM) X 2

GAS CYLINDER X

9

FLAT WASHER

v - PAN HEAD SCREI (M8 X 16mm) У 4 - FLAT WASHER

- NYLON

RATTAN SCREV X 32MM) X 8

- A. This Lift Mechanism provide assistance with the lift of the mattress fitted to the base it does not lift the mattress for you.

  The system has been designed to effectively lift the base system fitted with a variety of mattress weights and combinations of depth.

  Depending on the combination of mattress weight and depth determines the degree of assistance provided by the mechanism.
- B. Following installation of the mechanism lift / pull the base up and down a few times to free off the system the gas cylinders fitted to the system may be stiff when first used or if the system has not been operated for a period of time . The mattress must be fitted to the base.
- C. Use the strap handle to lift up the mattress base using two hands Pull the mattress base down using two hands equally spaced from the centre of the mattress base. DO NOT pull down on one side of the base only as this is likely to damage the base system with potential failure of the mattress base system and lift mechanism. Do not operate the lift up mechanism without the mattress fitted to the base.

#### CAUTION:

Do not allow children to operate the lift Mechanism.

Do not allow children near the lift base when operating the Mechanism.

Do not allow children in the area of the internal storage base.

Keep hands clear of the mechanism when operating the base system.


Do not stand inside the bed / on the internal storage base.

Do not overload the internal storage base.

Maintain the storage base panel supports in the centre position below each storage base.

#### ! - ATTACHING FOOT TO HEADBOARD & FOOTBOARD


CAREFULLY UNPACK ALL ITEMS FROM THE CARTONS, REMOVE THE PROTECTIVE PLASTIC CAP FROM THE LEG BOLT AND INSERT INTO THE HEADBOARD AND FOOTBOARD AS SHOWN,

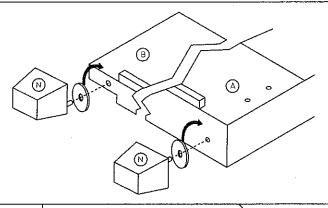

#### 2 - ATTACHING SIDE RAIL TO HEADBOARD & FOOTBOARD


HOOK SIDE RAIL BRACKET OVER BOLTS AND SCREW BOLTS TIGHTLY IN WITH THE SCREWDRIVER PROVIDED.

NOTE: TO INCREASE THE LONGEVITY, TIGHTEN BOLTS REGULARLY.

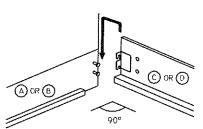

#### 3 - ATTACHING SUPPORT BLOCK(L) TO HEAD BOARD

ATTACH THE SUPPORT BLOCK (L) TO THE HEADBOARD (A), FIX WITH SCREW (P) USING SCREWDRIVER PROVIDE AS SHOWN.

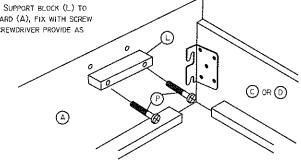

#### 4 - ATTACHING SUPPORT BLOCK(M) TO FOOT BOARD


ATTACH THE SUPPORT BLOCK (M) TO THE FOOTBOARD (B), FIX WITH SCREW (P) USING SCREWDRIVER PROVIDE AS SHOWN. (C) OR (D)

#### 5 - ATTACHING GAS CYLINDER TO THE LIFT UP MECHANISM

FIX THE GAS CYLINDER (U) TO THE LIFT UP MECHANISM WITH THE NYLON NUT (T) USING SPANNER PROVIDED.

REPEAT THE SAME STEP FOR THE OTHER SIDE.


NOTE: GAS CYLINDER 1200N-QUEEN BED GAS CYLINDER 1600N-KING BED DO NOT OVER TIGHTEN THE NYLON NUT

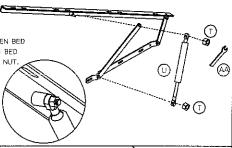

#### 6 - ATTACHING LIFT UP MECHANISM TO THE SIDE RAIL

FIX THE LIFT UP MECHANISM TO THE SIDE RAIL WITH THE FLAT WASHER (R) AND SCREW (O) USING SCREWDRIVER PROVIDE.


REPEAT THIS STEP FOR THE OTHER SIDE RAIL ALSO.

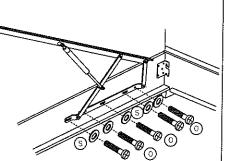

➂


#### 7 - ATTACHING MATTRESS SUPPORT RAIL TO FRONT LIFT BASE

FIX THE MATTRESS SUPPORT RAIL (I) TO THE FRONT LIFT BASE (F) WITH SCREW (P) USING SCREW DRIVER PROVIDE.

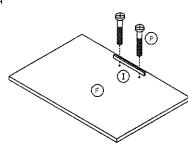


### 8 - ATTACHING STRAP HANDLE TO BACK LIFT BASE

FIX THE STRAP HANDLE (Y) TO THE BACK LIFT BASE (G) WITH FLAT WASHER (R) AND SCREW (Q) USING SCREW DRIVER PROVIDED.



#### 9 - REMOVE ALL SCREW FROM FRONT & BACK LIFT BASE

REMOVE ALL THE ALLEN HEAD SCREW AND FLAT WASHER FROM THE FRONT LIFT BASE AND BACK LIFT BASE USING ALLEN KEY, FOR NEXT STEP TO ASSEMBLE THE LIFT UP MECHANISM.

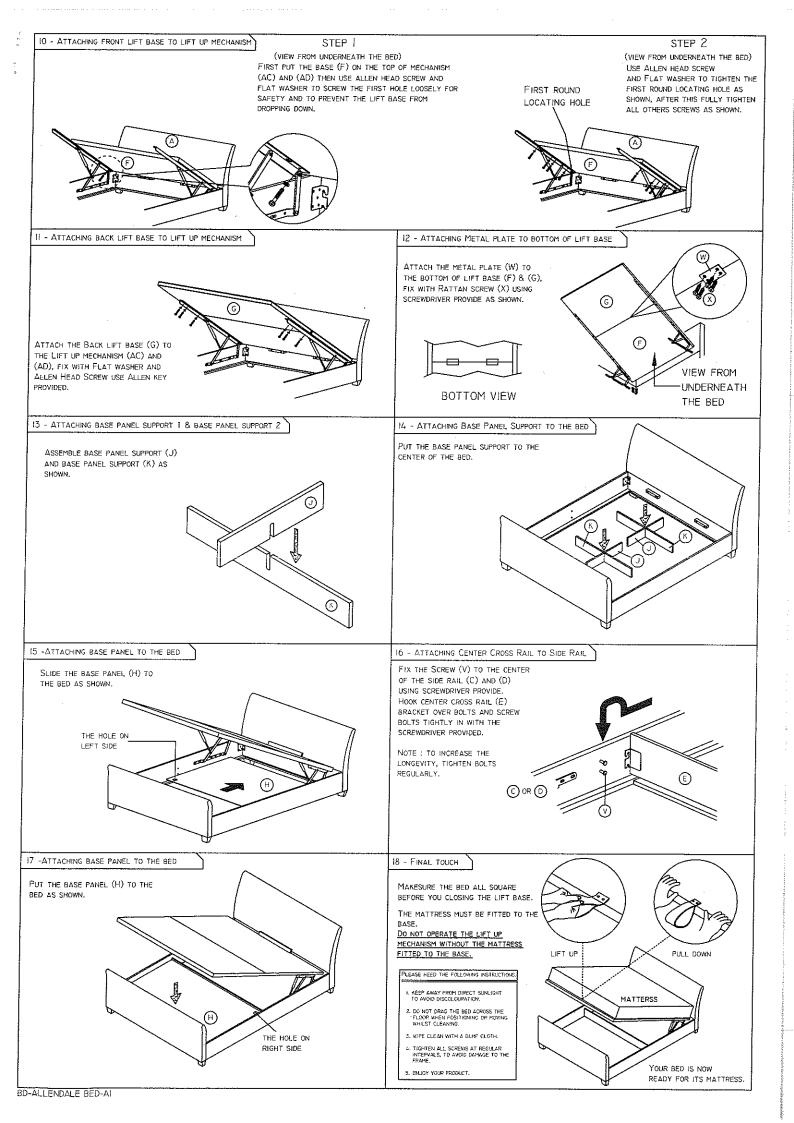

Please dispose of all packaging safely.

## **General Care & Maintenance**

Wipe clean with a slightly damp cloth. Avoid the use of all household cleaners and abrasives.

Periodically check all screw & fixings to ensure they are secure.

When moving your product, carefully lift into place. Never drag or push the pieces across the floor as this will cause damage to the joints and could result in failure to the product that will invalidate the warranty.

For more information on cleaning and product care visit: https://www.happybeds.co.uk/help-and-advice

## **Notes**

We've tried to make this product as easy to assemble as possible. In the unlikely event that you have problems putting it together or have damaged or missing pieces, please contact us by visiting:

https://www.happybeds.co.uk/customer-service



